

MINI MusicMan[®] * User Manual


The Declaration of Conformity for this device is under the Internet link: www.technaxx.de/ (in bottom bar "Konformitätserklärung"). Before using, read the user manual carefully.

Service phone No. for technical support: 01805 012643 (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free Email: support@technaxx.de

This device has a rechargeable battery. It must be fully charged before first use. WARNING: DO NOT TURN THE VOLUME TOO HIGH – HEARING LOSS MIGHT BE THE RESULT! NOTE: Charge the battery of the device every 2–3 month if it is not used!

- Mini speaker system for MP3, iPhone, iPad, iPod, Mobile phones, PC/Notebook
- USB & MicroSD up to 32GB & AUX/Line-IN
- Grill protection for the speaker cone
- Durable aluminium housing in 5 metallic colours

Key functions

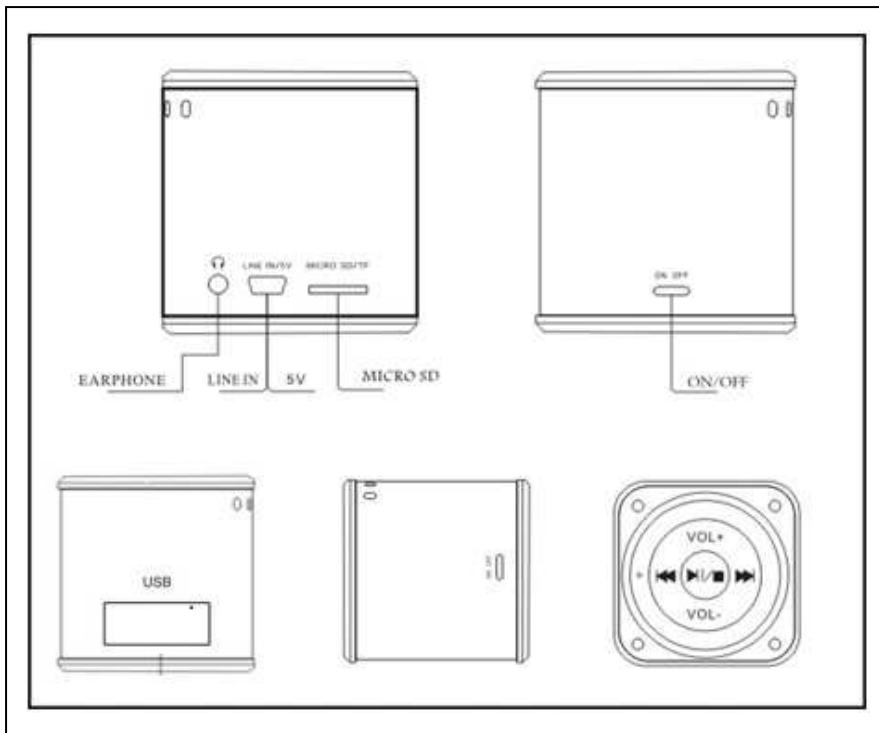

Key	Function
▶II/■	Play / Pause
VOL –	Volume down
VOL +	Volume up
◀◀	One back / Last music
▶▶	Next one / Next music

1x short press of ▶II/■ = device plays music; in Play mode: 1x short press of ▶II/■ = device goes to Pause mode; again 1x short press of ▶II/■ = Play mode goes on; You can stop the device by setting the power switch to OFF and by disconnecting the MicroSD card or the USB flash memory.

Charging of the battery

Plug in the Mini USB cable* (*included) into the Mini USB port (Line-IN 5V) of the speaker. Then connect the USB port to the USB slot of PC or other USB slot of chargers. Then the LED shines RED. The LED will turn off when the speaker is fully charged. (Recommendation: turn OFF the speaker while charging. When it is working, it will take a longer time to get it fully charged.) Please always fully upload the battery.




Insert a MicroSD memory card or USB flash drive

Switch the speaker on. Before MP3 music tracks are copied on MicroSD card or USB flash drive, both memory media have to be formatted under Windows to FAT32. Insert the MicroSD card into the slot or the USB flash drive into the port. The speaker will start automatically with playback of the music tracks.

Playback of MP3 music tracks

- First, store music tracks on a MicroSD card or USB flash drive.
- With MP3 decoding function; a MicroSD card or a USB flash memory (Fat32 formatted) can be inserted directly for music playback.
- Plug in the MicroSD card with writing face up, the golden contacts face down and forward into the MicroSD card slot.
- If the MicroSD card or the USB flash memory is plugged in, music will be played with the volume set. Press VOL+ to increase volume, press VOL – to decrease volume.
- Default mode is Line-IN mode. After plugging in the MicroSD card or the USB flash memory is automatically changed in the music playback mode.

Handling Line-IN (5V)

Turn ON the speaker. Plug one end of 3.5mm cable into LINE-IN slot of the speaker and the other end into the audio slot of Mobile Phone, Notebook, Tablet PC, MP3/MP4 Player etc. After that you will be able to enjoy the music. When the  key of the speaker is pressed once, the speaker is on "Mute Mode" and the connected device continues playing. The keys  and  are without function.

Attention: USB / MicroSD / Line-IN → the last used one has priority.

(In case Line-IN is not recognized by the device, activate it with the button .)

Earphone Port: You can listen to your music via USB or MicroSD card, either through the speaker cones of the MusicMan or with earphones. Insert your earphones in the earphone port of the MusicMan.

Error description

Device cannot be switched ON: Check the battery capacity. Connect the USB cable or the charger and switch on the device again. Check that the battery is properly charged (an indicator light illuminates RED).


Device does not play: Check that the USB flash memory or the MicroSD card is formatted in Fat32 and the songs have MP3 format.

Technical specifications

Memory	MicroSD card and USB (up to 32GB)
Ports	Port for 3.5mm jack cable
Power supply	Built-in rechargeable 600mAh lithium ion battery 3.7V Charging time ~3–4 hours Playing time with MicroSD card ~8–9 hours (medium volume) Playing time with USB ~4–5 hours (medium volume) PC USB, AC adapter* (DC-5V, *not included)
Line-IN / 5V	USB power supply, Audio input
Loud Speaker	1x 1.77" (external Ø 45mm) magnetic resistant 4 Ohm Power 3W Signal / Noise Ratio: ≥80dB Output: RMS3W THD = 10% Frequency response: 150 – 18000Hz (±3dB)
ON / OFF (Power switch)	ON button: switch to ON, the device is ready for using OFF button: switch to OFF, the device is turned off
Weight / Dimensions	117 g / (L) 5 x (W) 5 x (H) 5cm
Package Contents	Mini MusicMan [®] Soundstation, USB/Audio/3.5mm jack cable, Hand strap, User manual

Enjoy your product. Share your experience and opinion on one of the well-known internet portals.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product. **Warranty 2 years**

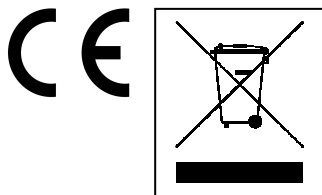

Hints for Environment Protection: Packages materials are raw materials and can be recycled. Do not disposal old devices or batteries into the domestic waste. **Cleaning:** Protect the device from contamination and pollution (use a clean drapery). Avoid using rough, coarse-grained materials or solvents/aggressive cleaner. Wipe the cleaned device accurately. **Distributor:** Technaxx Deutschland GmbH & Co.KG, Kruppstr. 105, 60388 Frankfurt a.M., Germany