TrendGeek[®] * User Manual LED Decoration Projector TG-122

The Declaration of Conformity for this device is under the Internet link: **www.technaxx.de/** (in bottom bar "Konformitätserklärung"). Before using the device the first time, please read the user manual carefully.

Service phone No. for technical support: 01805 012643 (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free Email: **support@technaxx.de**

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

Warranty 2 years

If you drill a hole in the wall, please make sure that power cables, electrical cords and/or pipelines are not damaged. When using the supplied mounting material, we do not take the liability for a professional installation. You are entirely responsible to ensure that the mounting material is suitable for the particular masonry, and that the installation is done properly. When working at higher altitudes, there is danger of falling! Therefore, use suitable safeguards.

Features

For decorative lighting of exterior and interior house walls
 Multicolour light projection in red-green-blue
 Swiveling luminaire head
 Protection Class IP44 (splash water proof)
 Ground spike

Power input	AC 100~240V, 50/60Hz	
LED	3x power 1W/piece (red, green, blue)	
Cable	Length ~1m	
Protection class & Material housing		IP44 & ABS
Weight/Dimensions	without ground spike: 290g / Ø 7 x (L) 16cm	
Weight/Dimensions	with ground spike: 312g / Ø 7 x (L) 16 x	
	(H) 28cm	

Technical specifications

Produkt view



	(1) LED Decoration Projector 1G-122	
Package Contents	(2) Ground spike (3) Allen wrench	
	(4) User Manual	
Outdoor use	② How to attach the ground spike	
Indoor use	Put the device on the table or on any another suitable mounting surface. When installing, please make sure that the unit cannot swing freely.	

Operation

This product serves as a light decoration and is intended for use in outdoor and indoor area (protection class IP44: protection against ingress of dust & against splashing waters). This product is not suitable for commercial use.

For outdoor use \rightarrow follow these steps

• Use the hex screw, locking washer, and washer to attach the ground spike to the pivot mount (see above).

• Place the Projector with the ground spike at the desired location into the ground.

• Position the projection by changing the angle of projector. Extension cables that may be used must be suitable for the outdoor area. Make sure that the plug connection is never placed in or under water, eg in puddles or in places where rain water could accumulate.

Hints

Make sure you lay the cable in a way that the danger of stumbling is avoided.
Never hold or carry the device by the power cable.
Do not clamp or damage the power cable.
Ensure that the power adapter do not come into contact with water, steam or other liquids.
You have to check the complete construction at regular intervals for functionality, tightness and damage to prevent the defect of the device.

Safety instructions

Rebuilding or modifying the product impairs product safety. All modifications and repairs of the device or accessories must be performed by the manufacturer or by persons expressly authorized by the manufacturer.
Never open the product by yourself. Never perform repairs by yourself!
Handle the product carefully. It can be damaged by knocks, blows or even by falling from low height.
Keep the product away from damp, moisture and extreme heat.
Never immerse the product in water or other fluids.
Technical specifications are subject to change without notice.
Only use this device with voltage specified on the device.
Never use the device during a thunderstorm. In the case of defects or operational faults, disconnect the device from the socket.
Keep the product away from the product away from little children.



Hints for Environment Protection: Packages materials are raw materials and can be recycled. Do not disposal old devices or batteries into the domestic waste. Cleaning: Protect the device from contamination and pollution. Avoid using rough, coarse-grained materials or solvents/aggressive cleaner. Wipe the cleaned device accurately. Distributor: Technaxx Deutschland GmbH & Co.KG, Kruppstr. 105, 60388 Frankfurt a.M., Germany

Enjoy your product * Share your experience and opinion on one of the well-known internet portals such as Amazon or idealo.de