

# TrendGeek® \* User Manual

## Smartwatch TG-SW1

The manufacturer Technaxx Deutschland GmbH & Co.KG hereby declares that this device, to which this user manual belongs, complies with the essential requirements of the standards referred to the Directive **RED 2014/53/EU**. The Declaration of Conformity you find here: [www.technaxx.de/](http://www.technaxx.de/) (in bar at the bottom "Konformitätserklärung"). Before using the device the first time, read the user manual carefully.

Service phone No. for technical support: 01805 012643 (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks).  
Free Email: [support@technaxx.de](mailto:support@technaxx.de)

**This device has a rechargeable battery. It must be fully charged before first use. NOTE: Charge the battery of the device every 2–3 month if it is not used!**

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

**Warranty 2 years**

***Enjoy your product \* Share your experience and opinion on one of the well-known internet portals such as Amazon or idealo.de***

## Features

- Mobile phone, Fitness Tracker and Media Player
- Contract-free, SIM lock-free, plug-in location for Nano-SIM-card
- Quad band GSM (850/900/1800/1900 MHz)
- Bluetooth 3.0 for Push messages and Smartphone navigation
- Free APP: available at Google Play
- Smartphone-connectivity via Bluetooth: Push messages, camera remote release, music control
- Synchronisation of contacts, messages, display of calls
- Missed calls, alarm alerts (SMS, MMS, GMail, WeChat, Whatsapp, QQ, Facebook, Twitter etc.)
- Anti lost function: find your mobile phone with your watch and vice versa
- Sleep monitoring: Record sleep and analyze sleep patterns

- Fitness function: Pedometer, calorie meter
- Shutter function, time display, alarm function, telephone directory, calender, etc.
- Interfaces: Micro USB, MicroSD card slot up to 32GB
- Choice of 3 different display settings for the dial

## Technical specifications

Display	1.2" round LCD touch screen Ø 2.4cm
Processor	MTK6261
Bluetooth	Version 3.0
Power supply	Built-in rechargeable 280mAh Lithium-polymer battery 3,7V
Charging time	~1–2 hours (use the enclosed Micro USB cable, a USB charging adapter or your Android mobile phone accessories)
Storage	32MB Ram + Slot for Micro(SDHC) cards up to 32GB
Nano SIM card slot	2G (GSM/GPRS 850/900/1800/1900)
Languages	GB, DE, FR, ES, PRT, IT, PL, NL, CZ, TR, Arabc
System requirements	Android 4.3 and above
Weight / Dimensions	52g / Ø 43.0 x (H) 12.5mm
Package Contents	Smartwatch TG-SW1, Micro USB charging cable, User Manual
Optional Accessories	Nano SIM card with deactivated deactivated PIN request, MicroSD card up to 32GB (FAT32), Free FunRun APP, Mobile device with Android and Bluetooth from 3.0, USB charging adapter

## Produkt View



**The watch should be charged at least 2 hours before use.**

<b>Power button</b>	On / Off, Screen On / Off, Back to the home screen
<b>USB port</b>	Load / Data transfer
<b>Touchscreen</b>	Each function (main menu) is displayed on the capacitive touchscreen

## Start up & Operation

### Power button / Operation

Hold down the on / off button for four seconds to turn on your Smartwatch. The Smartwatch display will light up, and the Start Screen will appear. **INFO:** If the last mobile device connected to your Smartwatch is turned on and the Bluetooth function is activated on both devices, then the Smartwatch will automatically connect with the mobile device.

## **Power button**

- 1x short press → turn on/off the display
- Press for 3-4 seconds → turn on/off the Smartwatch

## **Display**

- Short tap → open the selections or confirm a selection
- Swipe to the right or the left → next or previous Menu page
- Swipe from top to bottom → Short-cut function settings

## **Bluetooth connectivity and synchronization function**

### **Turn on the Bluetooth on your Smartwatch:**

Turn on your Smartwatch. Swipe several times from right to left over the display until the Bluetooth icon appears. Tap the icon.

### **Activate Bluetooth on the mobile device**

Now connect the mobile device with your Smartwatch „**TG-SW1**“.

### **Data Synchronization**

After installing the FunRun App and successfully connecting the telephone and Smartwatch via Bluetooth, you can synchronize data between the Smartwatch and the mobile device (**see chapter: Install APP**).

### **MicroSD card insertion**

Format your MicroSD card in FAT32. Run your fingernail through groove and take the back cover of your Smartwatch off. Push the MicroSD card with the rounded corner facing forward into the MicroSD card slot of your Smartwatch. In doing so, the golden contact points of the MicroSD card point downwards.

## **Nano SIM card insertion**

***Use only SIM cards whose PIN request has been disabled.*** Push the locking bar of the SIM card slot upward to unlock the slot. Lift the latch and insert the Nano SIM card so it fits. In doing so, the golden contact points of the SIM card point downwards. Replace the latch, press on it and push it downwards to lock the card slot.

## **Install APP**

Search for the application **FunRun APP** in the Google Play Store



. Install this APP on your mobil device or scan the following QR-Code.



## **Menü overview**

After turning on your Smartwatch, swipe from right to left over the display to activate the menu. Tap an icon to open the corresponding menu.

## **Telephone**

Enter the telephone number to dial from the Smartwatch.

## **Messages**

Synchronize telephone or watch messages.

## **Caller List**

After connecting with the Bluetooth, you can check your telephone calls. Show all records including failed calls, dialed calls, and received calls.

## **Contacts**

Synchronize contacts in order to see them on the telephone.

## **Bluetooth**

Turn the Bluetooth on / off and the visible feature on / off.

You can check the Bluetooth name and address.

## **Remote Notification**

For SMS, incoming Skype messages and other applications on the connected telephone, the watch's telephone will notify you in order that you may read them.

## **Remote Camera**

Use the telephone's camera to take photos; in order to view these on the watch, you must first turn on the telephone's camera.

## **Audio-Player**

Monitor music playback from the Smartwatch via Bluetooth. Play music over your mobile phone's loudspeaker or using a Bluetooth-headset connected to your Smartwatch. The music may be played off of either the inserted MicroSD card or the connected mobile device.

*In order to play songs stored on the MicroSD card over your Smartwatch's MP3-player, the audio files must be stored in the corresponding folder (**My Music**) on the memory card.*

## **Anti Lost / Smartphone Search**

The watch searches for the telephone or the telephone searches for the watch.

## **Settings**

In the Smartwatch settings, you can reset time, theme, language, visual display and factory defaults.

In order to reset the Smartwatch to default, tap in Setting menu on „Reboot Settings“.

## **Pedometer**

Keep an eye on your fitness with the pedometer. It counts your footsteps and calculates calorie consumption and distance travelled.

**Note:** *This function requires that the motion sensor on your Smartwatch is enabled (standard). If necessary, turn this on. If you wish to return to the Main menu, but want to leave the pedometer on while exercising, press the Power button instead of the Pause or Reset button.*

## **Sleep Monitor**

If you would like to monitor your sleep quality based on your sleeping time, you should wear the Smartwatch on your wrist while you go to sleep and press "start". **Note:** *If you return to the Main menu, please leave the sleep monitor on. Do not press the Pause or Reset buttons, only the Power button.*

**Exercise / Activity Reminder:** You can set a time to remind yourself to exercise. **Note:** *The pedometer, sleep monitor and exercise reminder may not be turned on at the same time.*

You should quit the other two functions if you wish to utilize an additional function.

## **Additional Smartwatch Functions**


Alarm, Calendar, Stopwatch, Pocket Calculator, Dictation Machine, Energy Saving Mode, Profile, File Manager.

## **Hints**

- Bluetooth connection becomes disconnected when the Smartwatch exceeds a certain distance.
- Smart-search function cannot be used after the Anti-lost-function has been turned on until connection via Bluetooth has been reestablished.
- Reconnect with Bluetooth if Bluetooth does not work for more than 5 min.
- Consent to the telephone book synchronization; otherwise you will have no telephone book synchronization.
- Titles are displayed when listening to music. This is not the case when using mobile devices.

## Safety instructions

- Rebuilding or modifying the product impairs product safety.
- All modifications and repairs of the device or accessories must be performed by the manufacturer or by persons expressly authorized by the manufacturer.
- Never open the product by yourself except to insert the SIM card or MicroSD card. Never perform repairs by yourself!
- Handle the product carefully. It can be damaged by knocks, blows or even by falling from low height.
- Keep the product away from damp, moisture and extreme heat.
- Never immerse the product in water or other fluids.
- Technical specifications are subject to change without notice.
- Never heat the battery above 60°C and do not drop or throw it into the fire, danger of explosion/fire hazard!
- Do not short-circuit the battery.
- Do not subject the battery to mechanical stress. Avoid dropping, striking, bending, twisting or cutting the battery.
- Discontinue the charging process immediately should the battery become overheated. A battery that becomes overheated or deformed during the charging process is defective and should no longer be used.
- Never drain the battery completely, as this shortens its lifetime.
- It is essential to observe the correct polarity of the battery. An incorrectly inserted battery can result in destruction of the product, danger of fire hazard.
- If the battery must be stored, it is recommended that it be stored at 30% of its loading volume. Store out of direct sunlight. Ideal storage temperature: 10–20°C.
- Keep the product away from little children.

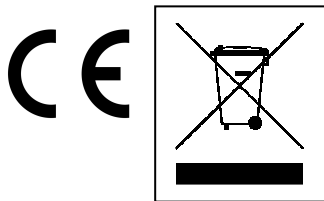

**Hints for Environment Protection:** Packages materials are raw materials and can be recycled. Do not disposal old devices or batteries into the domestic waste. **Cleaning:** Protect the device from contamination and pollution. Avoid using rough, coarse-grained materials or solvents/aggressive cleaner. Wipe the cleaned device accurately. **Distributor:** Technaxx Deutschland GmbH & Co.KG, Kruppstr. 105, 60388 Frankfurt a.M., Germany