

MusicMan[®] * User Manual

Slim Bluetooth Headphone BT-X27

With this comfortable and good fitting Bluetooth headphone you have surround sound experience and additionally FM radio

The manufacturer Technaxx Deutschland GmbH & Co.KG hereby declares that this device, to which this user manual belongs, complies with the essential requirements of the standards referred to the Directive **RED 2014/53/EU**. The

Declaration of Conformity you find here: www.technaxx.de/ (in bar at the bottom "Konformitätserklärung"). Before using the device the first time, read the user manual carefully.

This device has a rechargeable battery. It must be fully charged before first use. NOTE: Charge the battery of the device every 2–3 month if it is not used!

Turn OFF nearby Bluetooth devices to avoid signal interference!
WARNING: DO NOT TURN THE VOLUME TOO HIGH – HEARING LOSS MIGHT BE THE RESULT!

Service phone No. for technical support: 01805 012643 (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks).

Free Email: support@technaxx.de

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.


Warranty 2 years

Features

- Music transfer & handsfree function via Bluetooth V4.2
- Built-in FM radio
- When incoming call, music playback is paused automatically
- Supports MicroSD cards up to 32GB
- Supports computer, MP3, CD and AUX-IN
- Foldable headphone with soft cushioning for comfortable fit
- Balanced-clear sound performance in low and high sound ranges
- Built-in rechargeable 400mAh battery for portable use
- LED indicator shows the working status
- Easy to use, super slim and very light
- Material PC + ABS plastic


Technical specifications

Bluetooth	V4.2, / ~10m distance (open space) / Frequency band 2.4GHz / Radiated transmission power max. 2.5mW	
Loudspeakers	Frequency range 20Hz~20kHz	
5 Functions	Bluetooth, Line-IN/AUX-IN, Handsfree, FM radio, MicroSD card (only MP3 files)	
Power	Built-in rechargeable 400mAh lithium polymer battery 3.7V	
Charging time	~3 hours, DC 5V/500mA power adaptor* (*not included)	
Playing time / Standby	~8 hours (max. volume) / ~2 weeks	
Bluetooth profiles	HFP, HSP, A2DP, AVRCP	
SNR / Impedance	≥ 95 dB / 32 Ω	
Driver unit / Audio connector	40mm / 3.5mm	
Weight / Dimensions	150g / Earphone shell (L)15x(W)6x(H)18cm/Headphone (W) 8.5 x (H) 15 x (Width headphone temple) 2.8cm	
Package Contents	MusicMan® Slim Bluetooth Headphone BT-X27, Micro USB charging cable, AUX-IN cable, High quality protective case, User Manual	

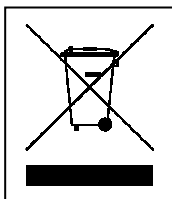

Hints for Environment Protection: Packages materials are raw materials and can be recycled. Do not disposal old devices or batteries into the domestic waste. **Cleaning:** Protect the device from contamination and pollution (use a clean drapery). Avoid using rough, coarse-grained materials or solvents/aggressive cleaner. Wipe the cleaned device accurately. **Distributor:** Technaxx Deutschland GmbH & Co.KG, Kruppstr. 105, 60388 Frankfurt a.M., Germany

Product Overview

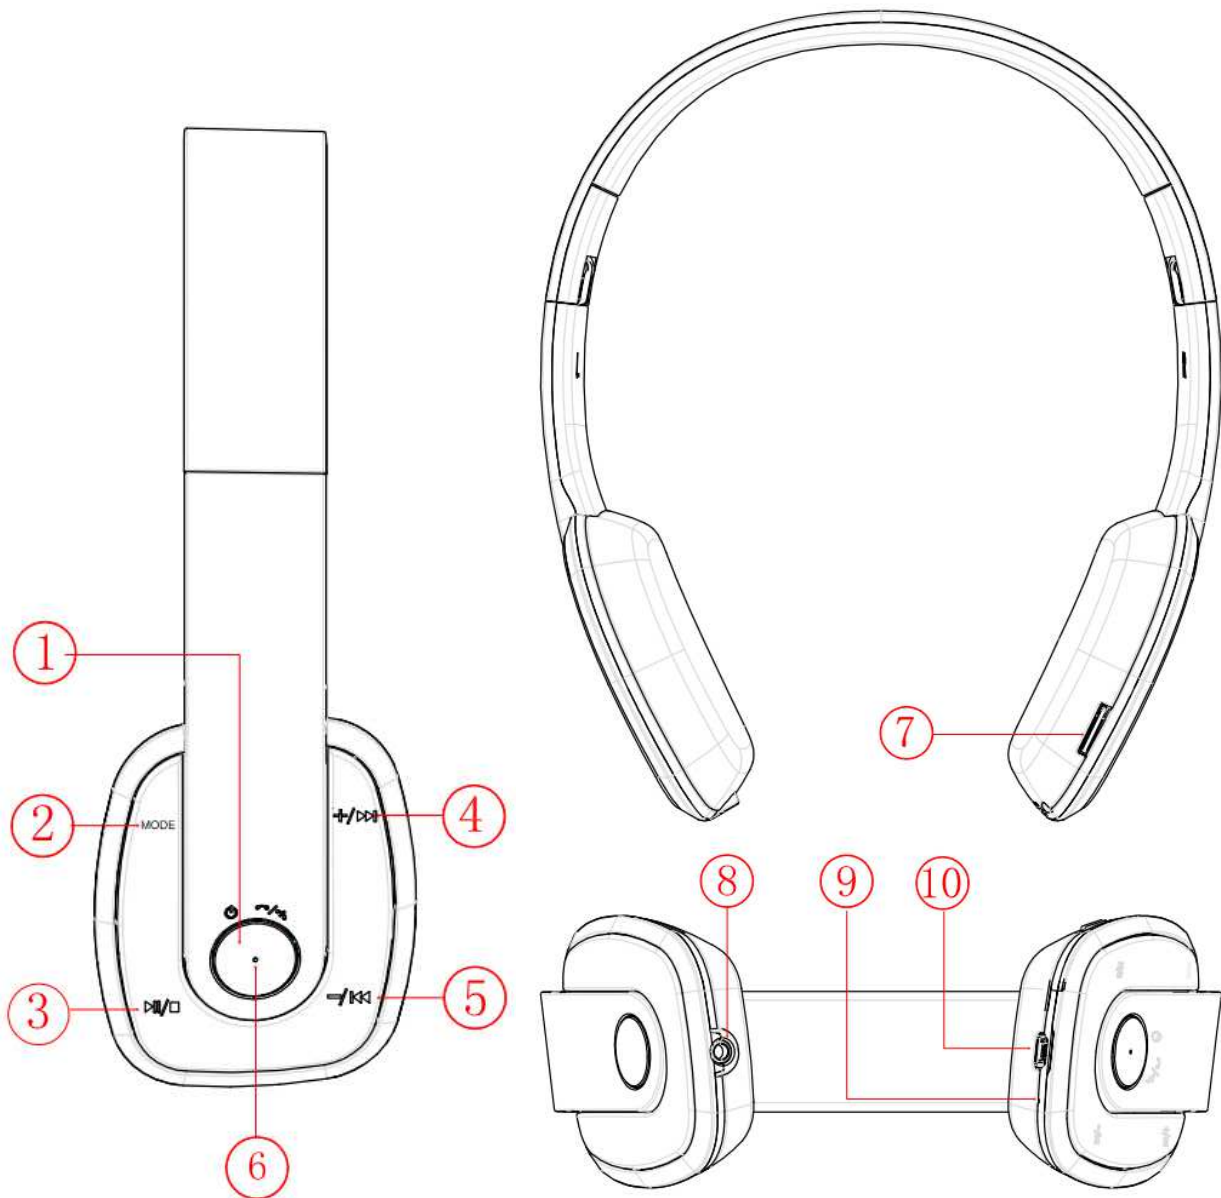

1	Keep pressing the button 3 sec. to Power ON/OFF the headphone. Under Bluetooth mode, short press to receive or end calls.
2	MODE: MicroSD card, AUX-IN, Bluetooth, FM Radio
3	Short press to PLAY or PAUSE . Under FM radio mode, short press to enter automatic searching. Long press to pair Bluetooth again.
4	Short press to move to next track . Long press to increase volume .

5	Short press to move to previous track .				
	Long press to decrease volume .				
6	LED	7	MicroSD Card Slot	8	Line-IN / AUX-IN
9	Microphone		10	Micro USB charging connector	

Charging the headphone

Before first use, fully load the battery with the included original Micro USB charging cable. Connect the Micro USB charging cable to a charger or computer USB port, and the other end to the Micro USB charging port (10) of the headphone. The RED light shines bright while charging in the OFF status. When the headphone is fully charged, the RED light turns off. (We'd suggest the users turning off while charging. It takes longer time to get fully charged if it works when being charged).

Attention: The headphone fits only in one direction perfectly when but on the head! So be sure the right side is on the right and the left on the left!

1. Turn ON – OFF (key 1)

- **Turn ON the headphone:** Keep pressing power button 3 sec.
- **Turn OFF the headphone:** Keep pressing power button 3 sec.

2. Bluetooth Pairing

Turn on headphone, BLUE LED flashes fast; Turn on Bluetooth of your device (e.g. Smartphone) you want to pair with the headphone. The headphone will automatically turn on the Bluetooth. Search the headphone with a name „**MusicMan BT-X27**“. Music can be streamed after pairing successfully (BLUE LED will be steady on).

3. Bluetooth Music

After successful pairing, click the ▶|| key once to play the music sourcing from your Smartphone (BLUE LED flashes). Click again to pause.

Change songs: Press short ▶▶ key for the next song, press short ◀◀ key for the previous song.

Adjust volume: Press and hold long + key to increase the volume, press and hold long - key to decrease the volume.

4. Bluetooth Phone Calls

- When there is an incoming phone call, click the ▶|| key to answer the call through your headphones.
- Click the ▶|| key once to hang up the call when answering.

5. MicroSD Card Mode

- Insert a MicroSD card into the MicroSD (up to 32GB, formatted in FAT32 under Windows) card slot ((7) MicroSD card slot). After inserting the MicroSD card. music will automatically start playing and the BLUE LED starts flashing. Press ▶|| one time will be pause music (BLUE LED steady on) and press again will continue to play music.
- Press ◀◀ shortly and you hear the previous song. Press ▶▶ shortly and you hear the next song.
- Press - long and you decrease the volume. Press + long and you increase the volume. To play music from a MicroSD card, plug the MicroSD card into the MicroSD card slot, under any mode! (The MicroSD card may be play only with MP3 files, 128kb files.) It is not possible to access the MicroSD card over the Micro USB port by connecting via USB with the computer.

6. FM Radio Mode

- Press Mode (2) till you enter FM radio mode. If a channel is received (frequency range **87.5 – 108.0MHz**), you hear the channel; if no channel is received, you hear a rushing noise. In that case you have to search for a channel. Press long the ►|| key. While searching the BLUE light is flashing quickly (operation keys will not work). After finished searching, the headphone plays the first channel found. When a found channel is played, the BLUE light is flashing slowly.
- Scanned channels will be saved automatically. **Change channel:** press ◀◀ key to change to the previous channel, press ▶▶ key to change to the next channel.
- **Adjust volume:** Press and hold + key to increase the volume, press and hold - key to decrease the volume.

7. Line-IN Mode (8)

When you are in LINE-IN mode, you can listen to music from other devices (e.g. computer). Insert the AUX-IN cable (3.5mm cable) into the LINE-IN port (8) and the other end into audio slot of a mobile phone, notebook, tablet PC, MP3/MP4 player etc. After that, you can listen to music. The keys on the headphone ▶▶ and ◀◀ are without function. With the + key and - key you can increase or decrease the volume. On some devices you can Play/Pause the playback by pressing ►||. (BLUE LED is steady when music is paused.) To change the track you are hearing, you have to use the buttons on your mobile device!

The BLUE LED is flashing when Line-IN is connected!

8. How to fold the headphone

Fold both earphone shells carefully inward. Now you have an easy to transport headphone with the size of (W) 8.5cm x (H) 15.0cm.

Troubleshooting

- The Karaoke BT-X27 powers Off or does not turn On again → could be either a low battery or a problem with the power supply → charge the BT-X27 and check the connection of the Micro-USB cable. (We suggest charging the BT-X27 all 2-3 month if it is not used for a long time.)
- Noises are heard from the BT-X27 → could be a poor Bluetooth signal → to avoid noise, stay within the Bluetooth range of ~10m.
- No Bluetooth connection → could be (a) the Bluetooth connection is not in range, or (b) another mobile device (e.g. Smartphone, Tablet) is paired with the BT-X27 → (a) shorten the range to the Smartphone, or (b) unpair the other device.

Warnings

- Only charge the BT-X27 through the DC 5V Micro USB port by using the provided original Micro USB charging cable. You also can use an USB charging adapter but ONLY (!) up to DC 5V/500mA. Do not (!) charge the BT-X27 with more power!
- When the BT-X27 works under AUX-IN mode, do not (!) increase the volume of your mobile phone, PC, MP3/MP4 Player, CD, DVD etc. to a large extend. A sound distortion may occur. In that case, decrease volume either of mobile phone, PC, MP3/MP4 Player, CD, DVD or the BT-X27. The sound gets normal soon.
- If the BT-X27 fails to link to your mobile device or if it fails to play music after being connected, the user shall check if your mobile device supports A2DP.
- Do not attempt to disassemble the BT-X27, it may result in short-circuit or even damage.
- Do not drop or shake the BT-X27, it may break internal circuit boards or mechanics.
- Keep the BT-X27 in dry and ventilated environment. Avoid high humidity and high temperature. Also batteries should not be exposed to excessive heat or direct sunlight.
- This BT-X27 is not water resistant; therefore keep it away from moisture.
- Keep the BT-X27 away from little children.