

MusicMan® * User Manual

Bluetooth In-Ear Headphone BT-X23

With this comfortable and good fitting Bluetooth stereo headphone you can enjoy music via Bluetooth

The manufacturer Technaxx Deutschland GmbH & Co.KG hereby declares that this device, to which this user manual belongs, complies with the essential requirements of the standards referred to the Directive **RED 2014/53/EU**. The

Declaration of Conformity you find here: www.technaxx.de/ (in bar at the bottom "Konformitätserklärung"). Before using the device the first time, read the user manual carefully.

This device has a rechargeable battery. It must be fully charged before first use. NOTE: Charge the battery of the device every 2–3 month if it is not used!

Turn OFF nearby Bluetooth devices to avoid signal interference!
WARNING: DO NOT TURN THE VOLUME TOO HIGH – HEARING LOSS MIGHT BE THE RESULT!

Service phone No. for technical support: 01805 012643 (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks).


Free Email: support@technaxx.de

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

Warranty 2 years

Features

- Music transfer & handsfree function via Bluetooth V2.1
- Built-in microphone
- Micro USB connector for charging
- 3 buttons for receiving calls & playing music
- Tight fitting, ideal for sports and traveling

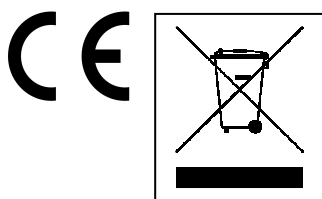

Hints for Environment Protection: Packages materials are raw materials and can be recycled. Do not disposal old devices or batteries into the domestic waste. **Cleaning:** Protect the device from contamination and pollution (use a clean drapery). Avoid using rough, coarse-grained materials or solvents/aggressive cleaner. Wipe the cleaned device accurately. **Distributor:** Technaxx Deutschland GmbH & Co.KG, Kruppstr. 105, 60388 Frankfurt a.M., Germany

Technical specifications

Bluetooth	V2.1, / profil A2DP / ~8m distance (open space) / Frequency band 2.4GHz / Radiated transmission power max. 2.5mW
Loudspeakers	Frequency range 20Hz~20kHz
Power	Power supply DC 5V & built-in rechargeable 60mAh lithium polymer battery 3.7V
Charging time	~1.5 hours, DC 5V/500mA power adaptor* (*not included)
Playing time	~3.5 hours (maximum volume)
Standby	~7–8 hours (Bluetooth connected)
Weight / Dimensions	15g / (L) 3.8 x (W) 2.5 x (H) 1.0cm; (Deepness ear bud) 1.0cm; (Length cable) 60cm
Package Contents	MusicMan® Bluetooth In-Ear Headphone BT-X23, Micro USB charging cable, User Manual

Charging

Before first use, fully load the battery with the included original Micro USB charging cable. Connect the Micro USB charging cable to an USB adapter* (5V/500mA) (*not included) or computer USB port, and the other end to the Micro USB charging port of the headphone. The RED LED shines bright while charging in the OFF status. When the headphone is fully charged, the RED LED turns off and the BLUE LED turns on. (We recommend to turn off the headphone while charging. Otherwise it will take a longer time to get it fully charged.)

Product view



	Power on/off, Play/Pause, Hands-free:
1	Long press to power on. BLUE LED turns on and goes off. Long press to power off. RED LED turns on and goes off. Short press to receive or end calls, play or pause music.
2	LED indicator light: Under Bluetooth pairing mode, BLUE and RED LED flash quickly. While headphone is being charged, RED LED turns on. When charging is completed, RED LED turns off and BLUE LED turns on.
3	Microphone
4	Volume + / – and Next/Previous Song: VOL + button: Short press to increase volume. Long press to move to next song. VOL – button: Short press to decrease volume. Long press to repeat the current song. Long press again to go back to the previous song
5	Micro USB charging connector
6	Ear buds

Bluetooth

Turn on the headphone by pressing the “Play” button. The BLUE LED turns on and goes off. Bluetooth works spontaneously, searching for previously paired Bluetooth devices. The Bluetooth pairing mode is shown by the quickly flashing BLUE and RED LED. If the headphone fails to connect, turn on your Bluetooth device to search the headphone with the name “**Musicman BT-X23**”. PIN code is “0000”. After pairing successfully, the BLUE LED is blinking. When the headphone is connected with your Smartphone and you receive an incoming call, you can press the ►|| button shortly to take the call. To reject the call you have to press the ►|| button for about 1–2 seconds.

Warnings ● If the device does not turn on after switching it on, or it turns off after turning it on, check whether the battery is fully charged. If it is OFF power, get it fully charged and try again later. ● Only charge the device with the DC 5V/500MA adapter* (*not included) or in USB slot of your PC with the provided original Micro USB charging cable. It would make the device fail to work or even damage it if it is not charged with recommended voltage. ● If the device fails to link to your mobile device or if it fails to play music after being connected, the user shall check if the correct PIN code is entered or if your mobile device supports A2DP. ● When the device works under LINE/AUX–IN mode, do not (!) increase the volume of your mobile phone, PC, MP3/MP4 Player, CD, DVD etc. to a large extend. A sound distortion may occur. In that case, decrease volume either of mobile phone, PC, MP3/MP4 Player, CD, DVD or device. The sound gets normal soon. ● Do not attempt to disassemble the device, it may result in short-circuit or even damage. ● Do not drop or shake the device, it may break internal circuit boards or mechanics. ● Keep the device in dry and ventilated environment. Avoid high humidity and high temperature. ● This device is not water resistant, therefore keep it away from moisture. ● Keep the device away from little children.