

Technaxx® * User Manual

Retro DAB+ Radio TX-364

Before using the appliance for the first time, please read the instructions for use and safety information carefully.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or by persons lacking in experience or knowledge, unless they are supervised or instructed on the use of this device by a person responsible for their safety. Children should be supervised to ensure they do not play with this device.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

Enjoy your product * Share your experience and opinion on one of the well-known internet portals.

Specifications are subject to change without notice - please be sure to use the latest manual available on the manufacturer's website.

Table of Contents

Hints.....	2	Radio reception.....	5
Precautions	2	Function use	5
Warnings.....	2	Problem shooting	7
Safety instructions	3	Technical specifications	7
Disclaimer	3	Support	8
Features.....	3	Care and maintenance.....	8
Product overview.....	4	Declaration of Conformity.....	8
Key operation	5	Disposal.....	8

Hints

● Only use the product for purposes due to its intended function ● Do not damage the product. Following cases may damage the product: Incorrect voltage, accidents (including liquid or moisture), misuse or abuse of the product, faulty or improper installation, mains supply problems including power spikes or lightning damage, infestation by insects, tampering or modification of the product by persons other than authorized service personnel, exposure to abnormally corrosive materials, insertion of foreign objects into the unit, used with accessories not preapproved. ● Refer to and heed all warnings and precautions in the user manual.

Precautions

Read all safety instruction warnings carefully before using this product. Improper use of this product may result in damage to this or attached products. To ensure the products work well, never use this in the following conditions:

- Moist or underwater conditions;
- Conditions near heater or high-temperature service;
- Conditions with direct and strong sunshine;
- Conditions with adapter damage;
- Never dismantle the product without due permission, otherwise it may nullify the warranty clause.

Warnings

● Do not attempt to disassemble the device, it may result in short-circuit or even damage. ● Do not drop or shake the device, it may break internal circuit boards or mechanics. ● Keep the device away from little children. ● Excessive volume consumption: Be careful not to set the volume too high, especially when using headphones. Prolonged exposure to loud noises can cause serious hearing damage, especially if the device is operated at high volume for long periods of time. ● Interference from electromagnetic

fields: Do not use the DAB radio near strong magnetic fields or high-voltage power lines, as these may interfere with reception and possibly damage the device. Strong electromagnetic fields (e.g., from microwaves, high-voltage power lines) can impair reception quality or damage the radio.

Safety instructions

- Never touch the product with wet or damp hands.
- The product can only be operated with the voltage described on the device.
- Do not place the product on an unstable surface. The unit could be damaged or persons could be injured. Any attachments should be made only in accordance with the manufacturer's instructions or obtained from the manufacturer.
- Avoid placing excessive stress on the plug, especially at sockets and plugs.
- Do not insert any objects into the openings of the unit, as current flows in some places and contact may cause fire or electric shock.
- Do not use liquid cleaners or cleaning sprays. The product may only be cleaned with a damp cloth.
- Do not connect any additional devices that are not recommended by the manufacturer.
- Do not use the product in direct sunlight or places where the temperature may exceed 50°C for a long time.

Disclaimer


- In no event shall Technaxx Deutschland be liable for any direct, indirect, punitive, incidental, special, consequential danger, to property or life, improper storage, whatsoever arising out of or connected with the use or misuse of their products.
- Error messages may appear depending on the environment it is used in.
- Radio reception depends on location.

Features

- Versatile radio reception with DAB+/FM
- Powerful sound with 5W RMS
- Stylish housing made of MDF wood and plastic
- Large 2.4" TFT color display
- Music variety via Bluetooth, USB & AUX-IN
- Integrated alarm clock with practical functions
- Convenient operation via remote
- Ideal for home use with mains operation


Product overview

Front

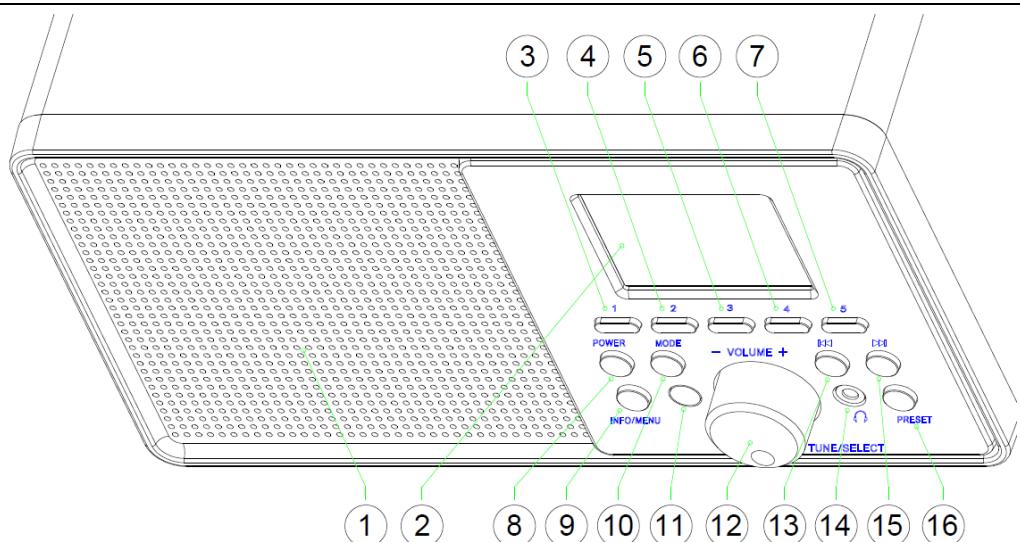

1	Speaker	9	Info/Menu button
2	Display	10	Mode button
3	Button 1	11	IR receiver for remote
4	Button 2	12	Tune/Select knob
5	Button 3	13	Previous button
6	Button 4	14	Earphone port (3.5mm)
7	Button 5	15	Next button
8	Power button (ON/OFF)	16	Preset button

Back

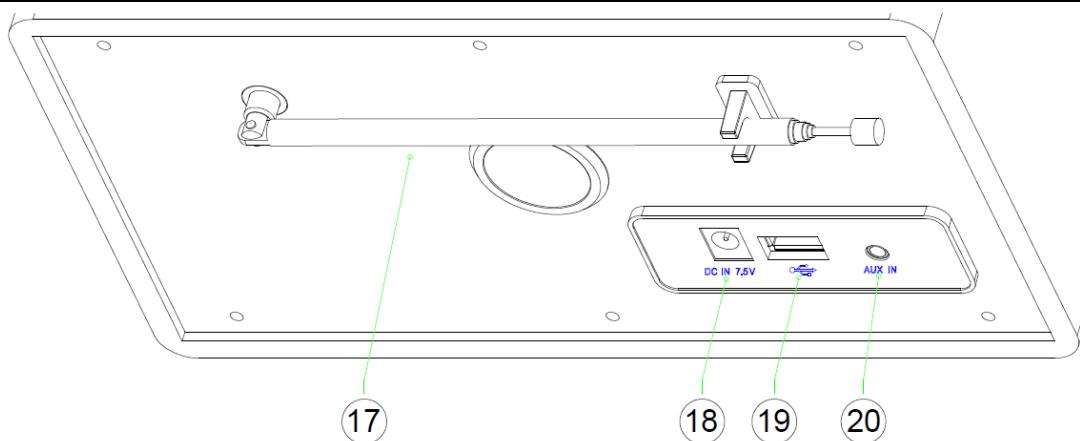

17	Draw bar antenna	19	USB port (Data)
18	DC power connector	20	AUX In port (3.5mm)

Key operation

POWER key: long press this key to switch the machine on and off, and short press to enter standby mode.

MODE button: After power on, short press to switch between different modes.

INFO/MENU key: After power on, press this key for a short time in DAB/FM mode to view the radio information and long press this key to enter the menu setting.

PRESET key: In DAB and FM mode, short press this key to enter the searched station list.

Previous button: When playing music, short press this button to select the previous song.

Next button: When playing music, short press this button to select the next song.

TUNE/SELECT knob: When playing music, rotate this key to adjust the volume, short press this key to play and pause, and rotate this key in the menu interface to select the menu and confirm.

SET1-SET5 keys: In DAB or FM mode, you can preset your favorite radio station through these keys.

Radio reception

Antenna alignment: For the best reception, the antenna should be aligned in the right direction. With portable devices, it may help to place the device closer to a window or turn it to achieve the best reception.

Signal interference: Note that metal objects and thick walls can interfere with DAB signal reception. If you are having difficulty receiving a signal, try moving the device to another room or location.

Radiation protection: Do not place the radio directly next to electronic devices that generate strong electromagnetic fields (e.g., microwaves or routers), as these can impair reception quality.

Function use

DAB mode

After power on, short press the "MODE button" to switch to DAB mode. In this mode, long press the "TUNE/SELECT knob" to automatically search for DAB stations. After the station search is completed, short press the "PRESET button" to enter the station list. Then short press the "Up and Down button" to switch to the previous or next radio station preview, and then short press the "TUNE/SELECT knob" to switch to the currently

displayed radio station; rotate the "TUNE/SELECT knob" to adjust the volume.

FM mode:

In DAB mode, short press the "MODE button" to switch to FM mode. In this mode, long press the "TUNE/SELECT knob" to automatically search for FM radio stations. After the search is completed, short press the "PRESET button" to Enter the station list. Then short press the "up and down keys" to switch to the previous or next station preview. Then short press the "TUNE/SELECT knob" to switch to the currently displayed station; rotate the "TUNE/SELECT knob" to adjust volume.

Bluetooth Mode:

In FM mode, short press the "MODE button" to switch to Bluetooth mode. After entering Bluetooth mode, turn on the mobile phone or other Bluetooth device to connect to the radio to play music. In this mode, short press the "TUNE/SELECT knob" to carry out music playback or pause. Short press the "previous button" to switch to the previous song, short press the "next button" to switch to the next song. Rotate the "TUNE/SELECT knob" to adjust the volume.

BT pairing name is "Radio TX-364".

USB disk mode:

In Bluetooth mode, short press the "MODE button" to switch to USB disk mode. In this mode, short press the "TUNE/SELECT knob" to play or pause music and short press the "Previous button" to switch to the previous song. Short press the "Next button" to switch to the next song. Rotate the "TUNE/SELECT knob" to adjust the volume.

AUX mode:

In USB disk mode, short press the "MODE button" to switch to AUX mode. In this mode, short press the "TUNE/SELECT knob" to achieve MUTE or replay. Rotate the "TUNE/SELECT knob" to adjust the volume.

Headphone mode:

In any mode, when the headphones are plugged in, the sound will be switched from the speaker to the headphones for playback. After unplugging the headphones, the sound will return to the speaker for playback.

Problem shooting

1. If the power button cannot turn the device on by pressing the power button for a long time, check whether the adapter is plugged in properly. If not, re-plug it to solve the problem.
2. Use the power adapter equipped with this product to work properly. If you use other power adapters, the machine may not work properly, and it is very likely to damage the machine.
3. If the device makes noise in DAB or FM mode or cannot play the radio station normally, check that the antenna is fully extended. Once you have confirmed that it is extended, you can adjust the position of the antenna to resolve the issue.
4. In AUX mode, do not adjust the sound of the input source (mobile phone, computer, MP3/MP4 player, etc.) too much, otherwise some music may produce violent sound and distortion. Distortion, reduce the volume of the input audio source to return to normal.
5. If some mobile phones or other Bluetooth devices cannot connect to the audio or cannot play music after connection, check whether the mobile phone or Bluetooth device has entered the correct pairing password or whether the mobile phone or Bluetooth device supports the Bluetooth A2DP music transmission protocol.

Technical specifications

Speaker power / size	1x 5W (RMS) / ø 76mm
Speaker impedance / frequency	4Ω / 100Hz - 20kHz
Supported USB-Disk size	Up to 32GB
FM/DAB transmitting frequency	87.5-107.9MHz / 174-240MHz
AUX-IN & Earphone port	3.5mm
Bluetooth version / distance	5.0 / ~10m
BT transmitting frequency	2.4GHz
BT radiated output power max.	2.5mW
Power input	DC 7.5V / 1.2A
Operating temperature	0°C - 50°C
Material	Wood + ABS plastic
Weight / Dimensions	1,1 kg / 22,1 x 11,3 x 12,7 cm
Compatibility	Bluetooth, USB Stick & AUX-IN
Package contents	Retro DAB+ Radio TX-364, Power adapter, Remote, User Manual

Support

Service phone No. for technical support: **01805 012643*** (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free Email: **support@technaxx.de**

The support hotline is available Mon-Fri from 9am to 1pm & 2pm to 5pm

In the event of anomalies and accidents, please contact:
gpsr@technaxx.de

Care and maintenance

Clean the device only with a dry or slightly damp, lint-free cloth.

Do not use abrasive cleaners to clean the device.

This device is a high-precision optical instrument, so in order to avoid damage, please avoid the following practice:

- Use the device in ultra-high or ultra-low temperature.
- Keep it or use it in moist environment for long.
- Use it in rainfalls or in water.
- Deliver or use it in strongly shocking environment.

Declaration of Conformity



Technaxx Deutschland GmbH & Co. KG hereby declares that the radio equipment type TX-364 Prod. ID:5364 is in compliance with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following internet address: www.technaxx.de/reseller.

Disposal



Disposal of the packaging. Sort packaging materials by type upon disposal.



Dispose of cardboard and paperboard in the waste paper. Foils should be submitted for recyclables collection.

Disposing of old equipment (Applies in the European Union and other European countries with separate collection (collection of recyclable materials) Old equipment must not be disposed of with household waste! Every consumer is required by law to dispose of old devices that can no longer be used separately from household waste, e.g. at a collection point in his or her municipality or district. This ensures that the old devices are properly recycled and that negative effects on the environment are avoided. For this reason, electrical devices are marked with the symbol shown here.

Made in China

Distributed by:
Technaxx Deutschland GmbH & Co. KG
Konrad-Zuse-Ring 16-18,
61137 Schöneck, Germany

Retro DAB+ Radio TX-364