

TrendGeek® * User Manual

EL-Light Party-Glasses TG-127

The Declaration of Conformity for this device is under the Internet link: www.technaxx.de/ (in bottom bar “Konformitätserklärung”). Before using the device the first time, please read the user manual carefully.


Service phone No. for technical support: 01805 012643 (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks).
Free Email: support@technaxx.de

This device has a rechargeable battery. It must be fully charged before first use. NOTE: Charge the battery of the device every 2–3 month if it is not used!

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

Warranty 2 years

Enjoy your product * Share your experience and opinion on one of the well-known internet portals.

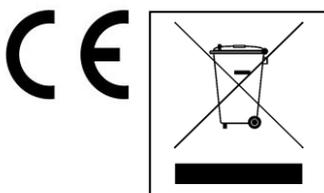


Hints for Environment Protection: Packages materials are raw materials and can be recycled. Do not disposal old devices or batteries into the domestic waste. **Cleaning:** Protect the device from contamination and pollution. Avoid using rough, coarse-grained materials or solvents/aggressive cleaner. Wipe the cleaned device accurately. **Distributor:** Technaxx Deutschland GmbH & Co.KG, Kruppstr. 105, 60388 Frankfurt a.M., Germany

Features

- Wireless design with built-in rechargeable 310mAh battery
- 3 different light modes (flashing, blinking and steady light)
- Up to 7 hours continuous brighting
- Up to 60 days standby time (full charged)

Product overview

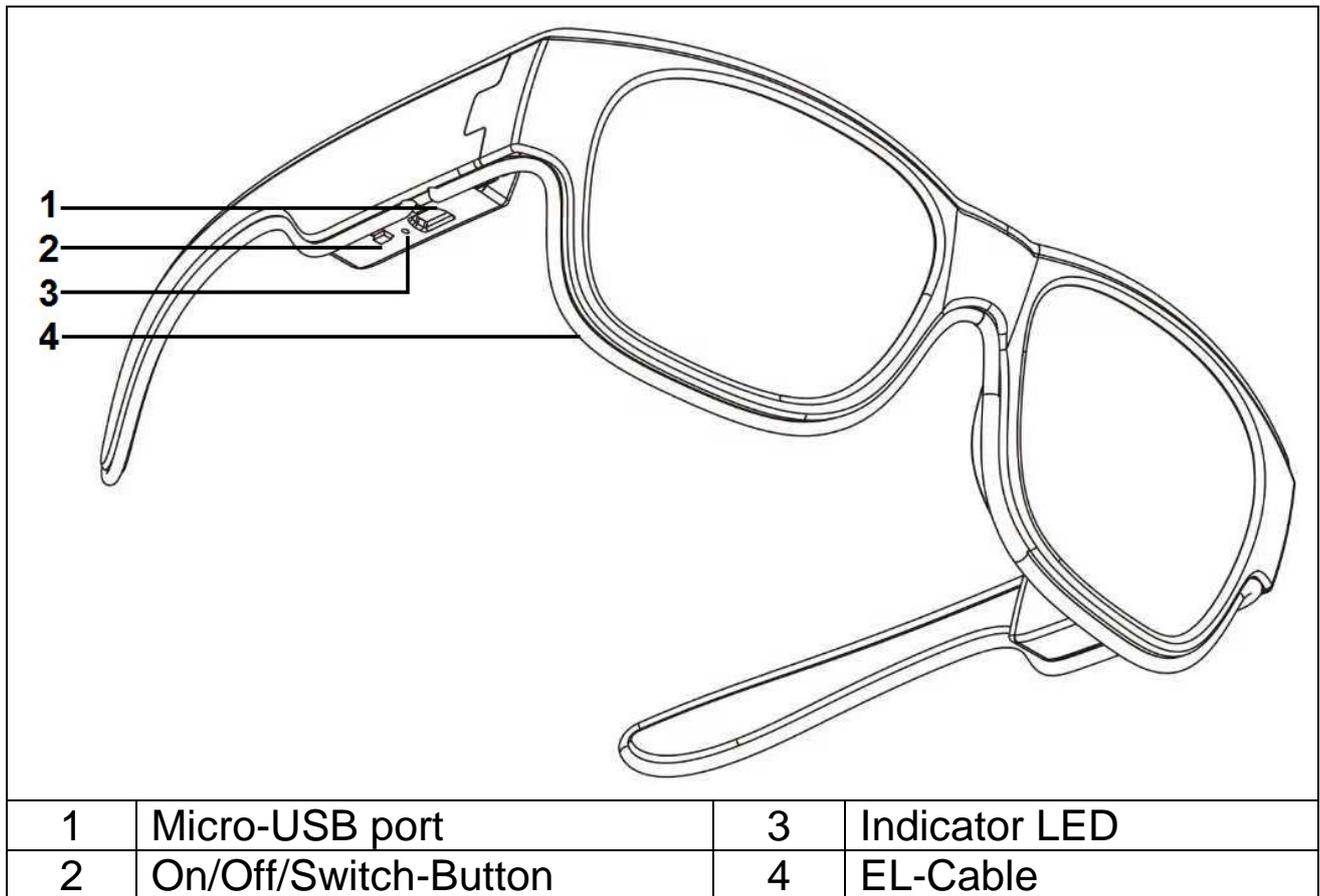

Specifications

Connection	Micro-USB
Power supply	Built in rechargeable 310mAh Lithium-Polymer battery 3,7V
Charging time	~1-2 hours
Standby time	60 days (full charged)
Working time	Up to 7 hours (flashing & blinking light ~7 hours / steady light ~4 hours)
Weight / Dimensions	58.5g / (L)16.4 x (W)15.8 x (H) 5.8cm
Package contents	TrendGeek TG-127, Micro-USB cable, User manual

Charging

Please connect the device via Micro-USB to the Micro-USB port of the TG-127 and the other end to a USB power adapter* (*not included). The indicator LED shines red. The Indicator LED turn off when the device is fully charged.

Operating

Press the On/Off/Switch-Button to turn on the device. The device is now in flashing mode. Press again to switch to blinking mode. Press a third time to switch to the steady light mode. Press a fourth time to turn off the device.

Hints

- The device is intended exclusively for private and not for commercial use.
- Only use this device as described in this user manual.
- Do not handle the device with wet hands.
- When disconnecting the cable, always pull at the plug. Do not pull on the cable itself.
- Do not let the power cord on the edge of a table or work surface.
- Prevent it comes into contact with hot surfaces.
- Keep it away from heat sources to avoid deformation of plastic parts.

Safety instructions

- Rebuilding or modifying the product impairs product safety.
- All modifications and repairs of the device or accessories must be performed by the manufacturer or by persons expressly authorized by the manufacturer.
- Never open the product by yourself. Never perform repairs by yourself!
- Handle the product carefully. It can be damaged by knocks, blows or even by falling from low height.
- Keep the product away from damp, moisture and extreme heat.
- Never immerse the product in water or other fluids.
- Technical specifications are subject to change without notice.
- Never heat the battery above 60°C and do not drop or throw it into the fire! Danger of explosion/fire hazard!
- Do not short-circuit the battery.
- Do not subject the battery to mechanical stress. Avoid dropping, striking, bending, twisting or cutting the battery.
- Discontinue the charging process immediately should the battery become overheated. A battery that becomes overheated or deformed during the charging process is defective and should no longer be used.
- Never drain the battery completely, as this shortens its lifetime.
- If the battery must be stored, it is recommended that it be stored at 30% of its loading volume. Store out of direct sunlight. Ideal storage temperature: 10–20°C.
- Keep the product away from little children.