

# MusicMan<sup>®</sup> \* User manual

## Wireless Bluetooth Headphone BT-X65

Before using the appliance for the first time, please read the instructions for use and safety information carefully.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or by persons lacking in experience or knowledge, unless they are supervised or instructed on the use of this device by a person responsible for their safety. Children should be supervised to ensure they do not play with this device.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

***Enjoy your product \* Share your experience and opinion on one of the well-known internet portals.***


### Features

- Powered by 200mAh battery
- Pairing with Bluetooth V5.3
- Built-in microphone for phone calls
- Foldable design
- Aux-In function

## Technical specifications

Bluetooth version	V5.3
Bluetooth	Transmitting distance ~10m (open space) Frequency band 2.4GHz Radiated transmission power max. 2.5mW
Loudspeaker / frequency impedance	50mW*2 / 20Hz-20kHz / 32Ω
Bluetooth profile	A2DP / HFP / HSP / AVRCP / CVC
Playtime	~6h (middle volume)
Standby time	~300h
Charging time	~1.5h
Battery	200mAh lithium polymer battery 3.7V
AUX-In	3.5mm jack
Charging interface	Charging via USB type C
Operating temperature	-10°C up to +50°C
Weight / dimension box	155.0g / (L)165 x (W)80 x (H)196mm
Package content	MusicMan® BT-X65, USB type-C charging cable, user manual

## Product details

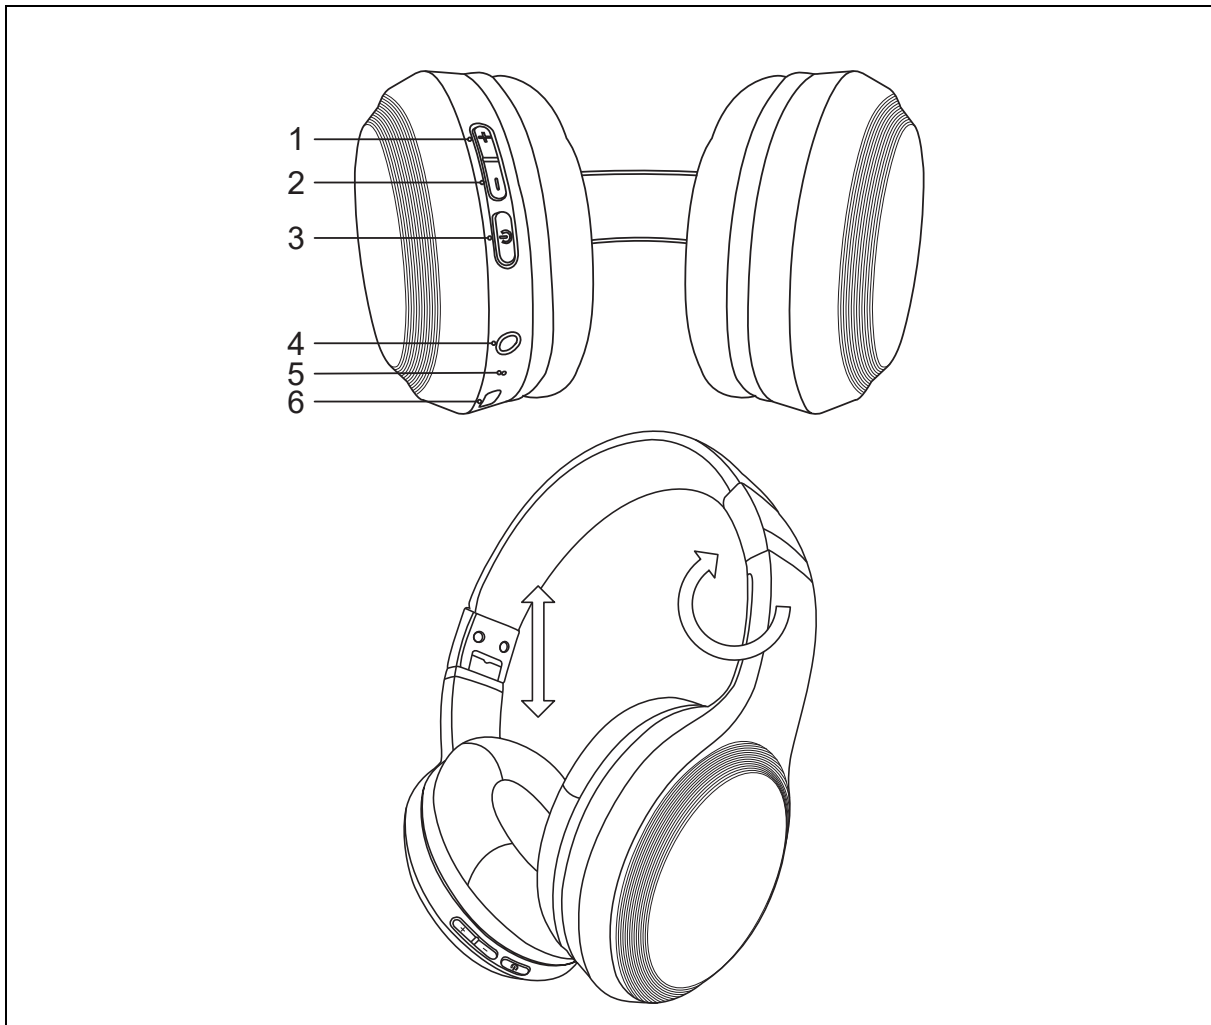

1	Volume +
2	Volume -
3	Power button
4	AUX-In
5	Indication LED
6	USB-C charging port


### First use

Connect the headphone with the USB-C cable and a USB power adapter\* (\*not included in the delivery). Wait until the red indicator led turn blue.

## Bluetooth connection

### Pairing

Power on the BT-X65 headphone. It automatically starts the pairing mode.

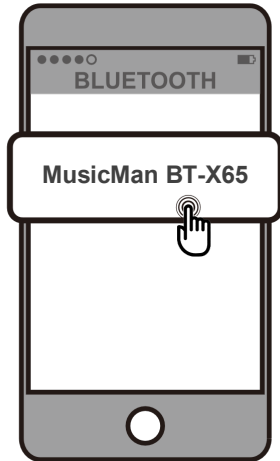

After it prompts power on, the indicator LED flashes red and blue.

Start the Bluetooth scan function with your smartphone / tablet or any other Bluetooth enabled device.

Click on “**MusicMan BT-X65**” in the Bluetooth settings to pair your device with the headphone.

### Reset pairing

Unpair the headphone in BT settings of your smartphone / tablet. It can be connected to another device now.

### Auto reconnection

The BT-X65 headphone will reconnect to the last paired BT-device automatically if its reachable. To change the paired connection to another device, unpair the last connected device.

## **Functions**

### **Power On/Off**

Press and hold the power button for about 3 seconds to turn the headphone on or off.

### **Play/Pause music**

Press the power button to play/pause the music.

### **Next song/Last song**

Press and hold volume up/down for next or return to the previous song.

### **Answer phone calls**

Incoming calls can be answered by single press the power button during the ringing.

### **Hang up calls**

Phone calls can be cancelled by single press the power button.

### **Reject calls (hold 2 sec.)**

To reject calls, hold the power button for 2 seconds.

### **AUX-In**

This headphone can be used by connect an AUX cable to a device and the AUX-In port. Use a 3.5mm jack cable to connect.

Note: Connect to device without power on the headphone.

## **Troubleshooting**

If you cannot connect the headphone to your phone, do as follows:

Ensure that the headphone is charged and in on state. Ensure that the Bluetooth feature is activated on your device. Check that the headphone is within 10m of your phone and that there are no obstructions between the headphone and the phone, such as walls or other electronic devices. Try to use an AUX-In adapter cable to connect it wired. The BT-X65 powers off or does not turn on again could be either a low battery or a problem with the power supply. Charge the BT-X65 and check the battery status of the charging LED. (We suggest charging the BT-X65 all 2–3 month if it is not used for a long time.)

## **Notes**

- Noises are heard from the BT-X65 could be a poor Bluetooth signal. To avoid noise, stay within the Bluetooth range of ~10m.
- While the headphone is charging, no music can be played. This
- Avoid prolonged exposure to excessive volume that may cause noise-induced hearing impairment. ●Turn the volume down before putting on your headphones, then adjust it to the right volume. ●Do not use headphones while driving or riding your bike. ●Stay away from sharp edges, uneven surfaces, metal parts, and anything that could damage the headphones. ●Do not modify, repair or remove headphones without professional guidance. ●Do not use corrosive or volatile liquid to clean the earphone. ●Do not use headphones in dangerous environments.

## Warnings

- Only charge the BT-X65 charging box through the DC 5V USB-C port by using the provided USB-C charging cable. Use a power charging adapter up to DC 5V/1A. Do not charge the BT-X65 with more power!
- If the BT-X65 fails to link to your mobile device or if it fails to play music after being connected, the user shall check if your mobile device supports A2DP / AVRCP.
- Do not disassemble the BT-X65, it may result in short-circuit or damage.
- Battery warning: Improper use of the battery may cause fire or chemical burns. The battery may explode in case of damage. The battery can only be charged using an adapter especially provided for this product.
- Do not drop or shake the BT-X65, it may break internal circuit boards or mechanics.
- Keep the BT-X65 in dry and ventilated environment. Avoid high humidity and high temperature. Also, batteries should not be exposed to excessive heat or direct sunlight.
- This BT-X65 is not water-resistant; keep it away from moisture.
- Keep the BT-X65 away from little children.

## Support

Service phone No. for technical support: **01805 012643\*** (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free Email: **support@technaxx.de**

The support hotline is available Mon-Fri from 9am to 1pm & 2pm to 5pm

## Declaration of Conformity



The EU Declaration of Conformity can be requested at the following address: [www.technaxx.de/](http://www.technaxx.de/) (in the lower bar "Declaration of Conformity").

## Disposal



Disposal of the packaging. Sort packaging materials by type upon disposal. Dispose of cardboard and paperboard in the waste paper. Foils should be submitted for recyclables collection.



Disposing of old equipment (Applies in the European Union and other European countries with separate collection (collection of recyclable materials) Old equipment must not be disposed of with household waste! Every consumer is required by law to dispose of old devices that can no longer be used separately from household waste, e.g. at a collection point in his or her municipality or district. This ensures that the old devices are properly recycled and that negative effects on the environment are avoided. For this reason, electrical devices are marked with the symbol shown here.



Batteries and rechargeable batteries must not be disposed of in household waste! As a consumer, you are required by law to dispose of all batteries and rechargeable batteries, whether they contain harmful substances\* or not, at a collection point in your community/city or with a retailer, to ensure that the batteries can be disposed of in an environmentally friendly manner. \* marked with: Cd = cadmium, Hg = mercury, Pb = lead. Return your product to your collection point with the fully discharged battery installed inside!

Made in China

Distributed by:

Technaxx Deutschland GmbH & Co. KG  
Konrad-Zuse-Ring 16-18,  
61137 Schöneck, Germany