

Lifenaxx® * User Manual

Ceramic heater with decorative fireplace

LX-065

Before using the appliance for the first time, please read the instructions for use and safety information carefully.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or by persons lacking in experience or knowledge, unless they are supervised or instructed on the use of this device by a person responsible for their safety. Children should be supervised to ensure they do not play with this device.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

Enjoy your product. * Share your experience and opinion on one of the well-known internet portals.

Specifications subject to change without notice - please make sure you are using the latest manual available on the manufacturer's website.

Table of Contents

| | | | |
|---------------------------------------|---|--|---|
| Safety instructions..... | 2 | Display..... | 7 |
| Instructions for safe operation | 3 | Package Contents | 7 |
| Disclaimer | 3 | Replacement of the remote-control battery | 7 |
| Product Details | 5 | Support | 8 |
| Technical Specifications | 5 | Care and maintenance | 8 |
| How to use: | 6 | Declaration of Conformity | 8 |
| Using the remote control | 7 | Disposal | 8 |

Important notes at the start

Safety instructions

- Read these operating instructions carefully before using the appliance for the first time.
- Above all, follow the safety instructions!
- The appliance may only be operated as described in these operating instructions.
- Keep these operating instructions in a safe place.
- If you ever pass the appliance on to someone else, please include these operating instructions. The operating instructions are an integral part of the product.
- If the mains connection cable of this product is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified service centre or a similarly qualified person in order to avoid hazards.



DANGER of electric shock due to moisture!

- The appliance must never be operated in the vicinity of a bathtub, shower, filled washbasin or similar.
- The base unit, the connecting cable and the mains plug must not be immersed in water or other liquids.
- Protect the base unit from moisture, dripping and splashing water.
- If liquid gets into the item, disconnect the mains plug immediately. Have the appliance checked before using it again.
- Do not operate the appliance with wet hands.
- If the appliance has fallen into water, unplug it immediately. Only then remove the appliance from electric shock due to moisture.



Instructions for safe operation

- Instructions for safe operation: Children must not use the appliance.
- Keep the appliance and its connection cable out of the reach of children.
- Cleaning and user maintenance must not be carried out by children.
- Children must not play with the device.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and/or knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children between the ages of 3 and 8 may only switch the product on or off if it has been installed and positioned in accordance with the normal instructions for use and they have been supervised and adequately instructed in its correct and safe use and have understood the possible dangers. Children between the ages of 3 and 8 must not connect the product, regulate, clean or carry out maintenance on the product.

Disclaimer

In no event shall Technaxx Deutschland be liable/responsible for any direct, indirect punitive, incidental, special consequential damage, to property or life, improper storage, whatsoever arising out of or connected with the use or misuse of their products. Error messages may appear depending on the environment it is used in.



Danger of electric shock!

- Only insert the mains plug into a socket outlet at when the appliance is fully assembled.
- Only connect the mains plug to a properly installed, easily accessible socket outlet with protective contacts whose voltage corresponds to the information on the rating plate. The socket outlet must remain easily accessible after connection.
- Make sure that the connecting lead cannot be damaged by sharp edges or hot spots. Do not wrap the connecting lead around the device.

- The appliance is not completely disconnected from the mains even after it has been switched off. To do this, you must pull out the mains plug.
- Make sure that the connecting lead never becomes a tripping hazard or that someone can get caught in it or step on it.
- Keep the connecting cable away from hot surfaces (e.g. hotplates).
- When using the appliance, make sure that the connecting cable is not pinched or crushed.
- To remove the mains plug from the socket, always pull on the plug, never on the cable.

Disconnect the mains plug from the socket:

- if a fault occurs
- if you are not using the Device
- before you clean the Device
- during thunderstorms
- Do not use the appliance if there is visible damage to the appliance or the connecting cable.
- To avoid danger, do not make any changes to the appliance.



DANGER for children!

- Packaging material is not a toy for children. Children must not play with the bags. There is a risk of suffocation.

- Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
 - Strictly prohibit to plug-in or off the plug instead of turn on or off the power switch.
 - Do not use this fan heater in the immediate surroundings of a bath, a shower or a swimming pool.
 - Strictly prohibit use the same socket-outlet with other big power appliance.
 - Please put off the plug when nobody is nearby.
 - Strictly prohibit use the heater in where be easy shocked or be toppled.
 - If there is something wrong with the heater, please turn off the machine and put off the plug immediately and send to service agent.
 - Warning: In order to avoid overheating, do not cover the heater.
- Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately. Keep batteries out of the reach of children. Do not allow children to replace batteries without adult supervision. Do not short-circuit batteries. Do not heat batteries. Remove batteries from equipment if it is not to be used for an extended period of time unless it is for emergency purposes. Always select the correct size and type of battery most suitable for the intended use. Information provided with the equipment to assist correct battery selection should be retained for reference. Clean the battery contacts and also those of the equipment prior to battery installation. Ensure that the batteries are installed correctly with regard to polarity (+ and -). Remove exhausted batteries promptly. Do not dismantle batteries. Do not

dispose of batteries in fire except under conditions of approved and controlled Incineration. Batteries may be disposed of via communal refuse arrangements provided no local rules to the contrary exist.



The meaning of figure in marking is “WARNING: DO NOT COVER”.

- The heater must not be located immediately below a socket-outlet.
- There is slight sound when turned on or off, which is normal due to the material expanding when heated and contract when cooled, please do not be worried.
- The used heating element treated by a special way, it has a long using life, please do not use any other heating element instead of it.
- This appliance only for household use.
- WARNING: Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- Do not use this heater if it has been dropped.
- Do not use if there are visible signs of damage to the heater.
- Use this heater on a horizontal and stable surface,

WARNING: To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.

WARNING of material damage

- Only place the appliance on a flat, dry, non-slip and waterproof surface, as the appliance cannot fall over or slide down.
- Do not place the device on a hot surface, e.g. hotplates.
- Do not use harsh or abrasive cleaning agents.

 
Product Details

Technical Specifications

| | | | |
|---|--|---|---|
| Modell | LX-065 | Item no. | 5337 |
| Seasonal space heating energy efficiency in active mode | $\eta_{S,on}$ 91,5% | Heat output Nominal heat output P_{nom} | 2,0kW |
| Heat output minimum heat output $P_{min.}$ | 1,4kW | Heat output Max. continius heat output $P_{max. C}$ | 2,0kw |
| Auxiliary current consumption: | Nominal heat output el_{max} Not applicable | Minimum heat output el_{min} Not applicable | In standby mode P_{sm} 0,00025 kW |
| Type of heat output/ Room temperature control | electronic | Number of Heating Levels 2 (1400/2000W) | Room heating capacity Approx.. 60m ² (at 2,4m room height) |


| |
|---------------------------------|
| Voltage: 220V-240V~, 50Hz |
| Power: 2000W max. |
| Adjustable Temperature: 18-45°C |
| Protection class: II |
| IPX0 |
| Tip prevention: electronic |


How to use:

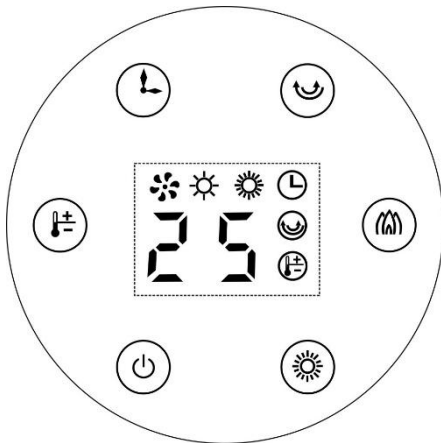
 
 





 

Connect the Plug with a Socket


Turn on the power switch, LED display show “-” ;


Press “” as follows: ON (standby), LED display Environment temperature.

Now you can set a Temperature by pressing “”, if the set Temperature higher than Room Temperature the ceramic heater starts heating.

Or you can press “” one time to start with 1st heating level (1400W) Display show “ ” or 2 times for 2nd heating level (2000W), Display show “  ”

To start or stop “decorative fireplace press “”
You can adjust the timer from 0-8hours by pressing this button “” again.






 
Swing: to start or stop swing function press “”

To Set a temperature you can press “” the range can be adjusted from 18-45°C









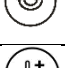
Using the remote control

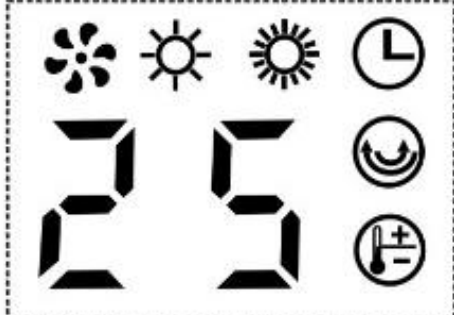

The Symbols are identical to the one used on the Display.

- “” on/off/Standby function
- “” Fan, Heatlevel 1 and 2 (1400/200W)
- “” on/off fireplace
- “” set timer from 1-8 hours
- “” start/stop swing function
- “” Set Temperature 18-45°C in combination with +/- button

Display

| | | |
|--|---|---------------------------|
|  |  | Fan is working |
| |   | 1st Heating level (1400W) |
| |   | 2nd Heating level (2000W) |
| |  | Timer was set |
| |  | Swing function on |
| |  | Temperature was set |

When the appliance is tilted > 50 degree, then the power cut off automatic, the Fan run 30 seconds and stop then.

Package Contents

ceramic heater with decorative fireplace, remote control with battery CR2025, instruction manual


Replacement of the remote-control battery

Before using the remote control, please remove the plastic insulation sheet of the remote control follow the arrow for use; (see Figure 1)

If the battery in the remote control needs to be replaced, refer to Figure 2, the first step is to push out the lock to the arrow 2, the second step is to pull out the cover to

the direction of the arrow 3, you can replace the battery, after replacing the battery, push the cover into the remote control in the opposite direction of the arrow 3, until the arrow 2 locks;

The battery used is button lithium battery (CR2025).

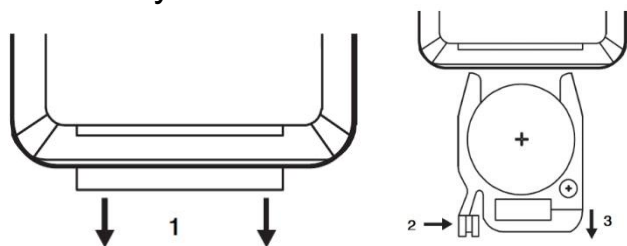

Support

Service phone No. for technical support: **01805 012643** (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free Email: **support@technaxx.de**

The support hotline is available Mon-Fri from 9am to 1pm & 2pm to 5pm

Care and maintenance

Clean the device only with a dry or slightly damp, lint-free cloth.

Do not use abrasive cleaners to clean the device.

Declaration of Conformity



The EU Declaration of Conformity can be requested at the following address: www.technaxx.de/ (in the lower bar "Declaration of Conformity").

Disposal



Disposal of the packaging. Sort packaging materials by type upon disposal.

Dispose of cardboard and paperboard in the waste paper. Foils should be submitted for recyclables collection.



Disposing of old equipment (Applies in the European Union and other European countries with separate collection (collection of recyclable materials) Old equipment must not be disposed of with household waste! Every consumer is required by law to dispose of old devices that can no longer be used separately from household waste, e.g. at a collection point in his or her municipality or district. This ensures that the old devices are

properly recycled and that negative effects on the environment are avoided. For this reason, electrical devices are marked with the symbol shown here.



Batteries and rechargeable batteries must not be disposed of in household waste! As a consumer, you are required by law to dispose of all batteries and rechargeable batteries, whether they contain harmful substances* or not, at a collection point in your community/city or with a retailer, to ensure that the batteries can be disposed of in an environmentally friendly manner. * marked with: Cd = cadmium, Hg = mercury, Pb = lead. Return your product to your collection point with the fully discharged battery installed inside!

Made in China

Distributed by:

Technaxx Deutschland GmbH & Co. KG
Konrad-Zuse-Ring 16-18,
61137 Schöneck, Germany

Ceramic heater with decorative fireplace LX-065