

# Lifenaxx® \* User Manual

## Electric Can Opener LX-062

Before using the appliance for the first time, please read the instructions for use and safety information carefully.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or by persons lacking in experience or knowledge, unless they are supervised or instructed on the use of this device by a person responsible for their safety. Children should be supervised to ensure they do not play with this device.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

***Enjoy your product. \* Share your experience and opinion on one of the well-known internet portals.***

Specifications are subject to change without notice - please be sure to use the latest manual available on the manufacturer's website.

## Table of Contents

Hints .....	2	How to charge .....	6
Safety instructions .....	2	How to use .....	7
Safety rules for rechargeable batteries.....	3	FAQs .....	8
Warnings .....	3	Technical specifications .....	8
Disclaimer.....	4	Support.....	8
Features .....	4	Declaration of Conformity.....	8
Product overview.....	5	Disposal.....	8

## Hints

- Only use the product for purposes due to its intended function
- Do not damage the product. Following cases may damage the product: Incorrect voltage, accidents (including liquid or moisture), misuse or abuse of the product, faulty or improper installation, mains supply problems including power spikes or lightning damage, infestation by insects, tampering or modification of the product by persons other than authorized service personnel, exposure to abnormally corrosive materials, insertion of foreign objects into the unit, used with accessories not preapproved.
- Refer to and heed all warnings and precautions in the user manual.

## Safety instructions

- Do not open pressurized (aerosol-type) cans.
- Do not open cans of flammable liquids such as lighter fluids.
- Do not submerge in water, wash under running water, or wash in dishwasher.
- Keep away from flammable, explosive gas.
- Never touch the product with wet or damp hands.
- The product can only be operated with the voltage described on the sticker.
- Do not place the product on an unstable surface. The unit could be damaged or persons could be injured. Any attachments should be made only in accordance with the manufacturer's instructions or obtained from the manufacturer.
- The cable is sheathed and insulates the current. Do not place any objects on the cable, as this could cause the protective function to be lost. Avoid placing excessive stress on the cable, especially at sockets and plugs.
- Do not insert any objects into the openings of the unit, as current flows in some places and contact may cause fire or electric shock.
- Do not use liquid cleaners or cleaning sprays. The product may only be cleaned with a damp cloth.

- Do not connect any additional devices that are not recommended by the manufacturer.
- Do not use the product in direct sunlight or places where the temperature may exceed 50°C for a long time.
- The blade and the metal gear rotate during operation. Never touch the blade or the metal gear while the machine is in operation.
- Switch off the machine and wait until the blade and the metal gear have come to a complete standstill before cleaning the appliance.

## **Safety rules for rechargeable batteries**

The product uses rechargeable batteries and can go wherever you need them. But ALL batteries can EXPLODE, CATCH FIRE, and CAUSE BURNS if disassembled, punctured, cut, crushed, short-circuited, incinerated, or exposed to water, fire, or high temperatures, so you must handle them with care.

To use the rechargeable batteries safely, follow these guidelines:

- ALWAYS follow local waste and recycling laws when throwing used batteries away.
- ALWAYS use the product to charge the rechargeable batteries.
- NEVER place the rechargeable batteries in a pocket, purse, or other receptacle, especially those containing metal objects.
- NEVER store the rechargeable batteries with hazardous or combustible materials.
- NEVER let the rechargeable battery or battery compartment get wet - before, during, or after installation. (Remember, your product itself is weatherproof, but its interior battery compartment and batteries aren't.)
- NEVER disassemble, cut, crush, puncture, short-circuit, dispose of batteries in fire or water, or expose the rechargeable battery to temperatures above 50°C.

## **Warnings**

- Do not disassemble the product, it may result in short-circuit or damage.
- Battery life-span will decrease with usage. Charge the battery at least once every month to preserve battery in the event the product is not used for long time.
- Battery warning: Improper use of the battery may cause fire or chemical burns. The battery may explode in case of damage
- Do not modify, repair or remove without professional guidance.
- Do not use corrosive or volatile liquid for cleaning.
- Do not drop or shake the device, it may break internal circuit boards or mechanics.
- Keep the device away from little children.


## **Disclaimer**

- In no event shall Technaxx Deutschland be liable for any direct, indirect punitive, incidental, special consequential danger, to property or life, improper storage, whatsoever arising out of or connected with the use or misuse of their products.

## **Features**

- Trendy appearance due to 2-color scheme
- Press the button to start. Cuts cleanly around the side of cans leaving smooth edges. Press the button again to stop.
- Powered by a lithium battery that can be easily recharged with a TYPE-C cable
- Blade cuts along the side of the lid without touching the food inside
- Built-in lid opener for opening cans with relatively high internal pressure


## Product overview

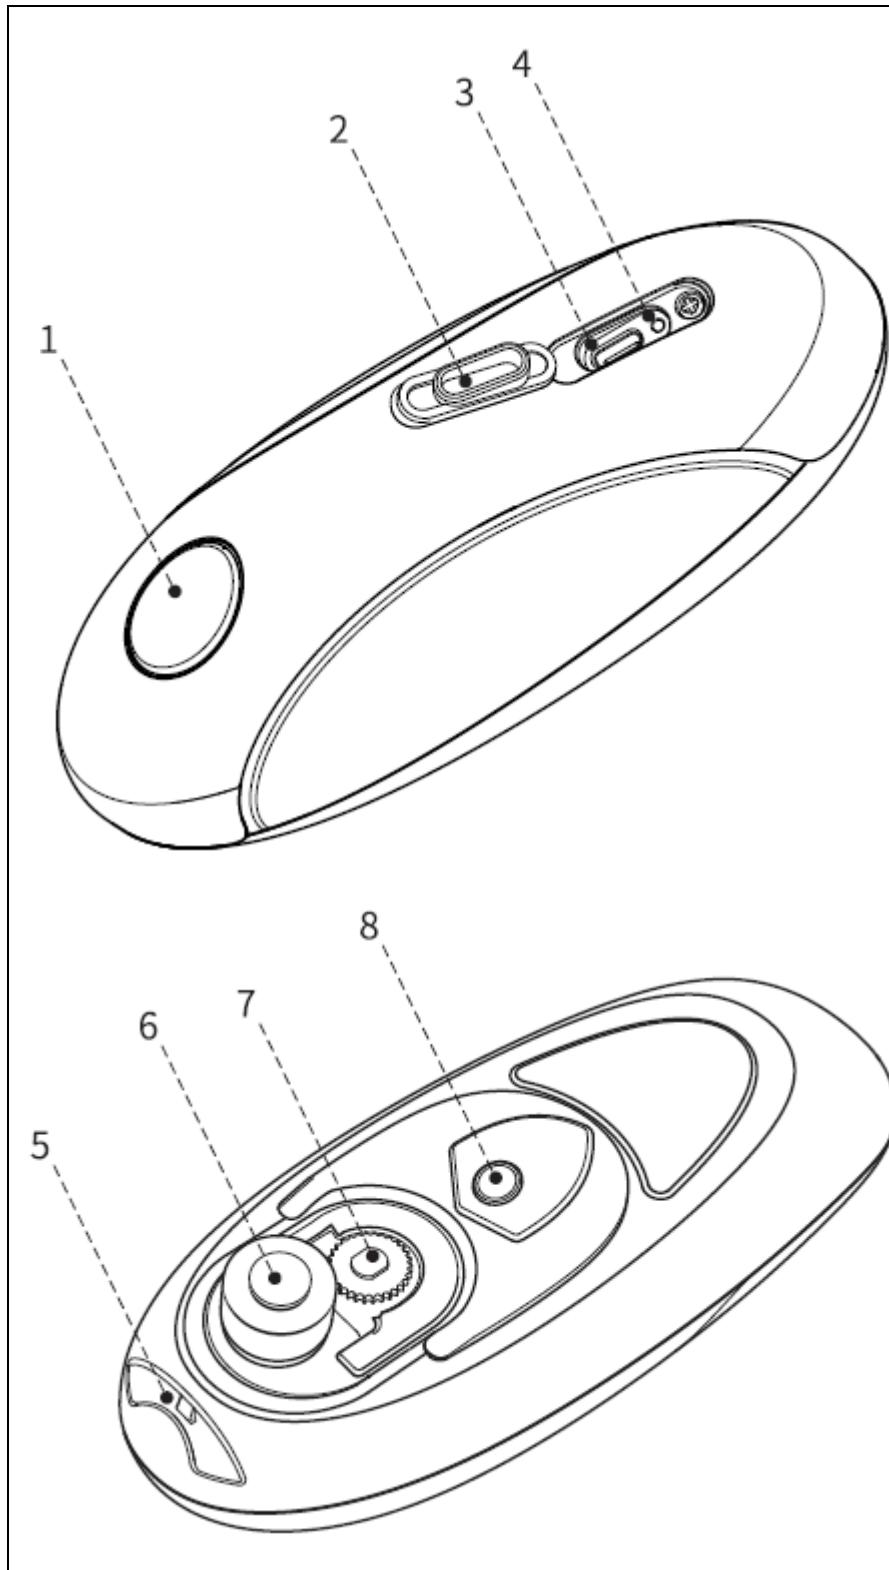

1	ON/OFF Button
2	Dust Cover
3	Charging Socket
4	Charging Indicator
5	Lid Remover
6	Blade
7	Metal Gear
8	Magnet

## How to charge

- Pull out the dust cover, connect the Type-C charging cable to a USB adapter.
- Plug the adapter into a power outlet. Then insert the Type-C connector of the charging cable into the charging port on the device.

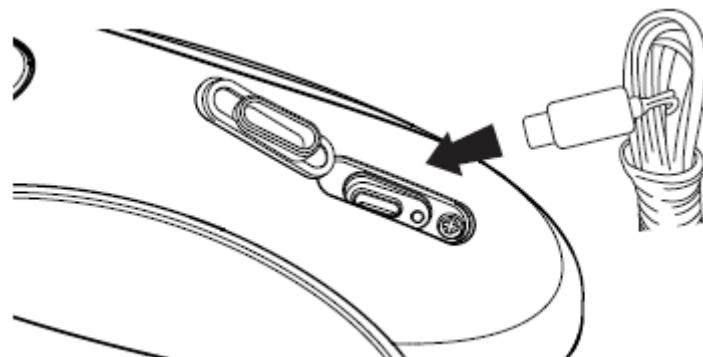


- When charging, the indicator light lights up in white, indicating it is charging normally.
- When the product is fully charged, the indicator light goes off.
- It takes 2 hours to fully charge the battery.

## NOTES

- This is a lithium-battery rechargeable product. When not in use, it is recommended to charge every three months to ensure service life of the battery
- Power adapter is not included with this product. Charge with UL/GS or equivalent safety approved adapters with output voltage of 5V DC
- Before connecting to the power source, ensure the adapter, charging cable plug and the charging port on the device are completely dry
- Always disconnect the device from the power supply if it is to be left unattended
- Before each use, check that the appliance and cord are in good condition. Never use the appliance if the cord is damaged.

## How to use


1. Place the can opener on top of the can, making sure that the can edge is between the blade and the metal gear.

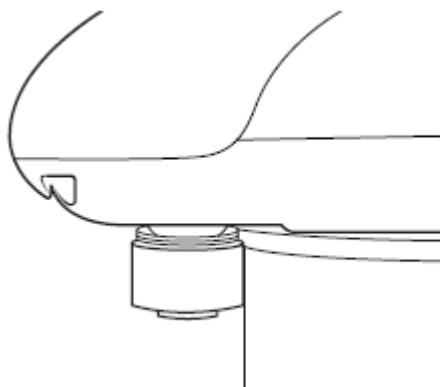

2. Press the button and let it rotate around the can on its own. After one rotation around the can, press the button again to stop. The can opener will automatically detach from the edge of the can.



3. Lift the lid and remove the can opener. If the magnet fails to lift the lid, you can try to pry it open with the lid remover.

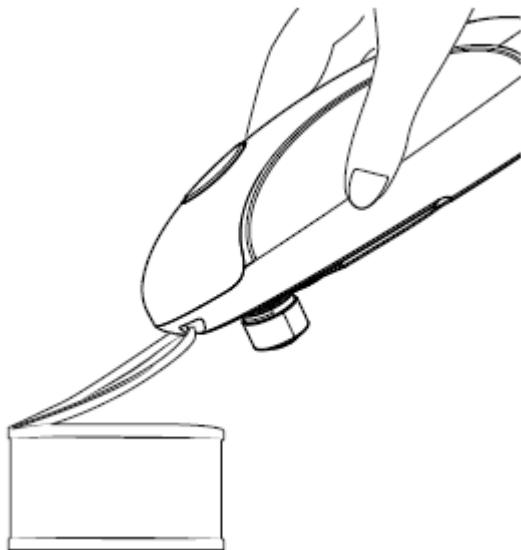

## CAUTIONS

- The blade of the can opener is sharp. Do not touch it with your fingers.
- After one rotation, press the button to stop immediately to prevent excessive cutting that may cause metal to shred.

## FAQs

**Q1:** If the opener does not work or stops during opening the can

**A1.1:** Try again after charging.

(Note: It is not recommended to use the product while charging.)

**A1.2:** Make sure that it is in the right position. Check the can for any dents or bends on the edges. If there are no problems with the can, restart the can opener.

**Q2:** If the lid remover can't pry the lid, it may be some canned food adheres to the lid due to moisture.

**A2:** You can manually lift the lid up to open.

## Technical specifications

Rated power	10W
Power supply	USB-C 5V / 2A
Input power	5W
Battery	Li-Ion 14500, 500mAh, 3.7V
Material	ABS, stainless steel
Weight & Dimensions	320g / (L) 16x (W) 6.4x (H) 6.4cm
Package contents	Electric Can Opener LX-062, USB cable, user manual

## Support

Service phone No. for technical support: **01805 012643** (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free Email: **support@technaxx.de**

The support hotline is available Mon-Fri from 9am to 1pm & 2pm to 5pm  
In the event of anomalies and accidents, please contact:  
**gpsr@technaxx.de**

## Declaration of Conformity



Technaxx Deutschland GmbH & Co. KG hereby declares that the radio equipment type LX-062 Prod. ID.: 5322 is in compliance with Directive 2014/30/EU. The full text of the EU Declaration of Conformity is available at the following internet address: [www.technaxx.de/reseller](http://www.technaxx.de/reseller)

## Disposal



Disposal of the packaging. Sort packaging materials by type upon disposal.

Dispose of cardboard and paperboard in the waste paper. Foils should be submitted for recyclables collection.



Disposing of old equipment (Applies in the European Union and other European countries with separate collection (collection of recyclable materials) Old equipment must not be disposed of with household waste! Every consumer is required by law to dispose of old devices that can no longer be used separately from household waste, e.g. at a collection point in his or her municipality or district. This ensures that the old devices are properly recycled and that negative effects on the environment are avoided. For this reason, electrical devices are marked with the symbol shown here.



Batteries and rechargeable batteries must not be disposed of in household waste! As a consumer, you are required by law to dispose of all batteries and rechargeable batteries, whether they contain harmful substances\* or not, at a collection point in your community/city or with a retailer, to ensure that the batteries can be disposed of in an environmentally friendly manner. \* marked with: Cd = cadmium, Hg = mercury, Pb = lead. Return your product to your collection point with the fully discharged battery installed inside!

Made in China

Distributed by:

Technaxx Deutschland GmbH & Co. KG  
Konrad-Zuse-Ring 16-18,  
61137 Schöneck, Germany

Electric Can Opener LX-062