

LifenaXX® user manual


Electric Wine Opener and Preserver Set LX-064

Before using the appliance for the first time, please read the instructions for use and safety information carefully.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product. Please charge before first usage.

- 2 in 1 electric wine opener with vacuum pump
- Practical storage and charging station
- Complete solution for opening, pouring, aerating and preserving wine

Product Overview

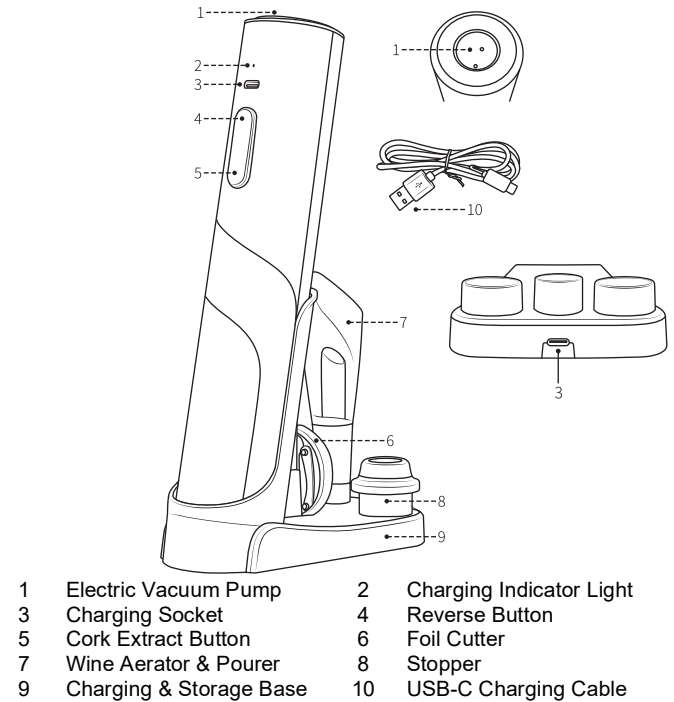

Technical specification

Power	25 W
Battery	3.7 V / 300 mAh; rechargeable
Charging Time	2.5 h
Charging Power	5 V / 2 A
Material	TPE / PMMA / Silicone / ABS / Metall
Dimension	24.5 x 5 x 5 cm; Base 13.6 x 9.7 x 13.3 cm
Package Content	electric wine opener, foil cutter, wine aerator and pourer, 2 stopper, charging station, charging cable, manual

Mounting the Station

Attach the two parts of the base and press down to lock.

Charging Instructions

- Charge via Charging Base**
1. Place the opener on the charging base.
 2. Connect the charging cable with an adapter (5V / 2A) and plug it into the back of the base.
- Charge Directly**
1. Connect the charging cable directly to the opener.
 2. Insert the other end into a power source (5V / 2A).

The indicator light will light up during charging and will go off after fully charged. **Note:** Unplug the charging cable after battery is charged.

How to Use the Wine Opener

Cut the Foil:

Place the foil cutter on the bottleneck and rotate left and right to cut off the foil seal. **CAUTION:** Sharp blades!

Place the Opener:

Hold the bottle with one hand and the opener with the other. Place the bottom end of the opener on the bottleneck, ensuring it stays upright and centered.

Extract the Cork from a Bottle:

Press and hold the extract button. Lightly press the opener downward, and the cork will be pulled out automatically. Once fully extracted, the opener stops automatically.


Release the Cork from the Opener:

Press the reverse button to remove the cork from the opener.

Note: The product is suitable for corks with a diameter of 20-24 mm and a height of 44 mm. Ensure the wine bottle and opener are both held firmly. Proper alignment is necessary for easy cork removal.

How to Use the Wine Aerator & Pourer

1. Insert the aerator & pourer into the bottleneck.
 2. Tilt the bottle to pour wine through the aerator.
- Note:** This product is suitable for wine bottles with an inner diameter of 17.5 mm to 19.5 mm. Do not cover the hole on the aerator to ensure proper aerating and pouring.

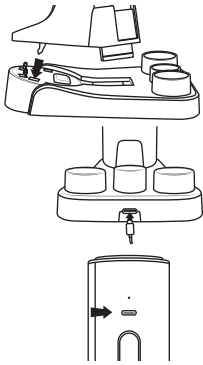

How to Use the Electric Vacuum Pump

1. Insert the stopper into the bottleneck.
 2. Place the vacuum pump firmly on the stopper. Press and hold the pump against the stopper until the air is pumped out. The pump will stop automatically when finished.
 3. Mark the sealing date on the stopper by twist the outer ring to current date.
 4. Store the bottle in a wine cabinet or refrigerator for best preservation (recommended consumption within 7 days). To re-open, press the valve to open the seal, then remove the stopper.
- Note:** Suitable for wine bottles with an inner diameter of 18-19 mm. Do not store wine bottles horizontally when using the stopper.

CAUTION



- Keep children away from the device.
- Never reach into the rotating corkscrew. RISK OF INJURY!
- Keep away from flammable and explosive materials.
- Do not throw in fire – it will explode due to built-in battery.

Safety instructions

- Observe the safety instructions during use.
- Any modification or alteration of the product will affect the safety of the product. Caution risk of injury!
- All changes and repairs to the product or its accessories may only be carried out by the manufacturer or by persons expressly authorized by the manufacturer.
- Never open the product without authorization.
- Never carry out repairs yourself!
- Handle the product with care. It can be damaged by shaking or falling from a small height.
- Never immerse the product in water or other liquids.
- Technical changes and errors reserved.

Support

Service phone No. for technical support: **01805 012643** (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free Email: **support@technaxx.de**
The support hotline is available Mon-Fri from 9 am to 1 pm & 2 pm to 5 pm.

Cleaning and maintenance

- Clean the equipment regularly with a moist cloth. Do not use cleaning agents or solvents.
- Ensure that no water can seep into the plugs. The ingress of water into an electric device increases the risk of an electric shock or damage of the device.

Made in China

Distributed by:
Technaxx Deutschland GmbH & Co. KG
Konrad-Zuse-Ring 16-18,
61137 Schöneck, Germany