

MusicMan® * User Manual

Bluetooth Speaker BT-X61

Before using the appliance for the first time, please read the instructions for use and safety information carefully.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or by persons lacking in experience or knowledge, unless they are supervised or instructed on the use of this device by a person responsible for their safety. Children should be supervised to ensure they do not play with this device.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

Enjoy your product * Share your experience and opinion on one of the well-known internet portals.

Specifications are subject to change without notice - please be sure to use the latest manual available on the manufacturer's website.


Features

- Bluetooth V5.3
- TWS function – connect two BT-X61 speakers
- USB drive playback
- Integrated FM-radio
- Built-in microphone for phone calls
- MicroSD slot for up to 32GB
- Line-In function

Technical specifications

Bluetooth version	V5.3
Bluetooth	Transmitting distance ~10m (open space) Frequency band 2.4GHz Radiated transmission power max. 2.5mW
Functions	Bluetooth, AUX-IN, USB, MicroSD, FM-radio
Loudspeaker output power / size / frequency / impedance	2x 5W / Ø45mm / 168Hz-18kHz / 3Ω
Audio codec	BR, EDR, BLE
Radio frequency	87.5-108MHz
Audio jack	3.5mm
USB / MicroSD supported storage	Up to 32GB (FAT32)
USB / MicroSD file type	MP3
Playtime	Up to 10h (middle volume)
Standby time	1 Month
Charging time	Approximate 4h
Power supply	5V / 1A
Battery	1800mAh lithium polymer battery 3.7V
Charging interface	USB-C
Operating temperature	-10°C up to +50°C
Material	ABS plastic, silicone, fabric
Weight / dimension	320g / (L)6.7 x (W)6.7 x (H)16.6 cm
Package content	MusicMan® BT-X61, charging cable, user manual

Product overview

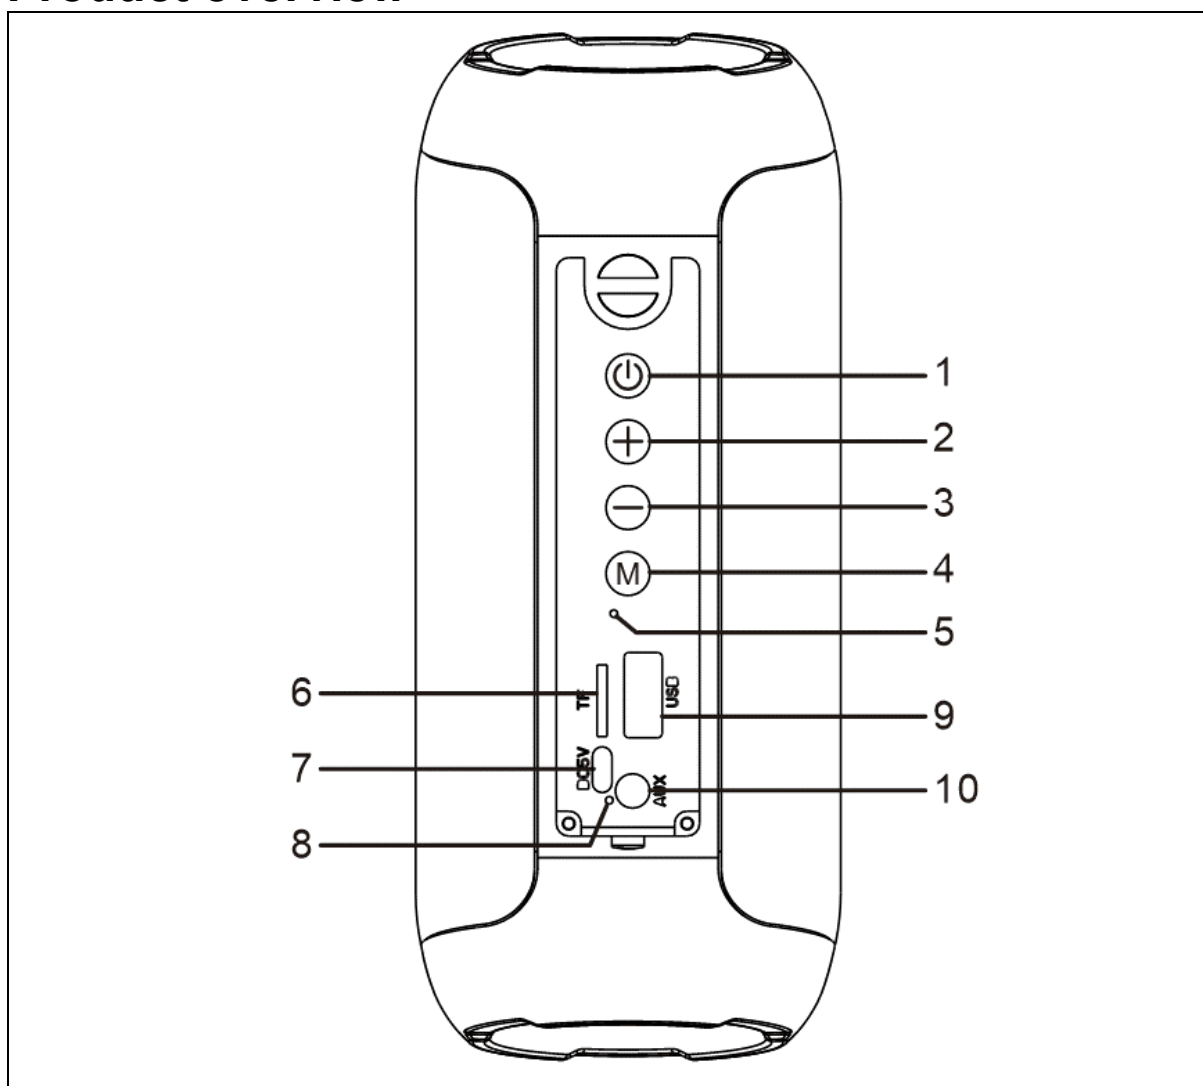

1	Power On / Off / Play / Pause	2	Next / Volume +
3	Previous / Volume -	4	Mode button / call mode / TWS mode
5	Microphone	6	MicroSD slot
7	Charging port (USB-C)	8	Charging and indicator LED
9	USB port (Data only)	10	AUX-IN

Charging

Please charge the BT-X61 fully with the included USB-C charging cable before first use. Plug the charging cable into the USB-C port (7) of the speaker, and the other end into a USB jack of a power-charger* (5V/1A recommend, *not included).

The LED indicator will light up. It turns off when it is fully charged. (We recommend to turn off the speaker while charging, otherwise, it will take longer time). It is fully charged after approximate 4 hours.

Warning: The device does not have power bank function. It is forbidden to charge other devices or to connect other devices with a USB cable than USB flash drive. It can occur unrepairable damage.

Button settings

- 1) Power on/off button: Press and hold to power on /power off; short press to Play/Pause. In FM mode, short press this button to search the stations. Double-click to callback the last phone number.
- 2) +: Volume + / next track button: Press and hold to volume up; short press to next track. In FM mode, short press this button to next station.
- 3) -: Volume - / previous track button: Press and hold to volume down; short press to previous track. In FM mode, short press this button to previous station.
- 4) M button: Press to change the modes: Bluetooth / FM / Micro-SD / USB / Aux-in. Double-click to enter or exit TWS mode.

Modes

Bluetooth

After power on the speaker, it is automatically in the paring state (blue flashing indicator LED). To pair the speaker with your smartphone, tablet or PC, start the Bluetooth search function on your device and connect it with “**MusicMan BT-X61**”.

The speaker will automatically reconnect the last paired device if it is reachable. It will shut down automatically after 10 minutes if no connection occurs.

Play music from USB stick or MicroSD card

After turn on the speaker, insert USB flash drive into the USB port (9) or a MicroSD card into the MicroSD slot (6) under the cover. The speaker will play the stored music automatically if it is in on state.

Under playing mode, short press next (2) or previous (3) button to select songs. Long press to adjust the volume.

Press play/pause (1) to play or pause music.

Note: Under Bluetooth playing mode, insert USB disk will enter and play the USB / MicroSD automatically. You can press the mode button (4) to switch to Bluetooth mode again.

FM-radio

Under playing mode, short press play/pause button (1) to auto search the FM channels. They will be stored automatically in the order of occur. The order of the saved channels cannot be changed.

Short press next (2) or previous (3) button to change the stored FM channel.

Note: To improve FM radio reception, connect the USB-C charging cable (included) to the charging port.

TWS Function

Turn on two BT-X61 speakers you want to pair. Both speakers have to be in Bluetooth mode without any device connected.

Double-click the “M” button (4) on a speaker. A tone will be audible after paired successfully.

Make Bluetooth connection with your mobile phone to play music by the two paired speakers to create more powerful surround sound effect.

To exit the TWS mode, double-click the “M” button (4) again.

AUX-IN

For other compatible music devices or your MP3/MP4 player, use an audio line cable to connect from the device’s line-out to the Aux-In port (10) of this device, then enjoy.

Note: Skip / play / pause can only be controlled by the external device.

Support

Service phone No. for technical support: **01805 012643*** (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free

Email: **support@technaxx.de**

The support hotline is available Mon-Fri from 9am to 1pm & 2pm to 5pm

Care

Clean the device only with a dry or slightly damp, lint-free cloth.

Do not use abrasive cleaners to clean the device.

Notes

●Noises are heard from the BT-X61 could be a poor Bluetooth signal. To avoid noise, stay within the Bluetooth range of ~10m. ●Avoid prolonged exposure to excessive volume that may cause noise-induced hearing impairment. ●Turn the volume down before start play with any sound source, then adjust it to the right volume.

Warnings

●Do not disassemble the BT-X61, it may result in short-circuit or damage. ●Battery warning: Improper use of the battery may cause fire or chemical burns. The battery may explode in case of damage. ●Do not modify, repair or remove without professional guidance. ●Do not use corrosive or volatile liquid for cleaning. ●Do not drop or shake the BT-X61, it may break internal circuit boards or mechanics. ●Keep the BT-X61 in dry and ventilated environment. Avoid high humidity and high temperature. Also, batteries should not be exposed to excessive heat or direct sunlight. ●Do not expose to water or rain. ●Keep the BT-X61 away from little children.

Declaration of Conformity



The EU Declaration of Conformity can be requested at the following address: www.technaxx.de/ (in the lower bar "Declaration of Conformity").

Disposal



Disposal of the packaging. Sort packaging materials by type upon disposal.

Dispose of cardboard and paperboard in the waste paper. Foils should be submitted for recyclables collection.



Disposing of old equipment (Applies in the European Union and other European countries with separate collection (collection of recyclable materials) Old equipment must not be disposed of with household waste! Every consumer is required by law to dispose of old devices that can no longer be used



separately from household waste, e.g. at a collection point in his or her municipality or district. This ensures that the old

devices are properly recycled and that negative effects on the environment are avoided. For this reason, electrical devices are marked with the symbol shown here.



Batteries and rechargeable batteries must not be disposed of in household waste! As a consumer, you are required by law to dispose of all batteries and rechargeable batteries, whether they contain harmful substances* or not, at a collection point in your community/city or with a retailer, to ensure that the

batteries can be disposed of in an environmentally friendly manner. * marked with: Cd = cadmium, Hg = mercury, Pb = lead. Return your product to your collection point with the fully discharged battery installed inside!

Made in China

Distributed by:

Technaxx Deutschland GmbH & Co. KG

Konrad-Zuse-Ring 16-18,
61137 Schöneck, Germany