

# Technaxx® user manual

## Electric Air Duster Pro TX-391

Before using the appliance for the first time, please read the instructions for use and safety information carefully.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

### Features

- 80W powerful motor
- Perfect for thorough cleaning of fine dust on computers, cameras, keyboards, sofas and cars
- 3 speed control
- 5 attachments for different applications

### Declaration of Conformity

The EU Declaration of Conformity can be requested at the following address: [www.technaxx.de/](http://www.technaxx.de/) (in the lower bar "Declaration of Conformity").

### Disposal

Disposal of the packaging. Sort packaging materials by type upon disposal. Dispose of cardboard and paperboard in the waste paper. Foils should be submitted for recyclables collection.

Disposing of old equipment (Applies in the European Union and other European countries with separate collection (collection of recyclable materials) Old equipment must not be disposed of with household waste! Every consumer is required by law to dispose of old devices that can no longer be used separately from household waste, e.g. at a collection point in his or her municipality or district. This ensures that the old devices are properly recycled and that negative effects on the environment are avoided. For this reason, electrical devices are marked with the symbol shown here.

### Technical specification

Pressure	<100 g/cm <sup>2</sup>
Power	80 W
Speed	100.000 RPM
Working voltage	6.0-8.4 V
Battery capacity	2000 mAh / 7.4 V
Charging input	DC 5 V / 1.5 A (USB Type C port)
Charging time	Approx. 3 h
Running time	Max power 12 min - up to 100 min
Noise level	<90 dB
Working temperature	0-60°C
Material	ABS
Weight / Dimension	310 g / 6.5 x 14.3 x 3.7 cm
Package content	Electric Air Duster Pro TX-391, 5 nozzles, charging cable, user manual

### Product Overview



1	Air inlet	2	Charging port type-C
3	Battery / charging indicator	4	Air outlet
5	Power button / power control		

### Nozzles



### Blowing

- Attach the most suitable nozzle to the front to inflate or clean as required by add and twist clockwise.
- Press and hold the power button (5) to power on the device and press the power control (5) to adjust the airflow in 3 different stages.
- To stop and power off the device, press again the power control (5).

### Charging

- Insert one end of the randomly delivered USB cable into a power adapter (DC5V/1.5A or higher current adapter, not attached), and the other end into the TYPE-C charging interface of the machine to start charging.
- The indicator light will light up red during charging; the indicator light will light up green after fully charged.

### CAUTION

- Do not use as hair dryer.
- Keep your hair away from air inlet. They can be sucked in and cause major injuries.
- Do not use continuously for more than 10 minutes.
- Do not invade water or other liquids.
- Keep the air outlet and inlet clean.
- Do not reach into the air outlet or air inlet.
- Keep children away from the device.
- Keep away from flammable and explosive materials.
- Do not throw in fire – it will explode due to built-in battery.

### Safety instructions

• Observe the safety instructions during use. • Any modification or alteration of the product will affect the safety of the product. Caution risk of injury! • Due to high power, the device may heat up. • All changes and repairs to the product or its accessories may only be carried out by the manufacturer or by persons expressly authorized by the manufacturer. • Never open the product without authorization. • Never carry out repairs yourself! • Handle the product with care. It can be damaged by shaking or falling from a small height. • Never immerse the product in water or other liquids. • If don't use for long period, please recharge and store in dry environment – recharge every 2-3 month. • Do not use during charging. The battery will not hold the power. • Technical changes and errors reserved.

### Support

Service phone No. for technical support: **01805 012643**  
 (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free Email: [support@technaxx.de](mailto:support@technaxx.de)  
 The support hotline is available Mon-Fri from 9 am to 1 pm & 2 pm to 5 pm.

### Cleaning and maintenance

• Clean the equipment regularly with a moist cloth. Do not use cleaning agents or solvents. • Ensure that no water can seep into the plugs. The ingress of water into an electric device increases the risk of an electric shock or damage of the device.

Made in China

Distributed by:  
 Technaxx Deutschland GmbH & Co. KG  
 Konrad-Zuse-Ring 16-18,  
 61137 Schöneck, Germany