

# Technaxx® \* User Manual

## Wireless TV-speaker with base station TX-317

Before using the appliance for the first time, please read the instructions for use and safety information carefully.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or by persons lacking in experience or knowledge, unless they are supervised or instructed on the use of this device by a person responsible for their safety. Children should be supervised to ensure they do not play with this device.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

***Enjoy your product \* Share your experience and opinion on one of the well-known internet portals.***

Specifications are subject to change without notice - please be sure to use the latest manual available on the manufacturer's website.


### Features

- LCD Display
- Bluetooth V5.3
- 10W (2x5W) Loudspeaker
- 3 different sound modes
- Multiple connection points
- Integrated FM-radio
- SOS-function
- 2x Line-Out function at speaker

## Technical specifications

Bluetooth version	V5.3
Wireless connection / BT	Transmitting distance ~10m (open space) Frequency band 2.4GHz Radiated transmission power max. 100mW BT radiated transmission power max. 2.5mW
Functions	TV-Mode, BT-Mode, Radio, SOS
Loudspeaker output power / size / frequency / impedance	2x 5W / Ø52mm / 100Hz-18kHz / 4Ω
S/N	≥ 85dB
Distortion	≤ 0.5%
Radio frequency	87.5-108MHz
Audio interfaces base	3.5mm audio interface / fiber optic interface / coaxial interface
Audio interface speaker	2x 3.5mm audio interface
Play time	Up to 8h (middle volume)
Charging time	Approximate 3h
Power supply	5V / 1A
Battery	2000mAh lithium battery 3.7V
Charging interface	USB-C
Operating temperature	0°C up to +40°C
Material	ABS plastic
Weight / dimension	636 g / 17.4 x 6 x 12.6 cm
Package content	Technaxx® TX-317, power adapter, charging cable, optical cable, audio cable, digital coaxial cable, user manual

## Product overview

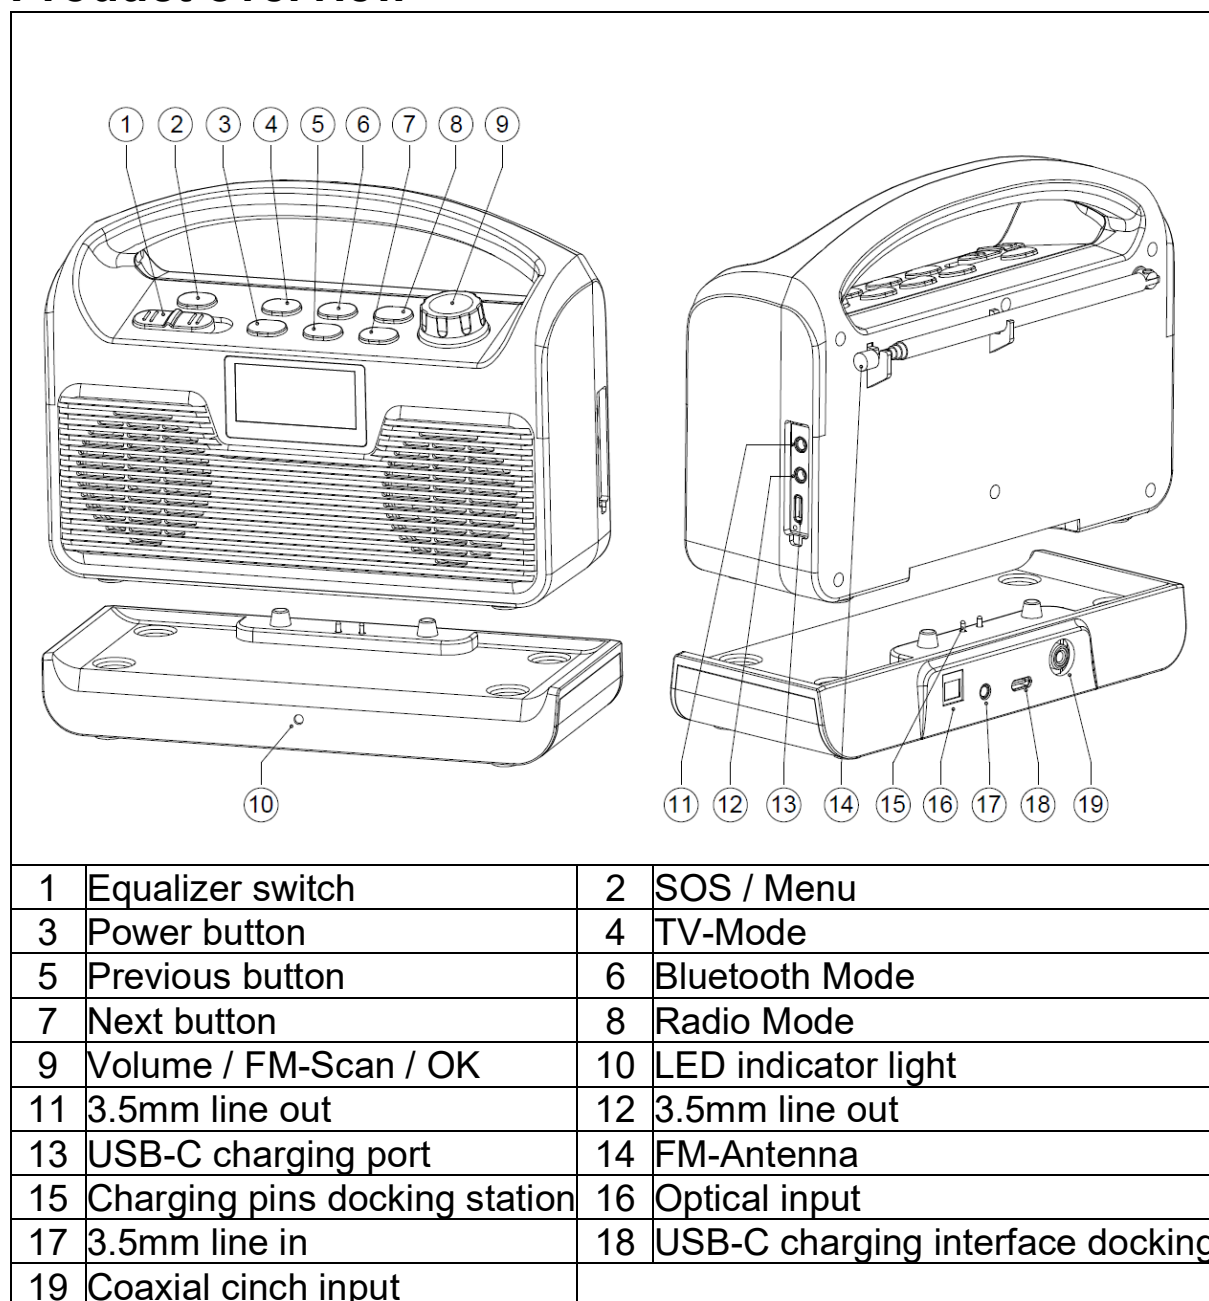

## Set up

Connect the docking station with your TV, by using one of the connection types of the docking station. Following connections can be applied:

- Optical input (16) – connect to optical fiber connection (OPT-OUT)
- 3.5mm line in (17) – connect to headphone output
- Coaxial cinch input (19) – connect to digital ‘SPDIF’ output at TV

**Note:** Use only one type of connection. The TV may need to be set up to use the speaker – refer to your TV manual.

## Charging

Place the TX-317 onto the docking station and connect the charging cable to the USB-C port (18) of the docking station and the other end into the USB port of the power adapter (included) or any USB port with 5V / 1A.

The LED indicator (10) will light up. It is fully charged after approximate 3 hours. The battery status will be displayed. The loudspeaker unit can be charged independent from the docking unit. Just connect a USB-C charging cable to the power input (13) of the speaker unit.

## Power on

Press and hold the power button (3) for 2 seconds to power on the device. To power off the device press and hold the button for 3 seconds.

## Button settings

- Power on/off button (3): Press and hold to power on /power off
- Volume + / - (9): Turn the volume knob left or right.
- Next / previous button (7 / 5): Press to change the radio channel or BT title.
- SOS / Menu (2): Long press activates the SOS Sound. Short press to enter settings.

## Display



1. Mode
2. Battery
3. Current status (TV sound / BT connection / FM channel)

## Modes

### TV-Mode

Connect the docking station like mentioned in “Set up” and press the TV-Mode button (4) to enjoy the sound of your TV.

### Bluetooth

To pair the speaker with your smartphone, tablet or PC, start the Bluetooth search function on your device by press the BT-Mode button (6) and connect it with “**Technaxx TX-317**” from your device.

### FM-Radio

Press radio button (8) to enter FM radio, press and hold scan (9) button to auto search the FM channels. They will be stored automatically in the order of occur. AM-Radio can be entered by press radio (8) again.

**Note:** To improve FM radio reception, retract the antenna (14) to the full length.

## Equalizer

To change the sound output from the speaker, select a preset from the equalizer switch (1):

- Normal – well-rounded sound
- Clear Voice – boosts higher mid-range frequencies
- Concert – boosts sub-bass

## Settings

Press the menu (2) to enter system settings of the TX-317.

Following settings can be changed:

- Language – change the language of the system
- Backlight – sets the time of the display backlight
- Contrast – adjust the visibility of the display
- Voice settings – set the voice prompt on or off
- Factory reset – reset the settings to default
- Firmware version – shows the current used FW-Version

## SOS

In an emergency, press and hold the SOS button (2). A loud sound will be played to draw the attention of others to your emergency.

## Support

Service phone No. for technical support: **01805 012643\*** (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free

Email: **support@technaxx.de**

The support hotline is available Mon-Fri from 9am to 1pm & 2pm to 5pm

In case of accidents with this product, please write to: **gpsr@technaxx.de**

## Care

Clean the device only with a dry or slightly damp, lint-free cloth.

Do not use abrasive cleaners to clean the device.

## Notes

•Noises are heard from the TX-317 could be a poor Bluetooth signal. To avoid noise, stay within the Bluetooth range of ~10m. •Avoid prolonged exposure to excessive volume that may cause noise-induced hearing impairment. •Turn the volume down before start play with any sound source, then adjust it to the right volume.

## Troubleshooting

- No sound: Check the connections; the TV sound may not be set to the selected connection. Turn the volume control - at 0 there is no sound.
- Bluetooth does not connect: Check the device you want to connect; switch on Bluetooth visibility on your playback device.
- No radio reception: Make sure that radio can be received at your location. Check that you are in FM mode on the radio.

## Warnings

•Do not disassemble the TX-317, it may result in short-circuit or damage.  
•Battery warning: Improper use of the battery may cause fire or chemical burns. The battery may explode in case of damage. •Do not modify, repair

or remove without professional guidance. ●Do not use corrosive or volatile liquid for cleaning. ●Do not drop or shake the TX-317, it may break internal circuit boards or mechanics. ●Keep the TX-317 in dry and ventilated environment. Avoid high humidity and high temperature. ●Do not expose to water or rain. ●Keep the TX-317 away from little children.

## Declaration of Conformity



The EU Declaration of Conformity for 5253 / TX-317 can be requested at the following address: [www.technaxx.de/](http://www.technaxx.de/) (in the lower bar "Declaration of Conformity").

## Disposal



Disposal of the packaging. Sort packaging materials by type upon disposal.

Dispose of cardboard and paperboard in the waste paper. Foils should be submitted for recyclables collection.



Disposing of old equipment (Applies in the European Union and other European countries with separate collection (collection of recyclable materials) Old equipment must not be disposed of with household waste! Every consumer is required by law to dispose of old devices that can no longer be used separately from household waste, e.g. at a collection point in his or her municipality or district. This ensures that the old devices are properly recycled and that negative effects on the environment are avoided. For this reason, electrical devices are marked with the symbol shown here.



Batteries and rechargeable batteries must not be disposed of in household waste! As a consumer, you are required by law to dispose of all batteries and rechargeable batteries, whether they contain harmful substances\* or not, at a collection point in your community/city or with a retailer, to ensure that the batteries can be disposed of in an environmentally friendly manner. \* Marked with: Cd = cadmium, Hg = mercury, Pb = lead. Return your product to your collection point with the fully discharged battery installed inside!

Made in China

Distributed by:  
Technaxx Deutschland GmbH & Co. KG  
Konrad-Zuse-Ring 16-18,  
61137 Schöneck, Germany