

Technaxx® * User Manual

Bluetooth Soundbar TX-311

Before using the appliance for the first time, please read the instructions for use and safety information carefully.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or by persons lacking in experience or knowledge, unless they are supervised or instructed on the use of this device by a person responsible for their safety. Children should be supervised to ensure they do not play with this device.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

Enjoy your product * Share your experience and opinion on one of the well-known internet portals.

Specifications are subject to change without notice - please be sure to use the latest manual available on the manufacturer's website.


Features

- Soundbar 2.0
- Bluetooth V5.0
- 2x 15W Loudspeaker
- Remote control
- HDMI-ARC function
- Optical input port
- 2x AUX-In


Technical specifications

Bluetooth version	V5.0
Bluetooth	Transmitting distance ~10 m (open space) Frequency band 2.4 GHz Radiated transmission power max. 2.5 mW
Functions	Bluetooth, HDMI-ARC, OPT-IN, AUX-IN
Loudspeaker output power / size / frequency / impedance	2x 15 W / Ø52 mm / 100 Hz - 20 kHz / 4 Ω
S/N	70 dB
AUX interface	3.5 mm audio jack
Power supply	DC 15 V / 2 A
Stand-by power	< 0.5 W
Material	ABS plastic, metal mesh
Weight / dimension	1050 g / 78 x 6.1 x 6.2 cm
Package content	Technaxx® Bluetooth Soundbar TX-311, remote control, power adapter, user manual

Product overview

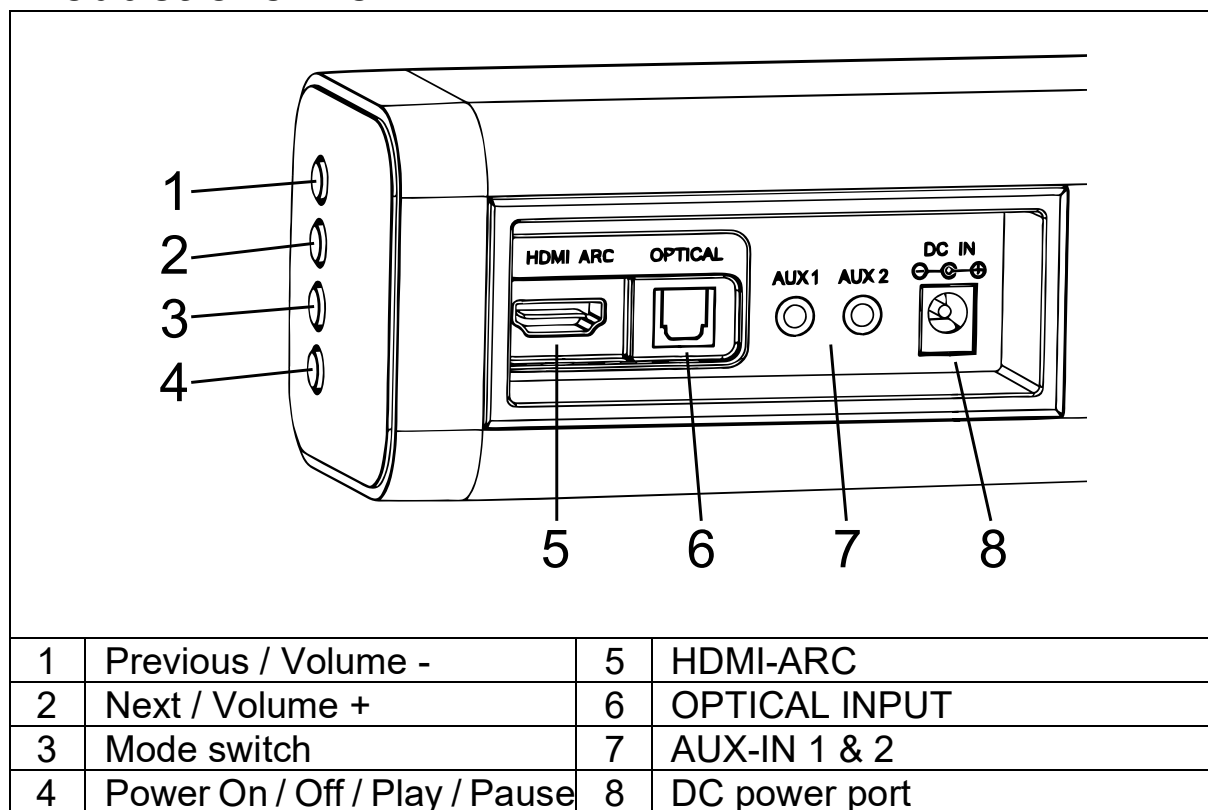

Remote control

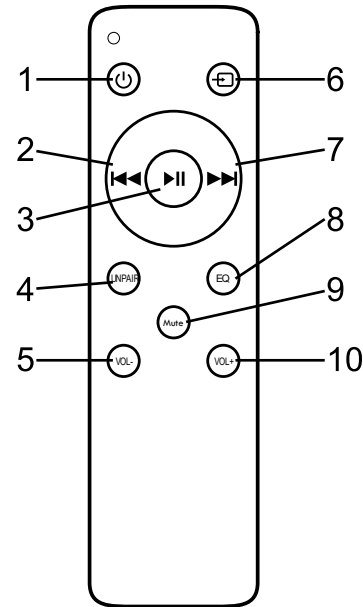1	Power	
2	Previous song	
3	Play / pause	
4	Unpair	
5	Volume -	
6	Mode	
7	Next song	
8	Equalizer	
9	Mute	
10	Volume +	

Button settings

- Power on/off button: Press to power on / power off the device.
- Mode button: Press to change the modes: Bluetooth / HDMI-ARC / OPTICAL / AUX1 / AUX2.
- Mute: The sound will be muted. Press again to reactivate the sound.
- Unpair button: Press to unpair current Bluetooth device. Press again to reconnect last device (If reachable). Note: You have to be in BT-Mode.
- Equalizer: Change the sound settings by press this button, according: Normal, Pop, Rock, Jazz, Classic, Country, Bass.

Power on/off

Connect the DC output of the AC adapter to the DC input port of the soundbar (8) and plug the AC power outlet into the power socket.

Long press the power button (4 at device or 1 at remote) to power on the device, the default will automatically enter the BT mode. Blue light flashes.

Long press the power button (4 at device or 1 at remote) again to shut down.

Modes

Bluetooth

After power on or change the mode of the speaker to Bluetooth mode, it is automatically in the pairing state. The blue light flashes quickly. To pair the soundbar with your smartphone, tablet or PC, start the Bluetooth search function on your device and connect it with **“Technaxx TX-311”**.

The speaker will automatically reconnect the last paired device if it is reachable. To unpair press the “UNPAIR” button (4) at the remote control. To force the device into the pairing mode to add a new device, press and

hold the mode button (3) at the remote or at the device. The Bluetooth connection is successful when the blue light is always on. **Note:** If no device connected to Bluetooth in BT mode, the device shuts down within 15 minutes automatically.

HDMI-ARC

HDMI-ARC (Audio Return Channel) is the best option for getting the best sound quality from your TV. It detects sound level changes with your TV remote. You may need to change some sound settings on your device. Please refer to your device manual for more information. **Note:** Connect the HDMI cable (not included) to the special "HDMI-ARC" port on your device/TV for full compatibility. Otherwise, this connection cannot be used. Use OPTICAL or AUX connector instead.

OPTICAL input

Insert the OPTICAL cable into the fiber input port (6) and connect the other end to the fiber / digital output port on the TV or other external device. You may need to change some sound settings on your device. Please refer to your device manual for more information.

Note: To connect your device / TV with this port, a digital optical cable (not included) is required.

AUX-IN

For other compatible music devices or your MP3/MP4 player, use an audio line cable (not included) to connect from the device's line-out to the Aux-In port (7) of this device.

Note: Skip / play / pause can only be controlled by the external device.

Support

Service phone No. for technical support: **01805 012643*** (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free Email: **support@technaxx.de**

The support hotline is available Mon-Fri from 9am to 1pm & 2pm to 5pm.

Care

Clean the device only with a dry or slightly damp, lint-free cloth.

Do not use abrasive cleaners to clean the device.

Notes

- Noises are heard from the TX-311 could be a poor Bluetooth signal. To avoid noise, stay within the Bluetooth range of ~10m.
- Avoid prolonged exposure to excessive volume that may cause noise-induced hearing impairment.
- Turn the volume down before start play with any sound source, then adjust it to the right volume.

Warnings

- Do not disassemble the TX-311, it may result in short-circuit or damage.
- Do not modify, repair or remove without professional guidance.
- Do not use corrosive or volatile liquid for cleaning.
- Do not drop or shake the TX-311, it may break internal circuit boards or mechanics.
- Keep the TX-311 in dry and ventilated environment. Avoid high humidity and high temperature.
- Do not expose to water or rain.
- Keep the TX-311 away from little children.

Declaration of Conformity



The EU Declaration of Conformity can be requested at the following address: www.technaxx.de/ (in the lower bar "Declaration of Conformity").

Disposal



Disposal of the packaging. Sort packaging materials by type upon disposal.

Dispose of cardboard and paperboard in the waste paper. Foils should be submitted for recyclables collection.



Disposing of old equipment (Applies in the European Union and other European countries with separate collection (collection of recyclable materials) Old equipment must not be disposed of with household waste! Every consumer is required by law to dispose of old devices that can no longer be used separately from household waste, e.g. at a collection point in his or her municipality or district. This ensures that the old devices are properly recycled and that negative effects on the environment are avoided. For this reason, electrical devices are marked with the symbol shown here.

Made in China

Distributed by:
Technaxx Deutschland GmbH & Co. KG
Konrad-Zuse-Ring 16-18,
61137 Schöneck, Germany