

TrendGeek® * User Manual

Bluetooth Gamepad TG-126

The manufacturer Technaxx Deutschland GmbH & Co.KG hereby declares that this device, to which this user manual belongs, complies with the essential requirements of the standards referred to the Directive RED 2014/53/EU. The Declaration of Conformity you find here: www.technaxx.de/ (in bar at the bottom "Konformitätserklärung"). Before using the device the first time, read the user manual carefully.

Service phone No. for technical support: 01805 012643 (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks).

 
Free Email: **support@technaxx.de**

This device has a rechargeable battery. It must be fully charged before first use. NOTE: Charge the battery of the device every 2–3 month if it is not used!

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

Warranty 2 years

Enjoy your product * Share your experience and opinion on one of the well-known internet portals.

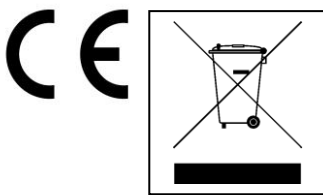

Hints for Environment Protection: Packages materials are raw materials and can be recycled. Do not disposal old devices or batteries into the domestic waste. **Cleaning:** Protect the device from contamination and pollution. Avoid using rough, coarse-grained materials or solvents/aggressive cleaner. Wipe the cleaned device accurately.

 
Distributor: Technaxx Deutschland GmbH & Co.KG, Kruppstr. 105, 60388 Frankfurt a.M., Germany

Features

- Bluetooth 3.0
- Bluetooth range up to 10m
- 30 days standby time (full charged)
- 10 hours continuous play
- Connection with computer via Bluetooth or Micro-USB cable
- Connection with PS3 game console via Micro-USB cable

NOTE: If your computer do not have built-in Bluetooth, you need a Bluetooth-Dongle to connect the device with the computer.

Product overview

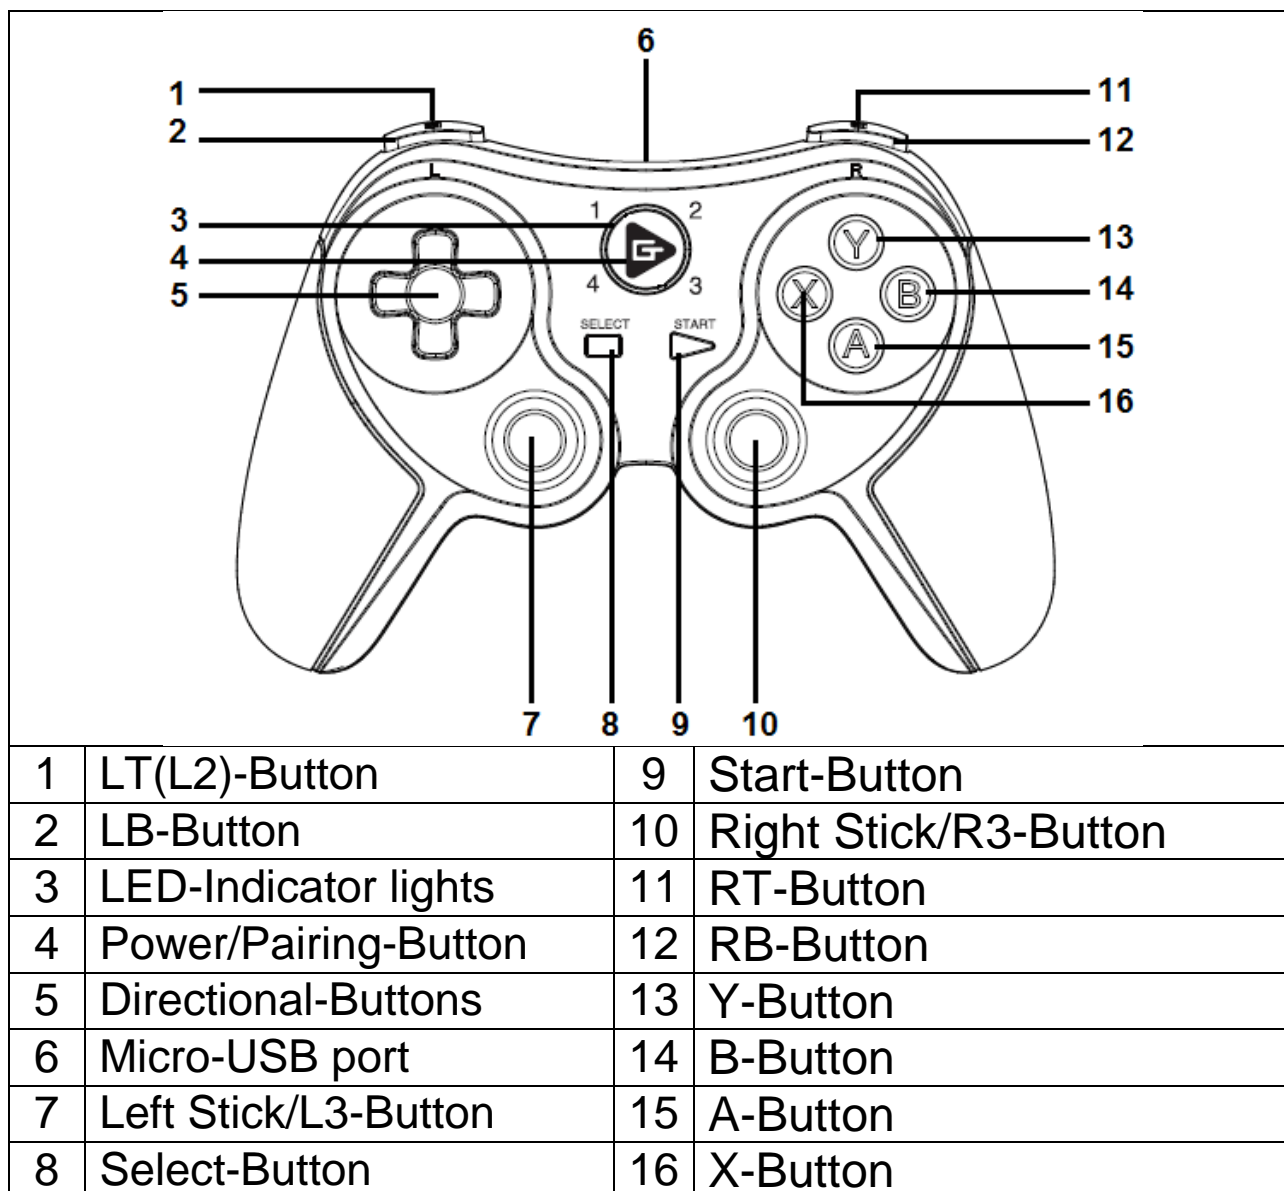

Specifications


Bluetooth	Version 3.0
BT transmitting range	2.4GHz
BT max. radiated output power	1mW
Bluetooth range	Up to 10 Meters
Compatibility	Win7, Win8, Win10
Connection	Micro-USB / Bluetooth / Bluetooth-Dongle (not included)
Weight / Dimensions	206g / (L)17.5 x (W)13.6 x (H)6.6cm
Power supply	Built in rechargeable 380mAh Lithium-Polymer battery
Charging time	~1-2 hours
Battery-Standby	30 days (full charged)
Playing time	Up to 10 hours continuous play
Package contents	TrendGeek TG-126, Micro-USB cable, User manual

Charging and Sleep function




Please connect the device via Micro-USB to a USB interface of your computer. The device is now charging. The four LED-Indicator light flash simultaneously. The lights turn off when the charging is completed. When the battery status is low, the LED-Indicator lights flash rapidly. The device turns into sleep mode, if it is not used within 5 Minutes. Press the Power/Pairing-Button for two seconds to turn the device on again.

 Connect with PS3 Game console by Micro-USB cable

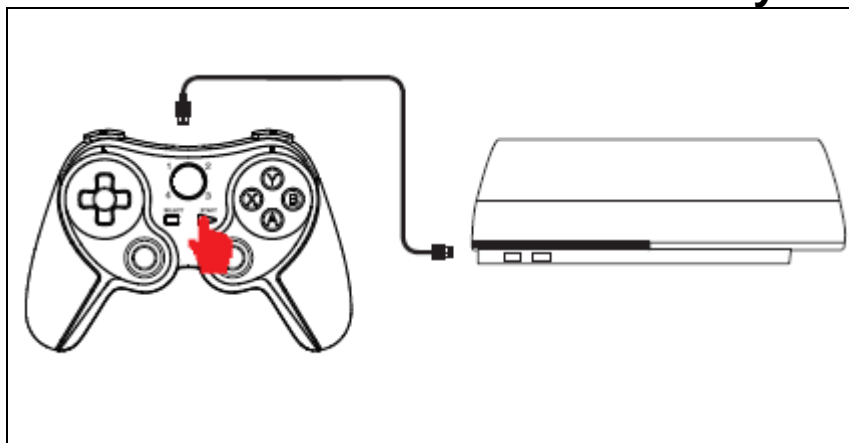

Press the Start-Button on the device and connect it to the console's USB port via the USB cable. The LED-Indicator light shines.

 Connect with Windows Computer by Micro-USB cable

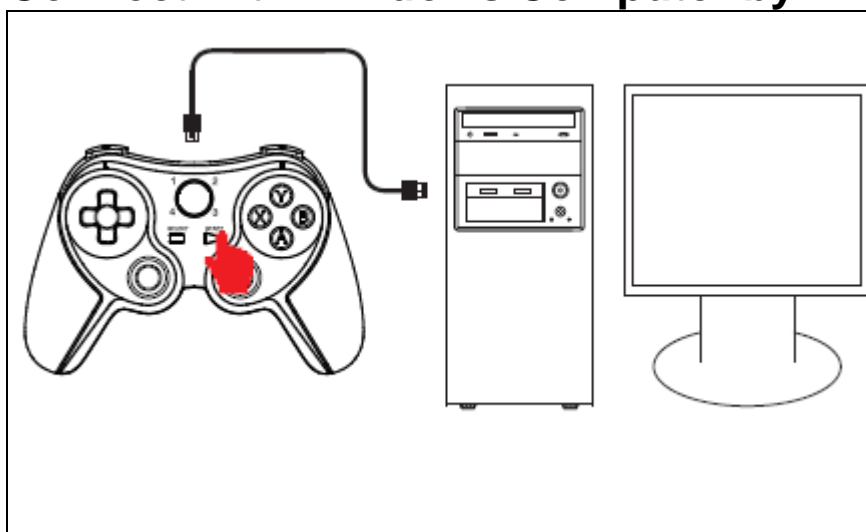

Press the Start-Button on the device and connect it to the computers USB interface via the USB cable.

Connect to Computer via Bluetooth

1. Press and hold the Power/Pairing-Button + X-Button for two seconds until the LED-Indicator light flashes. The device is now in pairing mode. ***Note: (If your computer has Bluetooth function, please go to step 4)***
2. Insert a Bluetooth-Dongle (not included) with Bluetooth 3.0 (or above) version into the USB interface of your computer.
3. After the driver for the Bluetooth-Dongle is installed successfully the Bluetooth Symbol is displayed in the lower right corner of the computer Desktop.
4. Move the mouse to the Bluetooth symbol, click the right button and select «Add device».

5. After selecting «Add device» you can search for TG-126 in the Bluetooth list and click on it with the left mouse button.
6. Click «next» with the mouse and select «Do not use the code to match». It will be automatically added after confirmed. The computer shows that the device is connected. After connection the LED-Indicator light shines. The device is now ready to use.

Hints

- The device is intended exclusively for private and not for commercial use.
- Only use this device as described in this user manual.
- Do not place any part of this device in water or any other liquid.
- Do not handle the device with wet hands.
- When disconnecting the cable, always pull at the plug. Do not pull on the cable itself.
- Do not let the power cord on the edge of a table or work surface.
- Prevent it comes into contact with hot surfaces.
- Keep it away from heat sources to avoid deformation of plastic parts.

Safety instructions

- Rebuilding or modifying the product impairs product safety.
- All modifications and repairs of the device or accessories must be performed by the manufacturer or by persons expressly authorized by the manufacturer.
- Never open the product by yourself. Never perform repairs by yourself!
- Handle the product carefully. It can be damaged by knocks, blows or even by falling from low height.
- Keep the product away from damp, moisture and extreme heat.
- Never immerse the product in water or other fluids.
- Technical specifications are subject to change without notice.
- Never heat the battery above 60°C and do not drop or throw it into the fire! Danger of explosion/fire hazard!
- Do not short-circuit the battery.
- Do not subject the battery to mechanical stress. Avoid dropping, striking, bending, twisting or cutting the battery.
- Discontinue the charging process immediately should the battery become overheated. A battery that becomes overheated or deformed during the charging process is defective and should no longer be used.
- Never drain the battery completely, as this shortens its lifetime.
- If the battery must be stored, it is recommended that it be stored at 30% of its loading volume. Store out of direct sunlight. Ideal storage temperature: 10–20°C.
- Keep the product away from little children.