 





PAW Patrol  
Kids-Cam

Manual

## Product overview:

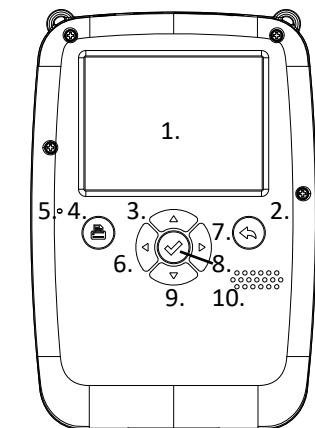

 1. Screen
2. Back
3. Top
4. Print
5. Charging LED
6. Left
7. Right
8. Confirm
9. Bottom
10. Speakers
11. Flap opening of the printing paper
12. On/Off
13. Micro USB input
14. MicroSD card slot
15. Reset

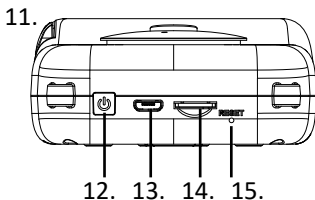

## Turning the Kids Cam on/off:

To switch the Kids-Cam on and off, press and hold the on/off button (12) for 3 seconds.


## **Battery charge:**

Please only under adult supervision!

- Carefully insert the narrow end of the supplied charging cable into the micro USB input (13).
- Connect the large end to the power socket using a conventional USB socket (on a computer or a commercially available USB charging adapter).
- After the camera is fully charged, please remove the charging cable from the power source first, then from the camera.

## **Insert memory card:**

Insert a MicroSD card as shown in the illustration until it clicks into place.

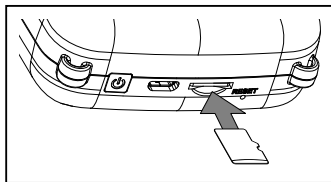

Memory cards up to 32 GB are supported.

Note: A memory card is required to take pictures and record videos.

## **Take photos and record videos:**

Pressing the back button (2) opens the menu. There, you can select the options Photo or Video. Use the Confirm option (2) to select.

The motif is displayed on the screen.

You can also switch between modes by pressing the Left button (6).

- Trigger photos and videos with Confirm (8).

## **Photo-Filter:**

Using the right button (7) of the selection cross, you can activate and deactivate the filter function in photo or video mode. Change filter with Up and Down (3/9).

## **Gallery:**

Open the gallery in the menu or switch to the recordings using the Left button (4).

- Press the Right button (7) to delete the picture/video.
- Press to select the Top/Bottom options (3/9).

### **Printing images:**

- Images can be printed out by pressing the print button (4) immediately after taking the picture
- or by selecting an image in the playback mode to be printed again.



### **Loading pictures and videos onto the computer:**

When connected to a computer, the images and videos created can be downloaded from the microSD card to the computer. Connect the charging cable to the computer and the camera as you would to perform the charging process. Switch on the camera - now it is recognised as a removable storage device and the images or videos can be loaded onto the computer.

Note: Pressing the Back button (2) toggles between Removable Disk Mode or Webcam Mode.

## Refill printing paper:

- Switch off the camera.
- Open the print paper flap (11) by pulling the lever.
- Remove the empty cardboard tube.
- Remove the first 20cm of the new paper roll.
- Ensure the correct orientation of the new paper roll.
- Insert the paper roll and hold the top while closing the flap.

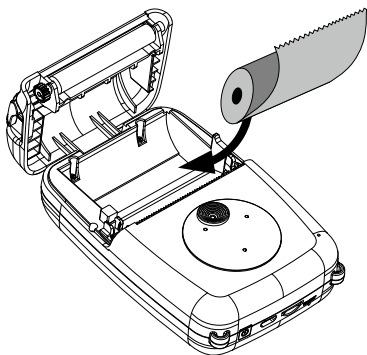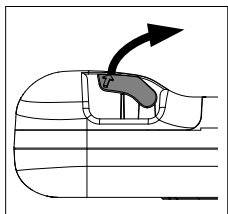

Paper roll dimensions:  $57.5 \pm 0.5$  mm (W) /  
 $\varnothing$  max. 30 mm

## **Modes:**

- Photo ● Video ● Playback ● Game ● System

Photo:                Photos can be taken here.

Video:               Videos can be created here.

Playback:           Here you can see the photos and videos.

Game:                “Snake” - Collect the food and points.  
Grow, but don't hit your own body.  
Control using the selection cross:  
keys 3,6,7,9.

System:              Settings for the KIDS CAM

## **System settings:**

- Resolution: HD/FHD (1280x720/30fps; 1920x1080/30fps)
- Picture quality: Image quality selection
- Print resolution: 6 pressure intensities adjustable
- White balance: Adjust lighting conditions
- EV: Adjust exposure manually (-2.0 to 2.0)
- Sound: Selection to include sound
- Date stamp: Shows date and time on the image
- Key tone: Key tones switch on/off
- Time setting: Set system time
- Switch off automatically: 1, 3 minutes or off
- Language: Change system language
- Frequency: 50 Hz/60 Hz
- Format: Deletes all files on the microSD card
- Reset system: Resets the system to factory settings



## **Technical specifications:**

- Image sensor: 1 Megapixel
- Image size:  
12M:4032x2880; 10M:4032x2520; 8M:3800x2160;  
5M:3200x1800; 3M:2560x1440; 2M:1920x1080  
(interpolated); 1M:1280x720
- Videoclip: 1280x720/30fps; 1920x1080/30fps  
(interpolated)
- File format: JPG/AVI
- Lens:  $f=3.0\text{mm}$ ; F/NO 2.4; FOV=62°
- Memory: External memory (MicroSD card,  
class 6, up to 32 GB, FAT32)
- PC interface: Micro USB2.0
- Power supply: Li-Ion battery, 1000 mAh / 7.4 V
- Screen: 2.4"/6.0cm TFT
- Print resolution: 200 DPI
- Print speed: 6-8 Seconds/image
- Paper roll dimensions:  $57.5 \pm 0.5 \text{ mm}$  (W / Ø  
max.30mm)
- Product dimensions:11.5(H) x 7.9(W) x 3.5(D) cm
- Product weight: 200 g
- Package contents: Manual, charging cable, 3x paper  
rolls, Kids-Cam

## **WARNINGS AND SAFETY INSTRUCTIONS:**

- Explain to the child how to use the product before using it for the first time.
- This unit has a rechargeable battery. It must be fully charged before the first use.
- Never apply pressure to the screen.
- Keep packaging parts away from children. They are not part of the toy.
- Risk of burns from battery acid! The battery can be life-threatening if swallowed. In case of contact with battery acid, rinse the affected area with clean water and consult a doctor immediately!
- Conversion or modification of the product affects product safety.
- All modifications and repairs to the appliance or accessories must be carried out exclusively by the manufacturer or by persons expressly authorised by the manufacturer.
- Independent opening of the product and carrying out any repairs are not permitted! Handle the unit with care. It can be damaged by knocks, blows or even by falling from a low height.
- Keep the product away from moisture, wetness, and extreme heat.
- Never immerse the product in water or other liquids.
- Technical specifications are subject to change without notice.
- Never drop or heat the battery above 60 °C, or throw it into a fire. Risk of explosion/fire!
- Do not short-circuit the battery terminals.
- Do not subject the battery to mechanical stress. Do not drop the battery, subject it to shocks, bend, twist or disassemble it.
- If the battery overheats, stop charging immediately. A battery that overheats or becomes deformed during charging is defective and should no longer be used.
- Never fully discharge the battery, as this will shorten its useful life.
- If the battery needs to be stored, it is recommended that it be stored with 30% of its charge capacity. Keep it protected from direct sunlight. Ideal storage temperature: 10-20°C.
- Keep the product away from small children. **WARNING!** Not suitable for children under 36 months. Danger of suffocation!

## **DISPOSAL:**

### **Waste electrical equipment from private households**

- If you no longer have any use for the device, return it free of charge to a public collection point designated for old electrical devices or free of charge to a retailer.
- Waste electrical equipment must not be placed in the residual waste under any circumstances.



Disposal of the packaging.

Dispose of the packaging according to type.

Dispose of cardboard and carton in the waste paper. Foil to the recyclables collection.



Dispose of old device (Applies in the European Union and other European countries with separate collection (collection of recyclable materials)). Old devices must not be disposed of with household waste! Every consumer is required by law to dispose of old devices that can no longer be used separately from household waste, e.g. at a collection point in his or her municipality or district, or free of charge at a retailer. This ensures that the old equipment is properly recycled and that negative effects on the environment are avoided. For this reason, electrical appliances are marked with the symbol shown here.



As a consumer, you are required by law to return all batteries and rechargeable batteries, whether they contain harmful substances (\*) or not, to a collection point in your community / city or free of charge in the trade, so that they can be disposed of in an environmentally friendly manner.

\* marked with: Cd = cadmium, Hg = mercury, Pb = lead. Return your product with installed battery and only in discharged condition to your collection point!



The EU declaration of conformity can be downloaded from the address [www.technaxx.de/](http://www.technaxx.de/) (in the bottom bar "Declaration of conformity") can be requested.

Telephone number for technical service: 01805 012643 (14 cents/minute from a German landline and 42 cents/minute from mobile networks).

Free e-mail: **support@technaxx.de**

The support hotline is available Mon-Fri from 9 am to 1 pm and 2 pm to 5 pm!

Keep the operating instructions in a safe place for future reference or for passing on the product. Proceed in the same way with the original accessories of this product. In the event of a warranty claim, please contact the dealer or retail store where you purchased this product.

**Distributor:** Technaxx Deutschland GmbH & Co. KG,  
Konrad-Zuse-Ring 16-18, 61137 Schöneck, Germany.

**License:**

©2022 Spin Master Ltd. PAW PATROL and all related titles, logos, characters; and SPIN MASTER logo are trademarks of Spin Master Ltd. Used under license. Nickelodeon and all related titles and logos are trademarks of Viacom International Inc.

