

Lifenaxx® * User Manual

Electric Coffee Grinder LX-063

Before using the appliance for the first time, please read the instructions for use and safety information carefully.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or by persons lacking in experience or knowledge, unless they are supervised or instructed on the use of this device by a person responsible for their safety. Children should be supervised to ensure they do not play with this device.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

Enjoy your product. * Share your experience and opinion on one of the well-known internet portals.

Specifications are subject to change without notice - please be sure to use the latest manual available on the manufacturer's website.

Table of Contents

Hints	2	How to adjust grinding coarseness	6
Safety instructions	2	How to use	7
Safety rules for rechargeable batteries.....	3	FAQs	9
Warnings	3	Technical specifications	9
Disclaimer.....	4	Support.....	9
Features	4	Declaration of Conformity	10
Product overview.....	5	Disposal.....	10
How to charge	6		

Hints

- Only use the product for purposes due to its intended function
- Do not damage the product. Following cases may damage the product: Incorrect voltage, accidents (including liquid or moisture), misuse or abuse of the product, faulty or improper installation, mains supply problems including power spikes or lightning damage, infestation by insects, tampering or modification of the product by persons other than authorized service personnel, exposure to abnormally corrosive materials, insertion of foreign objects into the unit, used with accessories not preapproved.
- Refer to and heed all warnings and precautions in the user manual.

Safety instructions

- Do not immerse this product in water or any other liquid to avoid damage to the product and personal injury.
- This product is only intended for grinding roasted coffee beans. Do not use it for other purposes.
- Do not apply excessive force when rotating the grinder or attempting to speed up the grinding process to avoid damaging the product.
- Keep fingers or any other body parts away from the grinding core during use to prevent injury.
- Do not attempt to disassemble this product, as unauthorized disassembly will void the warranty.
- Do not use this product near flammable or explosive gases, high temperatures, or in hazardous environments.
- Never touch the product with wet or damp hands.
- The product can only be operated with the voltage described on the sticker.
- Do not place the product on an unstable surface. The unit could be damaged or persons could be injured. Any attachments should be made

only in accordance with the manufacturer's instructions or obtained from the manufacturer.

- The cable is sheathed and insulates the current. Do not place any objects on the cable, as this could cause the protective function to be lost. Avoid placing excessive stress on the cable, especially at sockets and plugs.
- Do not insert any objects into the openings of the unit, as current flows in some places and contact may cause fire or electric shock.
- Do not use liquid cleaners or cleaning sprays. The product may only be cleaned with a damp cloth.
- Do not connect any additional devices that are not recommended by the manufacturer.
- Do not use the product in direct sunlight or places where the temperature may exceed 50°C for a long time.

Safety rules for rechargeable batteries

The product uses rechargeable batteries and can go wherever you need them. But ALL batteries can EXPLODE, CATCH FIRE, and CAUSE BURNS if disassembled, punctured, cut, crushed, short-circuited, incinerated, or exposed to water, fire, or high temperatures, so you must handle them with care.

To use the rechargeable batteries safely, follow these guidelines:

- ALWAYS follow local waste and recycling laws when throwing used batteries away.
- ALWAYS use the product to charge the rechargeable batteries.
- NEVER place the rechargeable batteries in a pocket, purse, or other receptacle, especially those containing metal objects.
- NEVER store the rechargeable batteries with hazardous or combustible materials.
- NEVER let the rechargeable battery or battery compartment get wet - before, during, or after installation. (Remember, your product itself is weatherproof, but its interior battery compartment and batteries aren't.)
- NEVER disassemble, cut, crush, puncture, short-circuit, dispose of batteries in fire or water, or expose the rechargeable battery to temperatures above 50°C.

Warnings

- Do not disassemble the product, it may result in short-circuit or damage.
- Battery life-span will decrease with usage. Charge the battery at least once every month to preserve battery in the event the product is not used for long time.
- Battery warning: Improper use of the battery may cause fire or chemical burns. The battery may explode in case of damage.
- Do

not modify, repair or remove without professional guidance. ● Do not use corrosive or volatile liquid for cleaning. ● Do not drop or shake the device, it may break internal circuit boards or mechanics. ● Keep the device away from little children.


Disclaimer

● In no event shall Technaxx Deutschland be liable for any direct, indirect punitive, incidental, special consequential danger, to property or life, improper storage, whatsoever arising out of or connected with the use or misuse of their products.

Features

- The professional conical ceramic grinder makes the grinding process more detailed and the coffee powder more uniform.
- External adjustment, easy and convenient without contact with the coffee powder
- Precise grind adjustment, customize the fineness level for each type of coffee
- Powered by lithium battery, with type C charging port and charging indicator
- Press once to grind, switches off automatically when finished
- It stops automatically when jammed
- Three-stage design, the entire body can be disassembled for cleaning
- Round design with exquisite texture


Product overview

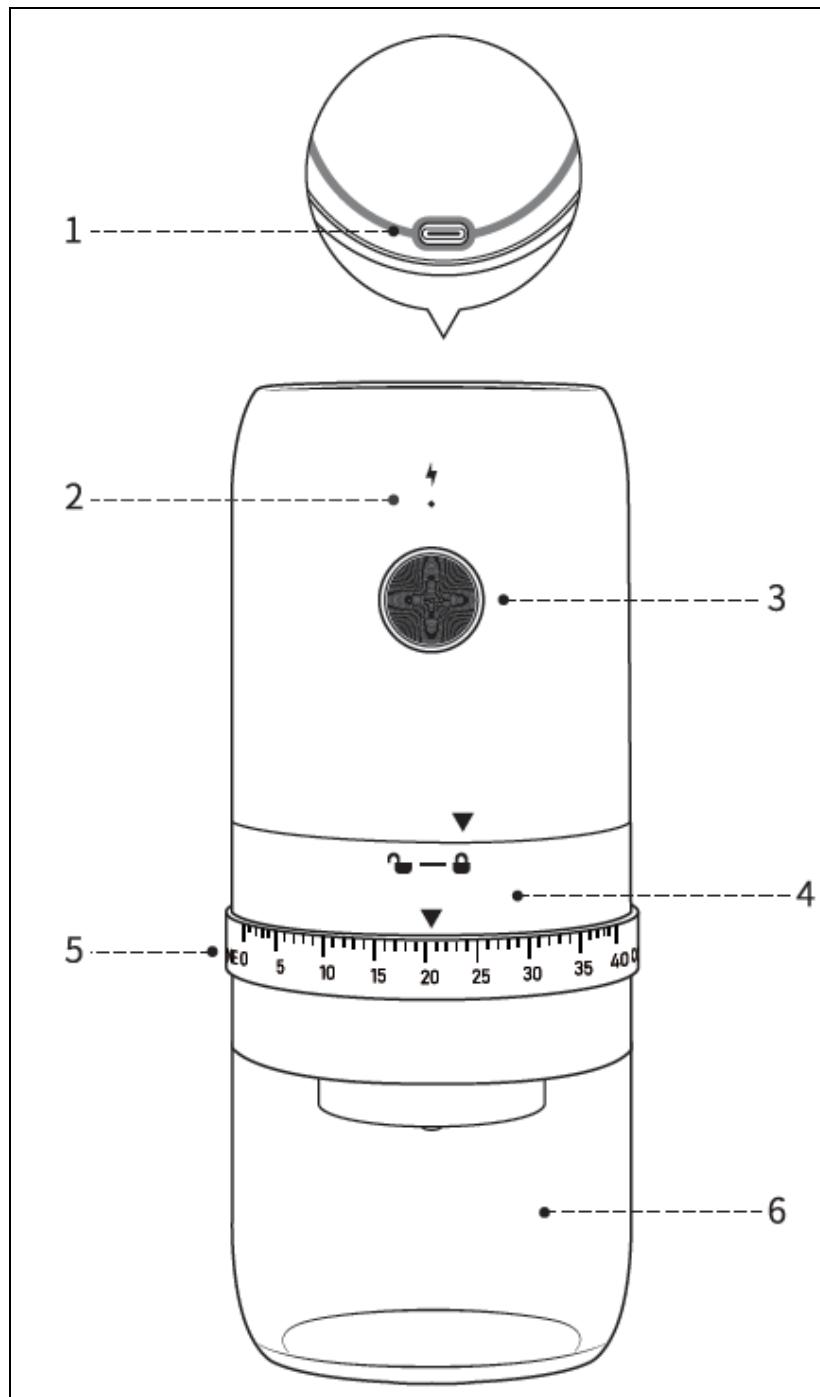

1	Charging Socket
2	Indicator Light
3	ON/OFF Button
4	Coffee Bean Container
5	Adjustment Ring / grinding coarseness
6	Ground Coffee Container

How to charge

- Connect the Type-C charging cable to a USB adapter, plug the adapter into an indoor power outlet, and insert the Type-C plug of the charging cable into the charging port at the top of the grinder, making sure it is fully inserted
- The battery indicator light will illuminate while charging.
- When fully charged, the battery indicator light will turn off.
- It takes approximately 3.5 hours to fully charge.

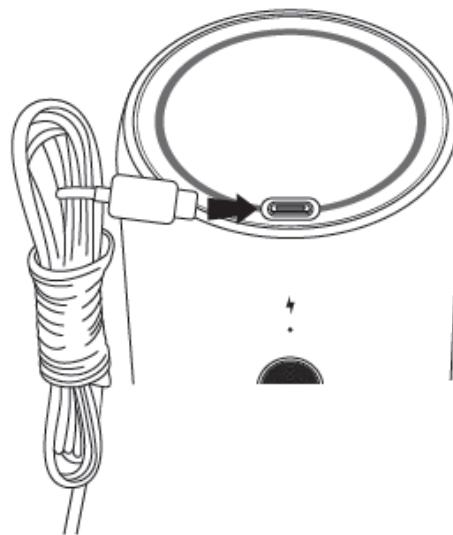

PRECAUTIONS

- Before connecting to the power source, make sure the adapter, charging cable plug and the charging port on the device are completely dry.
- Always ensure that the device is disconnected from the power supply if it is to be left unattended. Before each use, check that the appliance and cord are in good condition. Never use an appliance if the cord is damaged.
- Adapter is not included with this product. Charge with UL/GS or equivalent safety approved adapters with output voltage of 5V DC
- Low battery warning: if indicator light is flashing during use, it means low battery. Please charge the grinder as soon as possible.
- This is a lithium-battery rechargeable product, when not in use, it is recommended to charge every three months to ensure service life of the battery.

How to adjust grinding coarseness

- Rotate to the left for coarser grind (40), rotate to the right for finer grind (0), with a total of 40 settings.
- Do not apply excessive force when tightening the grinder at setting 0 or 40.


Align the “▲” with the “0” as the starting point. Rotate left to adjust the grind from fine to coarse. The following are suggested settings for different brewing methods.

Espresso	Moka pot	Pour over	Frenchpress
0-5	5-10	10-20	20-25


*The above grind settings are approximate and for reference only. Adjust based on actual use.

How to use


Adjust the grinding coarseness according to your brewing method and taste preferences by rotating the adjustable ring.

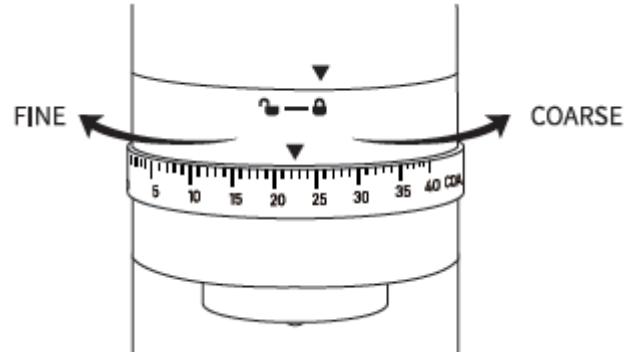


Open the bean container by rotating as indicated on the body, place the measured coffee beans (less than 30g per use) into the container, and then securely close the main unit.

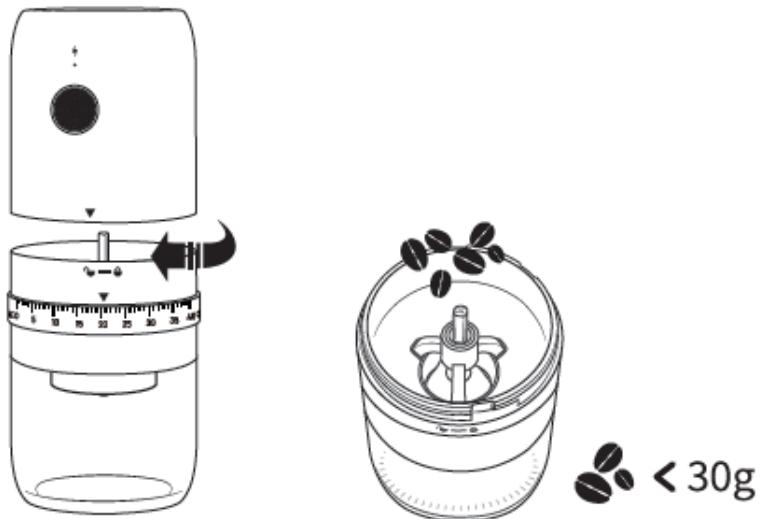

Press the button to start automatic grinding. The machine will stop automatically when grinding is complete. You can also manually stop grinding by pressing the button.

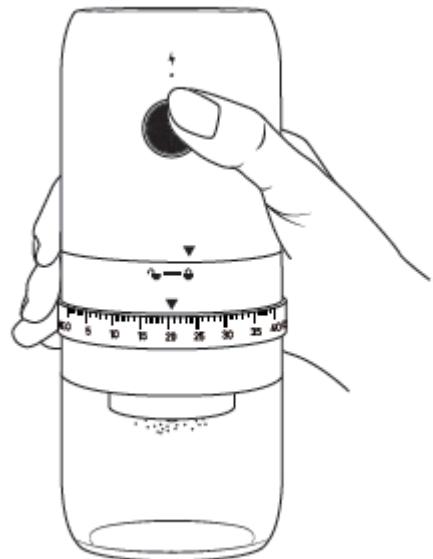

Remove the bottom powder container by rotating and pour out the ground coffee for preparation.

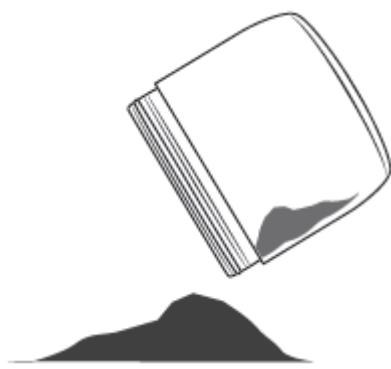

CAUTIONS

- It is recommended to use a brush for cleaning the grinder. Do not wash it with water. The exterior can be wiped with a damp cloth. Ensure all parts are completely dry before reassembling.
- Store this product in a cool, dry place.
- Do not apply excessive force when rotating the adjustable ring.
- Do not disassemble the adjustable ring.
- If the grinder burr gets stuck while adjusting the grind, turn the adjustable ring counterclockwise a few times, set to a coarser grind, and press the power button to activate the motor to free the grinder burr. Note: This situation is due to the characteristics of the ceramic burr and is not a quality issue. It does not affect normal use.

Attention: Do not clean the main body directly with water. It is recommended to wipe it with a soft, wet cloth. After cleaning, make sure all the parts are completely dry before reassembling.

FAQs

If pressing the power button results in no response or the grinder stops during the grinding process check the following:

→ It may be due to low battery. Charge the product and try again (do not use while charging).

→ If the grinder stops automatically during the process, it may be due to variations in the coffee bean roast level. Press and hold the power button for 3 seconds, and the unit will continue to work for over 3 minutes until all beans are ground. You can also press the button to stop at any time.

→ If you hear unusual noises during grinding, pause the grinder, turn the adjustable ring counterclockwise to adjust the grind, and try again.

If the above steps do not resolve the issue, contact your dealer for repair assistance.

Technical specifications

Rated power	25W
Power supply	USB-C 5V / 2A
Input power	10W
Battery	Li-Ion 18650, 1800mAh, 3.7V
Size of Bean Container	25±5g
Size of Powder Container	70±5g
Grinding stages	0-40 (1 steps)
Grinder material	Ceramic
Material	ABS, AS
Weight & Dimensions	420g / (L) 18.6 x (W) 8.3x (H) 8.3cm
Package contents	1x Electric Coffee Grinder LX-063, 1x Brush, 1x USB cable, 1x user manual

Support

Service phone No. for technical support: **01805 012643** (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free Email: **support@technaxx.de**

The support hotline is available Mon-Fri from 9am to 1pm & 2pm to 5pm
In the event of anomalies and accidents, please contact:
gpsr@technaxx.de

Declaration of Conformity



Technaxx Deutschland GmbH & Co. KG hereby declares that the equipment type LX-063 Prod. ID.:5324 is in compliance with Directive 2014/30/EU. The full text of the EU Declaration of Conformity is available at the following internet address: www.technaxx.de/reseller

Disposal




Disposal of the packaging. Sort packaging materials by type upon disposal.

Dispose of cardboard and paperboard in the waste paper. Foils should be submitted for recyclables collection.



Disposing of old equipment (Applies in the European Union and other European countries with separate collection (collection of recyclable materials) Old equipment must not be disposed of with household waste! Every consumer is required by law to dispose of old devices that can no longer be used separately from household waste, e.g. at a collection point in his or her municipality or district. This ensures that the old devices are properly recycled and that negative effects on the environment are avoided. For this reason, electrical devices are marked with the symbol shown here.

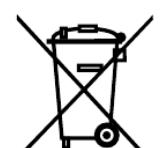

Batteries and rechargeable batteries must not be disposed of in household waste! As a consumer, you are required by law to dispose of all batteries and rechargeable batteries, whether they contain harmful substances* or not, at a collection point in your community/city or with a retailer, to ensure that the batteries can be disposed of in an environmentally friendly manner. * marked with: Cd = cadmium, Hg = mercury, Pb = lead. Return your product to your collection point with the fully discharged battery installed inside!

Made in China

Distributed by:

Technaxx Deutschland GmbH & Co. KG
Konrad-Zuse-Ring 16-18,
61137 Schöneck, Germany

Electric Coffee Grinder LX-063