 


Lifenaxx® * User Manual

Window vacuum cleaner

LX-066

Before using the appliance for the first time, please read the instructions for use and safety information carefully.

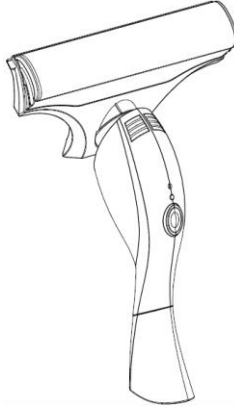

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or by persons lacking in experience or knowledge, unless they are supervised or instructed on the use of this device by a person responsible for their safety. Children should be supervised to ensure they do not play with this device.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

Enjoy your product. * Share your experience and opinion on one of the well-known internet portals.

Specifications subject to change without notice - please make sure you are using the latest manual available on the manufacturer's website.

Table of Contents

Safety instructions	2	Pads	6
Instructions for safe operation.....	3	Efficiency	6
Disclaimer.....	3	Precautions	6
Product Details	4	Cleaning	7
Technical Specifications	4	Package Contents	7
How to use:	5	Support.....	7
Filling the spray bottle.....	5	Care and maintenance.....	7
Locking the Head.....	5	Declaration of Conformity	8
Assembling and replacing the Cleaning		Disposal	8

Important notes at the start

Safety instructions

- Read these operating instructions carefully before using the appliance for the first time.
- The appliance may only be operated as described in these operating instructions.
- Keep these operating instructions in a safe place.
- If you ever pass the appliance on to someone else, please include these operating instructions. The operating instructions are an integral part of the product.

Safety rules for rechargeable batteries

The product uses rechargeable batteries and can go wherever you need them. But ALL batteries can EXPLODE, CATCH FIRE, and CAUSE BURNS if disassembled, punctured, cut, crushed, short-circuited, incinerated, or exposed to water, fire, or high temperatures, so you must handle them with care.

To use the rechargeable batteries safely, follow these guidelines:

- ALWAYS store spare batteries in a cool, dry, ventilated area.
- ALWAYS make sure that the battery compartment is clean and free of any debris before inserting new batteries.
- ALWAYS make sure the battery contacts are aligned.
- ALWAYS keep all batteries away from children.
- ALWAYS follow local waste and recycling laws when throwing used batteries away.
- ALWAYS use the product to charge the rechargeable batteries.
- NEVER place the rechargeable batteries in a pocket, purse, or other receptacle, especially those containing metal objects.
- NEVER store the rechargeable batteries with hazardous or combustible materials.

- NEVER let the rechargeable battery or battery compartment get wet - before, during, or after installation. (Remember, your product itself is weatherproof, but its interior battery compartment and batteries aren't.)
- NEVER disassemble, cut, crush, puncture, short-circuit, dispose of batteries in fire or water, or expose the rechargeable battery to temperatures above 50°C.



DANGER of electric shock due to moisture!

- The base unit, the connecting cable and the charger must not be immersed in water or other liquids.
- Protect the base unit from moisture, dripping and splashing water.
- If liquid gets into the item, other than during use, dry the item. Have the appliance checked before using it again.
- Do not operate the appliance with wet hands.
- If the appliance has fallen into water, dry the item for longer time before next usage.



Instructions for safe operation

- Instructions for safe operation: Children must not use the appliance.
- Keep the appliance and the charger out of the reach of children.
- Cleaning and user maintenance must not be carried out by children.
- Children must not play with the device.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and/or knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Disclaimer

In no event shall Technaxx Deutschland be liable/responsible for any direct, indirect punitive, incidental, special consequential damage, to property or life, improper storage, whatsoever arising out of or connected with the use or misuse of their products. Error messages may appear depending on the environment it is used in.



Danger of electric shock!

- Only insert the mains plug into a socket outlet at when the appliance is fully assembled.
- Only connect the mains plug to a properly installed, easily accessible socket outlet with protective contacts whose voltage corresponds to the information on the rating plate. The socket outlet must remain easily accessible after connection.

- Make sure that the connecting lead cannot be damaged by sharp edges or hot spots. Do not wrap the connecting lead around the device.
 - Make sure that the connecting lead never becomes a tripping hazard or that someone can get caught in it or step on it.
 - Keep the connecting cable away from hot surfaces (e.g. hotplates).
 - When using the appliance, make sure that the connecting cable is not pinched or crushed.
 - To remove the mains plug from the socket, always pull on the plug, never on the cable.
- Disconnect the mains plug from the socket:
- if a fault occurs
 - if you are not charging the Device
 - before you clean the Device
 - during thunderstorms
- Do not use the appliance if there is visible damage to the appliance or the connecting cable.
 - To avoid danger, do not make any changes to the appliance.



DANGER!

- Packaging material is not a toy for children. Children must not play with the bags. There is a risk of suffocation.

- This appliance only for household use.


WARNING of material damage

- Do not use harsh or abrasive cleaning agents.

Product Details

Technical Specifications

Voltage: 3,7V
Power: 8W
Battery: 2000mAh
Voltage of Charger 5V
Current for charging: 500mA
Water reservoir: ~150ml
Noise Level: ~62dB(A)
Working time: up to 120min.
Weight: 0,58kg
Working width: 28cm

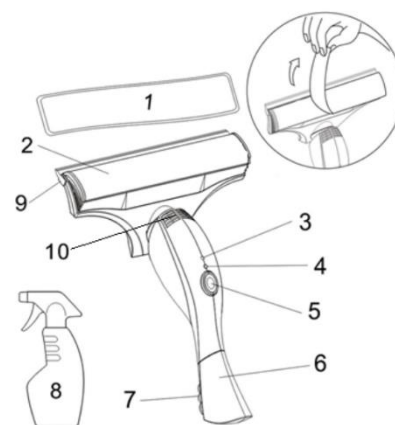

1	Cleaning pad	2	Clening pad holder
3	Chargig socket	4	Charge indicator
5	Power button	6	Waste water tank
7	Drain hole waste water tank	8	Spray bottle
9	squeegee lip	10	Ventilation slots


How to use:

Before using the item for the first time charge the battery with the original charger for at least 2 hours. The first charging could take up to 6 hours, pls check the charging indicator, if the battery is fully charged the LED turns to green. Never store your device with a drained battery. It will shorten the life of your battery. For optimal battery life, it is best to store the device after recharging it.

Filling the spray bottle


Open the spray bottle by turning the neck of the bottle. Fill in clean water and lock the bottle. The bottle is very easy to be blocked by dirt, so please be careful. Do not use any cleaning agents other than those recommended by the manufacturer.

Locking the Head

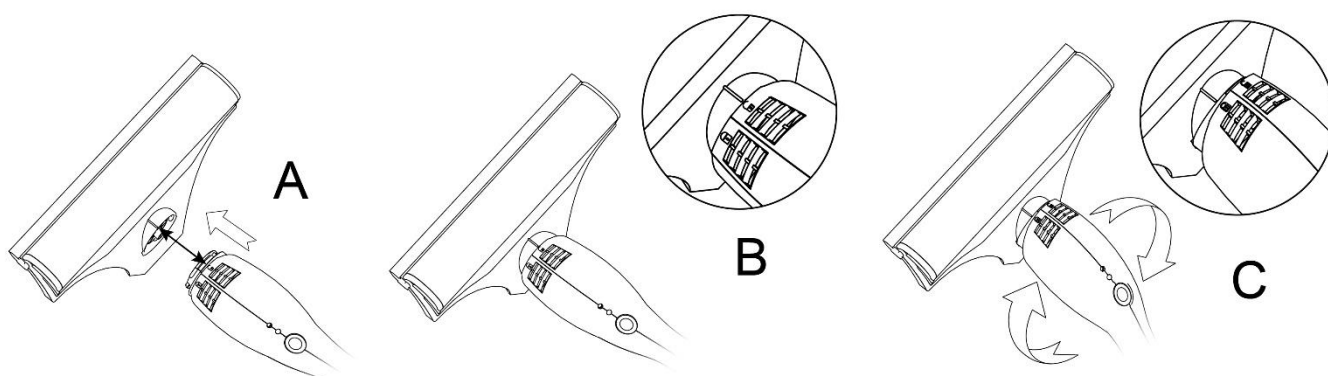


Position the head at a slight angle, as shown in Figure A. Please fully respect the direction indicated in Figure A. Put the head on the body and then make a slight rotation in the opposite direction as showed in Figure B to lock the head Figure C.

Assembling and replacing the Cleaning Pads

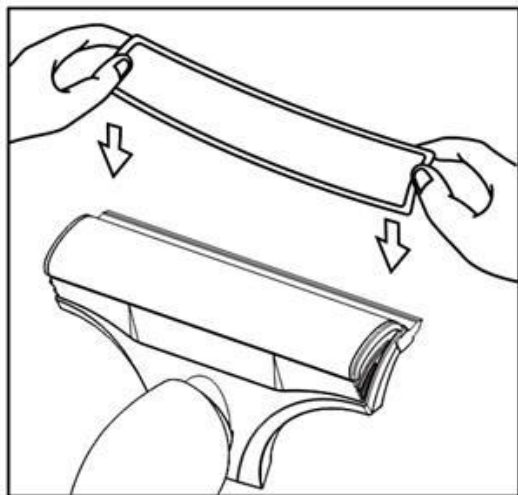

1

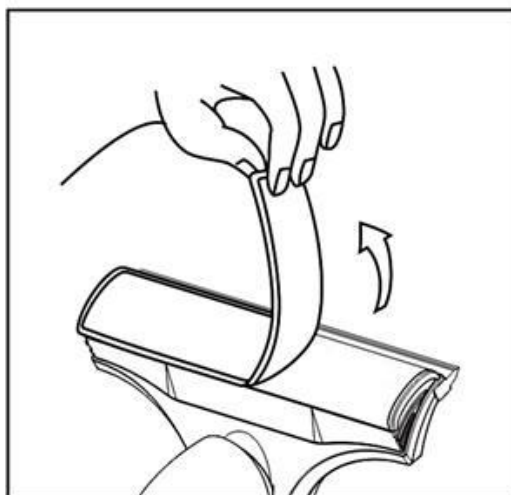

2

Place the pad holder (2) in front of you Figure 1, and then carefully apply the cleaning pad over the velcro surface (1) Figure1. The metallic scrubbers on the cleaning pads should be exposed.

Finally press the entire wipe to the support surface.

The wipes should be replaced regularly. The frequency will depend on your use and the quantity

of windows that are cleaned with this unit.

To change or remove the wipe, simply tear the wipe off the velcro surface. Figure 2

These wipes are machine washable at 40 ° C.

Do not iron or bleach the cleaning pads and not to put the cleaning pads in the dryer. Do not use fabric softener. When washing the wipe with other textiles, not to mix with thin or fragile textiles such as lace or silk. The scrubbing surface of the cleaning cloth is abrasive and could damage these fragile textiles. It is strongly suggested to use LIFENAXX original wipes as other wipes may not provide the desired results.


Efficiency

Due to non-use of detergent products which usually have oil-based compound or animal fat, you will leave no more "new" fat on your smooth surfaces (you can sometimes see grease residues when the sun shines through windows). The LIFENAXX Window Cleaner will reduce your cleaning frequency because it effectively removes all grease from your windows thereby preventing new residues from sticking to your window surfaces as often.

Precautions

When using this device on sensitive surfaces such as plastic or high gloss paints always test with your wipe on a hidden area in order not to damage the appearance of your surface. We are not responsible for any damaged surfaces.

Cleaning

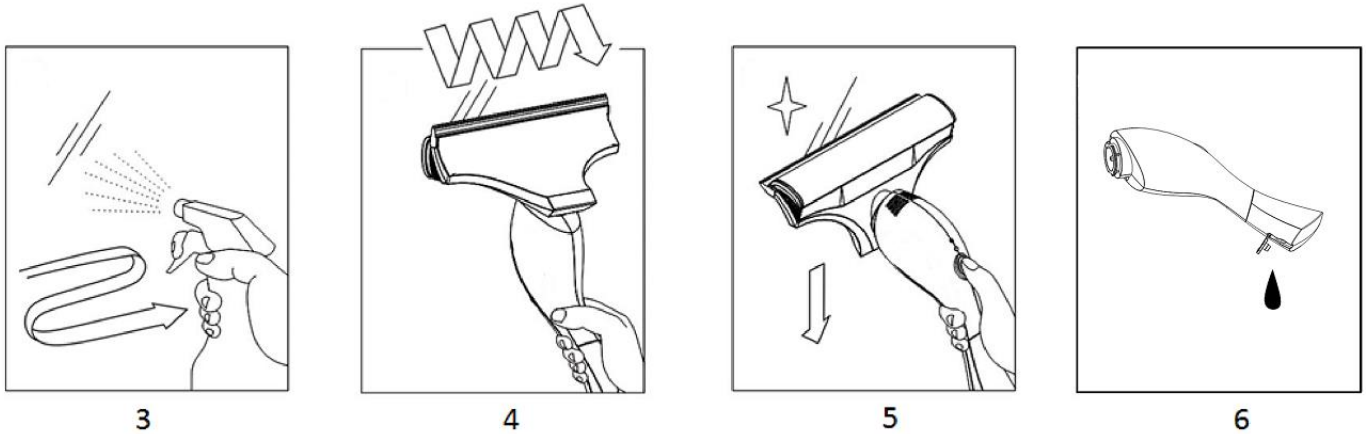

Once you have positioned the cloth on the appliance, you can simply spray some water on the window with your spray bottle Figure 3. Do not spray too much water on the window, otherwise it will drip onto the floor. Move the window cleaner up and down as shown in figure (4) to loosen the dirt. Pay particular attention to the edges of the window. Once the dirt has been loosened, turn the window cleaner over (Figure 5) and start the suction function using the on/off switch (5). Place the window vacuum cleaner in a corner of the window and pull it down to the end of the window as shown in Figure 5.

Do not press hard against the window while vacuuming, only press hard enough so that the silicone lip rests against the window. Start in a corner and vacuum the water from the window. Be neither too slow nor too fast. The right speed from top to bottom (1 metre in 1-2 seconds) leads to the best result.

The Multi Micro suction technology does the rest of the work. The window vacuum cleaner cannot work against the force of gravity, if you are vacuuming horizontal surfaces you must hold the appliance vertically after each suction so that the dirty water can run into the tank.

When you have finished cleaning the windows or there is a certain amount of dirty water in the tank, empty it via the drain opening as shown in Figure 6.

Package Contents

Window vacuum cleaner, charger, instruction manual, Spray bottle 2 wipes

Support

Service phone No. for technical support: **01805 012643** (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free Email: **support@technaxx.de**

The support hotline is available Mon-Fri from 9am to 1pm & 2pm to 5pm

Care and maintenance

Clean the device only with a dry or slightly damp, lint-free cloth.

Do not use abrasive cleaners to clean the device.

Declaration of Conformity



The EU Declaration of Conformity can be requested at the following address: www.technaxx.de/ (in the lower bar "Declaration of Conformity").

Disposal



Disposal of the packaging. Sort packaging materials by type upon disposal.

Dispose of cardboard and paperboard in the waste paper. Foils should be submitted for recyclables collection.



Disposing of old equipment (Applies in the European Union and other European countries with separate collection (collection of recyclable materials) Old equipment must not be disposed of with household waste! Every consumer is required by law to dispose of old devices that can no longer be used separately from household waste, e.g. at a collection point in his or her municipality or district. This ensures that the old devices are properly recycled and that negative effects on the environment are avoided. For this reason, electrical devices are marked with the symbol shown here.



Batteries and rechargeable batteries must not be disposed of in household waste! As a consumer, you are required by law to dispose of all batteries and rechargeable batteries, whether they contain harmful substances* or not, at a collection point in your community/city or with a retailer, to ensure that the batteries can be disposed of in an environmentally friendly manner. * marked with: Cd = cadmium, Hg = mercury, Pb = lead. Return your product to your collection point with the fully discharged battery installed inside!

Made in China

Distributed by:
Technaxx Deutschland GmbH & Co. KG
Konrad-Zuse-Ring 16-18,
61137 Schöneck, Germany

Window vacuum cleaner LX-066