

# **Technaxx® \* User Manual**

## **1080P Smart Projector TX-332**

### **with official Netflix License**

Before using the appliance for the first time, please read the instructions for use and safety information carefully.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or by persons lacking in experience or knowledge, unless they are supervised or instructed on the use of this device by a person responsible for their safety. Children should be supervised to ensure they do not play with this device.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

***Enjoy your product \* Share your experience and opinion on one of the well-known internet portals.***

Specifications are subject to change without notice - please be sure to use the latest manual available on the manufacturer's website.

## **Features**

- Smart Projector with Linux OS
- Pre-Installed Netflix, YouTube, prime video
- Native 1080P projector with multimedia player
- Wi-Fi, Bluetooth, 2x USB, HDMI, AUX
- Projection size from 40" to 120"
- Integrated 3 Watts speaker
- Long LED lifetime 30,000 hours
- With Remote Control

 
# Contents

Technical Specifications .....	3	Picture Mode .....	8
Product Overview .....	4	Audio .....	8
Remote control .....	5	Bluetooth .....	8
Quick Start .....	5	Network .....	8
Installation Options: .....	5	Projection .....	8
Power On/Off: .....	6	Keystone .....	8
Manual Focus .....	6	Zoom .....	9
Keystone Correction .....	6	About .....	9
Manual Keystone Correction ..	6	Projection distance and size ..	9
Image Scaling .....	6	Apps .....	9
Play Content .....	6	Additional downloadable Apps .....	9
Projector connection and input source .....	6	Troubleshooting .....	9
USB-Connection .....	6	Hints .....	10
HDMI-Connection .....	6	Safety instructions .....	11
Wired Speaker and Headphone Connection .....	7	Legal Disclaimer .....	11
Wi-Fi Connection .....	7	Support .....	12
Screen Mirroring .....	7	Care and maintenance .....	12
Home Share .....	7	Declaration of Conformity .....	12
BT-Speaker .....	8	Disposal .....	13
Settings .....	8		
Setup .....	8		


## Technical Specifications

Display Technology	LCD LED projection system
Resolution	Native 1920 x 1080P
Brightness	200 ANSI Lumen
Projector Size	40-120 Inch (1.1 m - 3.29 m)
Installation Type	Front / Rear / Ceiling
LED Lifetime	30 000h
Input Signal	Max. 1080P
Refresh rate	60 Hz
Aspect Ratio	16:9
Throw Ratio	1.24:1
Contrast	1000:1
Color Temperature	6500K - 8000K
Keystone correction	Manual $\pm 40$ degrees
Speaker	3 W
Operating System	Linux
Bluetooth	V4.2
Wi-Fi Module	2.4G / 5G
Max. Radiated output power (EIRP) BT/ Wi-Fi	2.5 mW / 100 mW (2.4G) 200 mW (5G)
Frequency band (2.4G / 5G)	2.400 – 2.4835 GHz / 5.150 – 5.3501 GHz
Wireless screen sharing	Airplay / Miracast
Power	76 W
Stand-by Power	<0.5 W
Ports	HDMI1.4 / 2x USB2.0 / AC IN / 3.5mm headphone jack
Photo Format Supported	JPG / PNG / BMP / GIF
Audio Format Supported	MPEG1/2 Layer2 / MPRG1/2/2.5 Layer3 / AC3(DD) / EAC3(DDP) / GAAC / VORBIS / LPCM / FLAC
Video Format Supported	MPEG1/2 / MPEG2_HD / MPEG4 / MPEG4_HD / MPEG4_SD / Sorensen / H.263 / VC1 / VP9 / H.263 / H.264 / AV1 / Motion JPEG / VP8
Power Supply	Output: 24 V / 2.3A 12 V / 1.8 A Input: 100 V-240 V ~ 50 / 60 Hz
Operating Temperature	0°C to 40°C
Storage Temperature	-10°C to 60°C
Dimension	18.2 x 16.4 x 8.0 cm
Weight	0.85 kg
Package Content	TX-332 Projector, remote control, power cable, user manual

# Product Overview

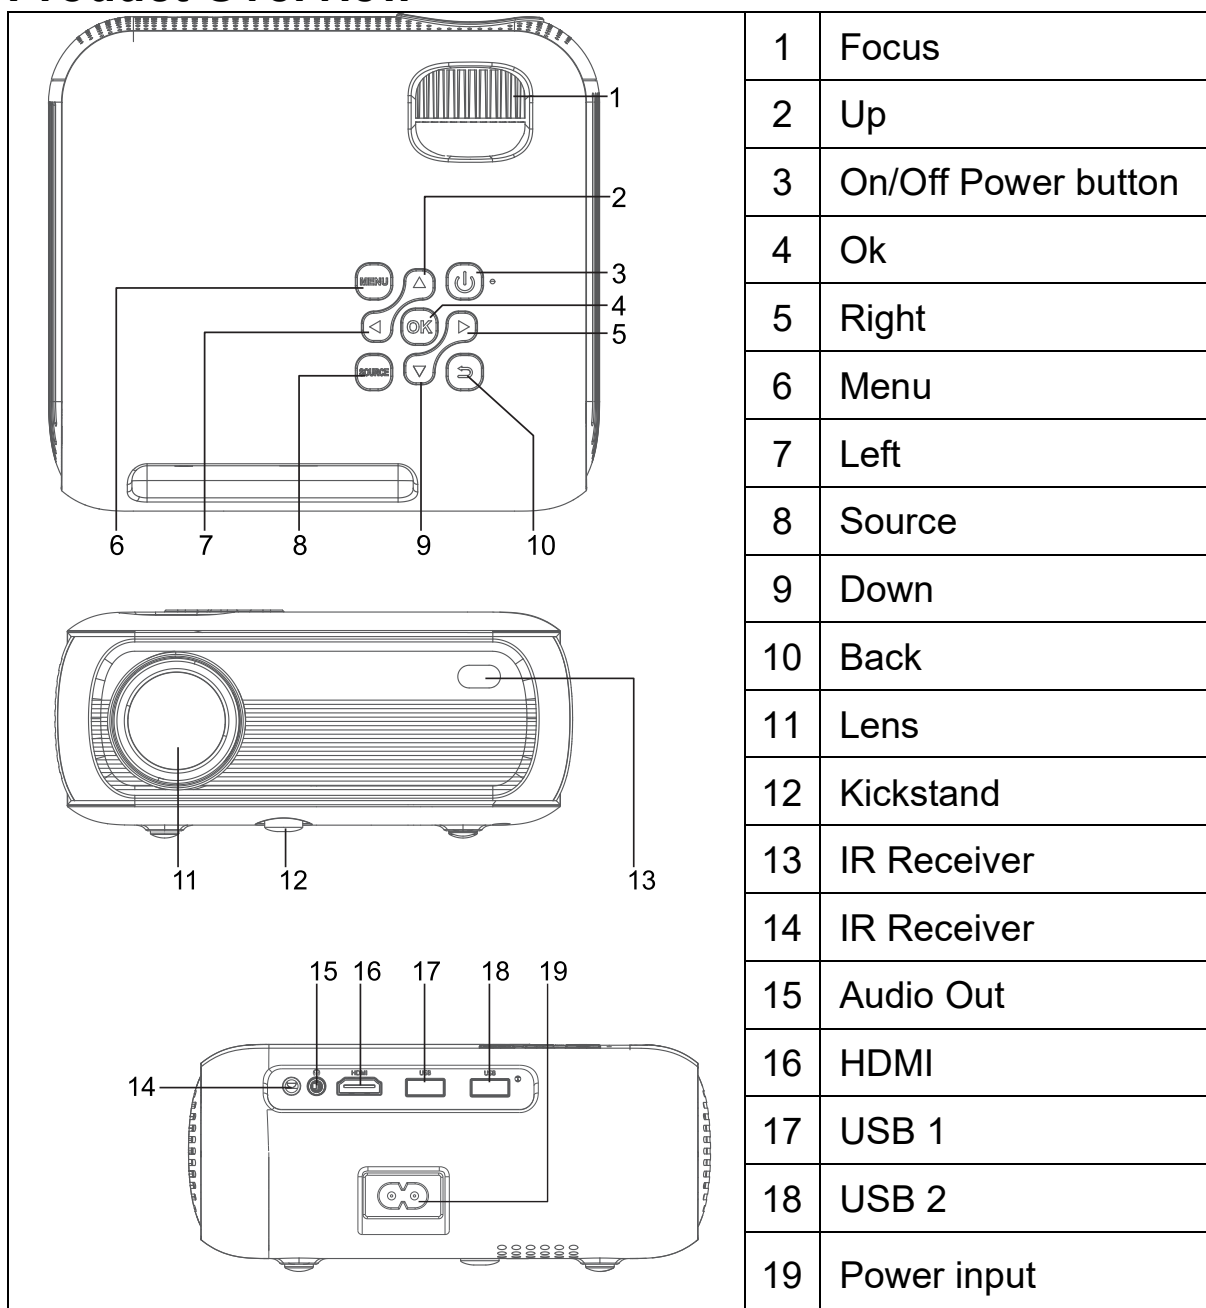





## Remote control

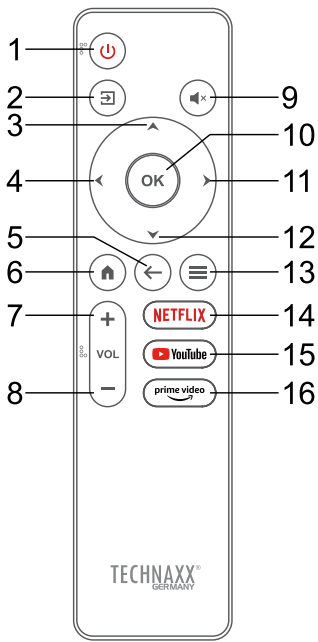 	1	Power
	2	Source
	3	Up
	4	Left
	5	Back
	6	Home
	7	Volume+
	8	Volume-
	9	Mute
	10	OK
	11	Right
	12	Down
	13	Menu
	14	NETFLIX App
	15	YouTube App
	16	Prime video App

**Note:** The remote does not come with AAA batteries. Please ensure you install two new batteries before use. Gently remove the back cover of the battery compartment and insert the new batteries, following the polarity markings inside the compartment.

## Quick Start

### Installation Options:

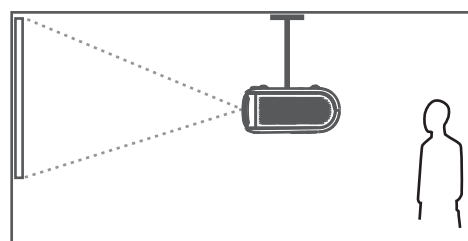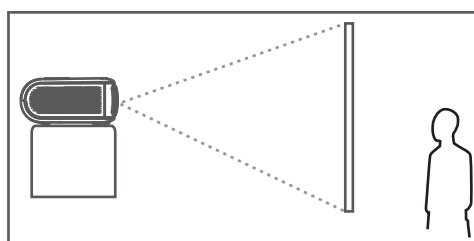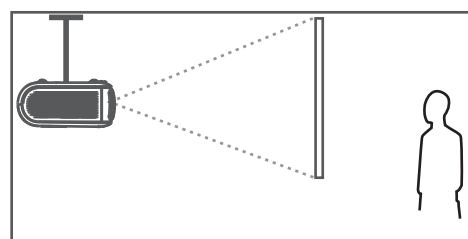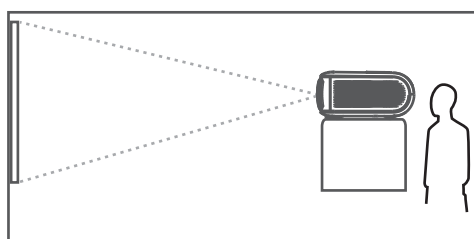

### Note:

Whichever installation option you select, please make sure:

→ To go to *Homepage > Settings > Projection* to select the corresponding

projection mode, so the images can be projected correctly.


→Mounting Screw: 1/4"(not included)

### Power On/Off:

- Take off the lens cover
- Connect the power adapter cable to an outlet
- Press the power button once to turn on the projector
- Press the power button twice to turn off the projector

### Manual Focus


Turn the focus wheel (1) until the blurry image becomes clear.

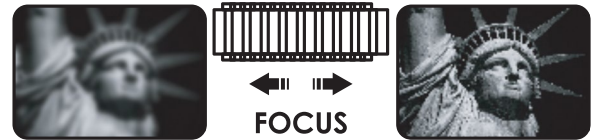

### Keystone Correction

Upon powering on the projector, it will automatically correct any keystone distortion within a range of vertical/horizontal  $\pm 45^\circ$ . A

side projection of 20 degrees has virtually no impact on the resolution, while between 20 and 45 degrees, there may be a slight impact.

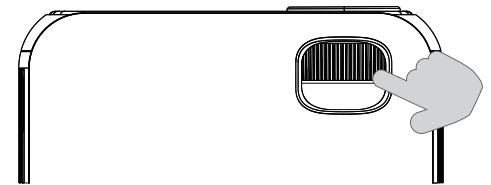

### Manual Keystone Correction

Go to *Homepage* > *Settings* > *Keystone* > *Four Points Correction* to manually correct the image shape by four points.


### Image Scaling

Go to *Homepage* > *Settings* > *Zoom* to reduce or enlarge the image size between 50% and 100%.

### Play Content

Go to the Homepage or select your preferred platform via the shortcuts on the remote, then log in to your account to play the corresponding content.

**Note:** A streaming subscription could be required.

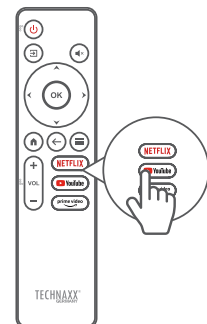

### Projector connection and input source

Connect your device to the projector correctly, then select the right input source:

#### USB-Connection

To play files stored on a USB disk, insert the disk into the projector. Then go to *Homepage* > *Inputs* and select *USB* to locate and play the desired file.

#### HDMI-Connection

To connect a device with a HDMI output port to the projector, use a HDMI cable to connect it to the projector's HDMI input port (16). Then go to *Homepage* > *Inputs* and select *HDMI*.

## Wired Speaker and Headphone Connection

Connect an AUX-Plug to the Audio Output (15) to hear wired Sound from the projector.

## Wi-Fi Connection

To connect the projector with the Wi-Fi of your home, go to *Homepage > Setting > Network*. If necessary, type in your Wi-Fi password to connect successfully.

## Screen Mirroring

Connect both the projector and your mobile device to the same Wi-Fi network or directly connect the projector to your mobile device's hotspot.

**Note:** If you are using the mobile device's hotspot, the content will be mirrored using cellular data. Due to copyright restrictions, content from certain apps or streaming services cannot be wirelessly mirrored or cast.

### For Android Systems:

To enable this feature, ensure your Android device supports Multi-Screen, Smart View, or Wireless Display. The name may vary depending on your Android device.

→ Go to the Wi-Fi settings on your Android device and turn on Wi-Fi.

→ Navigate to the *Homepage > My Apps > Screencast* to access the screen mirroring interface.

→ Enable the Multi-Screen, Smart View, or Wireless Display function on your Android device and search for the projector.

→ Select "TX-332" from the list. Once the connection is established, the content from your Android device will be mirrored onto the projection screen or wall.

### For iOS Systems:

→ Go to *Homepage > My Apps > APP Assistant*. Then, select ScreenShare and press OK on the remote to download and install the ScreenShare app.

**Note:** You will need to download the ScreenShare app for the initial setup. After that, you can skip this step. After downloading the ScreenShare app, please restart the projector to ensure it functions properly.

→ Return to the My Apps page and launch the ScreenShare app to open the following screen.

→ Access the Control Center on your iOS device, then tap Screen Mirroring or AirPlay to search for the projector.


→ Select "TX-332" from the list. Once the connection is established, the content from your iOS device will be mirrored onto the projection screen or wall.

## Home Share

→ Connect both the projector and your mobile device to the same Wi-Fi network.

→ Go to the *Homepage > My Apps*, then select **HomeShare** to open the page. Make sure the toggle is switched to **On**.

→ Open a video player app on your mobile device and select a video to play.

→ Press  to search for the projector and select "TX-332" to connect. The content on your device will be cast to the screen.

## **BT-Speaker**

In addition to the wired 3.5mm audio output port, you can also connect Bluetooth speakers or Bluetooth headphones to the projector via Bluetooth.

→ Power on your Bluetooth device and make it ready for pairing.

→ Go to *Homepage > Settings > Bluetooth* to scan for available devices.

→ Select your device and pair it with the projector.

**Note:** Bluetooth connections may cause audio delay due to signal interference, especially when using wireless screen mirroring with Wi-Fi and Bluetooth simultaneously.

Use a HDMI connection and Bluetooth simultaneously instead of wireless screen mirroring. Or, use a wired speaker for audio.

## **Settings**

### **Setup**

- Set the projector's language.
- Adjust the date and time settings.
- Enable the screensaver to activate after a period of inactivity.
- Set the screen turn-off timer.
- Set the screen to automatically turn off after a period of inactivity.
- Update the software as needed.
- Restore the projector to factory settings.

### **Picture Mode**

Select the picture mode and adjust image settings such as color temperature, contrast, and more.

### **Audio**

Choose your preferred sound style (e.g., vivid, movie).

Select the correct digital output mode.

### **Bluetooth**

Connect the projector to external Bluetooth speakers and headphones.

### **Network**

Connect the projector to a working Wi-Fi network.

### **Projection**

Select the appropriate projection mode for accurate image display.

### **Keystone**

- Enable automatic keystone correction when the projector is powered on. **Note:** Vertical keystone correction is supported only.
- Manually correct the keystone.




## Zoom

Adjust the image size between 50% and 100%.

## About

- View version info, license details, and device temperature.
- Rename the projector.

## Projection distance and size

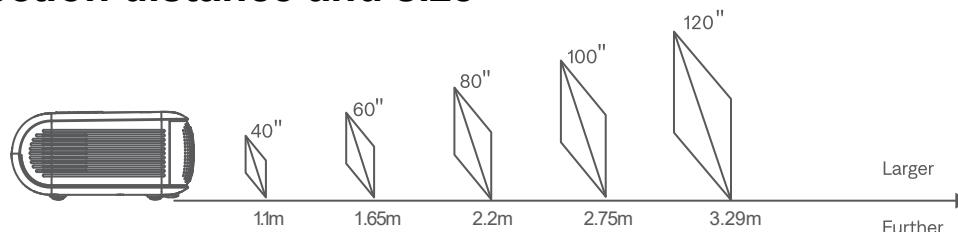

- The ideal projection distance depends on the content being projected. Adjust the distance between the projector and the wall/screen as needed.
- A darker environment will enhance the clarity of the projected images.
- For the best image quality, we recommend a projection size of 80 to 100 inches.

## Apps

You can't download apps from the App Store. To download more apps as below mentioned, go to *Homepage > My Apps > APP Assistant*. Here you can find all apps to install.

After downloading the app, go back to the homepage, scroll down to find the app, and open it to access the content.

### Additional downloadable Apps

Disney+, Hulu, Facebook, Vimeo, Red Bull TV, Twitch, ESPN, AccuWeather, SoundCloud, Radio ESKA, ColorsTV, dittoTV, Wynk Music, Rakuten TV, Dazn, U-NEXT, jiocinema.com, imdb.com, BBC News, Dailymotion, Hotstar, Wikipedia, YouTube Music, Peacock TV, VIU.

Note: These third-party apps are not affiliated with Technaxx Germany and may vary in availability, functionality, support and are subject to change without notice.

## Troubleshooting

**Can I use Netflix directly on the projector?** Yes, you can. The projector comes with pre-installed, officially licensed apps for Netflix, YouTube, and Prime Video. This allows you to easily watch your favorite videos directly on the projector without any hassle.

**Why can't I mirror or cast content from some Apps?** Due to copyright restrictions from services like Hulu, Disney+, and others, content from these platforms cannot be mirrored or cast. To view copyrighted content, please use a laptop, Fire TV Stick, Roku Stick, or Chromecast and connect it to the projector.

### **Why there is no sound output from projector speaker or wireless / wired speaker?**

- Due to copyright restrictions with Dolby, this projector does not support Dolby audio decoding. Dolby audio files can be played through devices connected via HDMI.
- Sound type should be switched to stereo in App sound settings.

### **Why isn't the remote control working?**

- Ensure the remote is pointing directly at the IR receiver.
- Make sure the remote has two new AAA batteries installed.
- Avoid mixing new and old batteries in the remote, as this can cause insufficient power and operational issues.

**Can I sideload Android apps onto the projector?** Unfortunately, sideloading Android apps onto the projector is not supported.

### **Auto Focus/Auto Keystone isn't working**

- Try restoring the projector to its factory settings and see if the issue persists. Note: All settings will be deleted during factory reset.

### **The picture isn't bright enough**

- For the best viewing experience, we recommend using the projector in a dark environment. The darker the room, the better the image quality.

### **The image is blurry**

- Adjust the focus/keystone settings.
- Ensure the projector and screen/wall are at the correct distance for optimal clarity.

### **Upside-down image**

- Go to *Home > Settings > Projection* to flip the projection image.

### **Factory reset**

- Go to *Home > Settings > Setup > Reset Default* to restore the projector to its default settings.

## **Hints**

● Make sure you lay the cable in a way that the danger of stumbling is avoided. ● Never hold or carry the device by the power cable. ● Do not clamp or damage the power cable. ● Ensure that the power adapter do not come into contact with water, steam or other liquids. ● You have to check the complete construction at regular intervals for functionality, tightness and damage to prevent the defect of the device. ● Install the product due to this user manual and operate or maintain it in accordance with the manufacturers operating instructions. ● Only use the product for purposes due to its intended function & only for household use. ● Do not damage the product. Following cases may damage the product: Incorrect voltage, accidents (including liquid or moisture), misuse or abuse of the product, faulty or improper installation, mains supply problems including power spikes or lightning damage, infestation by insects, tampering or modification of the product by persons other than authorized service

personnel, exposure to abnormally corrosive materials, insertion of foreign objects into the unit, used with accessories not preapproved. ● Refer to and heed all warnings and precautions in the user manual.

## **Safety instructions**

- Use standard power cord with ground wire, to ensure stable power supply and the same power voltage with the product marked.
- Do not disassemble the product by yourself, otherwise we will not provide free warranty service.
- Do not look into the lens when the projector is working, otherwise it will damage your eyes easily.
- Do not cover the product's ventilation hole.
- Keep the product away from rain, moisture, water or any other liquid as it is not waterproof. It may cause an electric shock.
- Turn off and cut off the power supply if not use the product for a long time.
- Use the original packing when moving the product.

## **Legal Disclaimer**

Netflix streaming membership required.

Netflix, YouTube, and Prime Video are registered trademarks of their respective owners: Netflix, Inc., Google LLC, and Amazon.com, Inc. or its affiliates. All other trademarks, service marks, and trade names used in this document are the property of their respective owners. The inclusion of the names and logos of Netflix, YouTube, and Prime Video does not imply any affiliation, endorsement, or sponsorship by these companies. Any references to these brands are for illustrative purposes only.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft. Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

The manufacturer assumes no warranty, responsibility, or liability for the functionality, compatibility, security, or content of these third-party apps. Any errors, limitations, security risks, or data loss resulting from the use of such applications are the sole responsibility of the respective app provider and the user.

The manufacturer's technical customer support does not provide support for issues arising from the installation or use of third-party apps.

## Support

Service phone No. for technical support: **01805 012643\*** (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks).

Free Email: **support@technaxx.de**

The support hotline is available Mon-Fri from 9am to 1pm & 2pm to 5pm. In the event of anomalies and accidents, please contact: **gpsr@technaxx.de**

## Care and maintenance

Clean the device only with a dry or slightly damp, lint-free cloth.

Do not use abrasive cleaners to clean the device.

## Declaration of Conformity



Technaxx Deutschland GmbH & Co. KG hereby declares that the radio equipment type 5283 / TX-332 is in compliance with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following internet address:

[www.technaxx.de/reseller](http://www.technaxx.de/reseller)

## Disposal



Disposal of the packaging. Sort packaging materials by type upon disposal.

Dispose of cardboard and paperboard in the waste paper. Foils should be submitted for recyclables collection.



Disposing of old equipment (Applies in the European Union and other European countries with separate collection (collection of recyclable materials) Old equipment must not be disposed of with household waste! Every consumer is required by law to dispose of old devices that can no longer be used separately from household waste, e.g. at a collection point in his or her municipality or district. This ensures that the old devices are properly recycled and that negative effects on the environment are avoided. For this reason, electrical devices are marked with the symbol shown here.



Batteries and rechargeable batteries must not be disposed of in household waste! As a consumer, you are required by law to dispose of all batteries and rechargeable batteries, whether they contain harmful substances\* or not, at a collection point in your community/city or with a retailer, to ensure that the batteries can be disposed of in an environmentally friendly manner. \* Marked with: Cd = cadmium, Hg = mercury, Pb = lead. Return your product to your collection point with the fully discharged battery installed inside!

Made in China

Distributed by:

Technaxx Deutschland GmbH & Co. KG  
Konrad-Zuse-Ring 16-18,  
61137 Schöneck, Germany