

Technaxx® user manual

Electronic parking disc TX-272

Before using the device for the first time, please read the instructions for use and the safety instructions carefully.

Please keep this user manual carefully for future reference or sharing of products. Do the same with the original accessories for this product. In the event of a warranty claim, please contact the dealer or store where you purchased this product.

Features

- Motion detector
- Sets the parking time automatically
- 2 displays
- Backlit display
- SOS light function
- ECE licensed

Technical specification


ECE license no.	E1 10R-0610067
Parking detection response time	Approx. 60 seconds
Time accuracy	±2min. / year
Parking time interval	15 minutes & 30 minutes (adjustable)
Battery	3V button cell CR2450 (included)
Battery life	Approx. 1 year
material	ABS+PC
Operating temperature	-20°C – 75°C
Weight of the device	84g
Dimensions of the device	(L) 10.2 x (W) 7.9 x (H) 2.5 cm
Packaging contents	Electronic parking disc TX-272, CR2450 battery, user manual

IMPORTANT

The TX-272 electronic parking disc should not be left loose in the vehicle. To be legally recognized, it must be attached to the windshield.

Note: The parking disc does automatically switch between winter and summer time by default.

Product overview

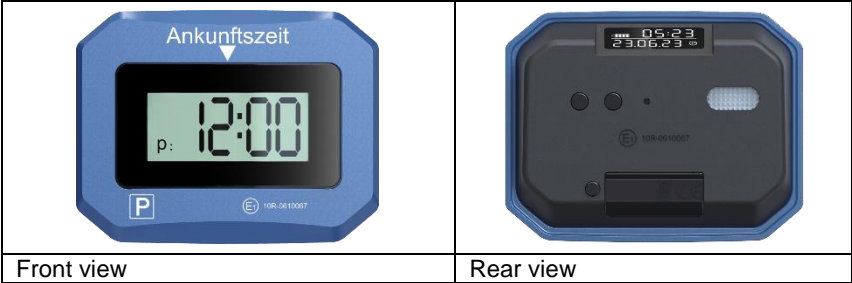

Features

	1	Rear display
	2	Set time -/date - / Display backlight / SOS
	3	Set time +/date + / Delayed parking
	4	Enable/toggle time and date setting
	5	SOS light
	6	Opening the battery compartment
	7	Battery compartment

Assembly Instructions

Make sure the parking disc is clearly visible and attached to the windshield. The temperature should be at least +15°C during attachment. Otherwise it won't hold properly.

1. Make sure the area you plan to use is clean and dry.
2. Do not use cleaning products that contain alcohol.
3. Peel off the protective film from the pads.
4. Press firmly for at least 20 seconds.

Setting the time

- To activate the setting mode, press button 4 with a pointed object and hold it down.
- "Hour" digits flash. Press button 3 repeatedly until the hours match the current time. Press button 2 for decrease.
- Press button 4 again and "Minutes" will start flashing. Set the minutes using button 3. Press button 2 for decrease.
- Follow the same procedure to set the current date.

Note: If no input is made for 10 seconds, the time setting will end automatically. You must then press button 4 again to activate it.



Battery replacement

Press the battery compartment open button (6) down to eject the battery compartment (7).

Replace the CR2450 battery with a new, unused battery. Place the battery + pole face up in the compartment. Turn the tray upside down and carefully slide it back in.

Note: The time and date must be reset.

Display backlight

The front display has a light for easier reading. To activate, press button 2. To turn it off, press again. **Note:** The function does not deactivate automatically. The light significantly reduces battery life.

Set summer and winter time

By default, the parking disc is set to automatically switch between summer and winter time. For countries without summer time, the function can be deactivated as follows:

- To activate setting mode, press buttons 2 and 4 simultaneously for 3 seconds until the display 1 shows "ON SU". Automatically time switch is activated.
- Press button 2, display 1 show "OF SU". Automatically time switch is deactivated.

Changing the time interval

Different countries may have different requirements for setting parking time. Change the interval to 15 or 30 minutes depending on the parking rules in each country.

- Press button 2 and button 3 simultaneously for 3 seconds. Use button 3 to switch to 15 or 30 minutes. **Note:** 30 minutes is set as the default.

Set manual parking time

To set the parking disc manually, press and hold button 3 and advance the clock in 15- or 30-minute increments. Release the button as soon as you have reached the desired time on the small display (1). **Note:** This feature can only be accessed when the parking disc is in parking mode. Can be recognized by the Ⓟ in display 1 at the bottom right.

SOS function

In the event of an emergency, press and hold the SOS button (2). The red SOS light will start flashing to draw attention to itself.

To turn off the SOS function, press and hold the button (2) again.

Cleaning and maintenance

- Clean the device regularly with a damp cloth. Do not use cleaning agents or solvents.
- Make sure that no water can enter the device.
- Protect the device from shock, dust, moisture or extreme temperatures.

Safety instructions



Caution! Device contains a battery.

- Keep the device out of the reach of children.
- Observe the safety instructions during use.
- Never attempt to open the device as this will void any guarantee or warranty on the product.
- Do not use if the battery compartment does not close securely.

Support

Technical support service telephone: **01805 012643**

(14 cents/minute from the German landline network and 42 cents/minute from the mobile networks). Free email: **support@technaxx.de**

The support hotline is available Mon-Fri from 9 a.m. to 1 p.m. and 2 p.m. to 5 p.m.

Declaration of Conformity



The EU declaration of conformity can be requested at the following address: www.technaxx.de/ (in the bottom bar "Declaration of conformity").

Disposal



Disposal of packaging. Sort the packaging materials according to the type of disposal. Dispose of cardboard and cardboard in the recycling bin. Films should be handed in for recycling collection.



Dispose of old devices (Applies in the European Union and other European countries with separate collection (collection of recyclable materials) Old devices must not be disposed of with household waste! Every consumer is legally obliged to dispose of old devices that can no longer be used separately from household waste, for example at a The user must dispose of the waste at a collection point in his municipality or district. This ensures that the old devices are recycled properly and negative effects on the environment are avoided. For this reason, electrical devices are marked with the symbol shown.



Batteries and accumulators must not be disposed of with household waste! As a consumer, you are legally obliged to dispose of all batteries and accumulators, regardless of whether they contain harmful substances* or not, at a collection point in your community/city or at a dealer to ensure that the batteries can be disposed of in an environmentally friendly manner. * marked with: Cd = cadmium, Hg = mercury, Pb = lead. Return your product with the completely discharged battery to your collection point!

Made in China

Distributed by:

Technaxx Deutschland GmbH & Co. KG
Konrad-Zuse ring 16-18,
61137 Schöneck, Germany