

Lifenaxx[®] * Instructions for use

Electric floor mop with 3 cleaning modes LX-088

Before using the device for the first time, please read the user manual and safety instructions carefully.



This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they are supervised by a person responsible for their safety or have been instructed in its use. Children should be supervised to ensure that they do not play with the device.

Please keep these instructions carefully for future reference or to pass the product on to someone else. Also, keep the original accessories. In case of a warranty claim, please contact the retailer or store where you purchased the product.

Enjoy your product! * Share your experiences and opinions on one of the well-known internet portals.

Specifications are subject to change without notice. Please always refer to the latest user manual, which is available on the manufacturer's website.

Contents

Technical Specifications	3
Product overview	4
LED mode light	4
Battery indicator:	5
Installation:	5
Store	5
Remove, fill and replace the fresh water tank	5
Remove, empty, and replace the wastewater tank	6
Cleaning and replacing the cleaning pad	6
Commissioning:	7
Cleaning the cleaning pad	8
Cleaning the main unit	8
Troubleshooting	8
Note	9
Safety instructions	9
Safety instructions for rechargeable batteries	9
Warning notices	10
Support	10
Disclaimer	10
Declaration of Conformity	11
Disposal	11

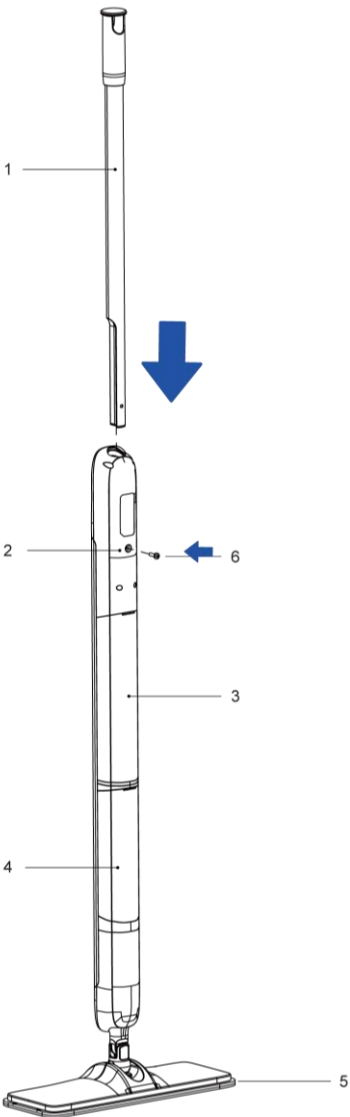 
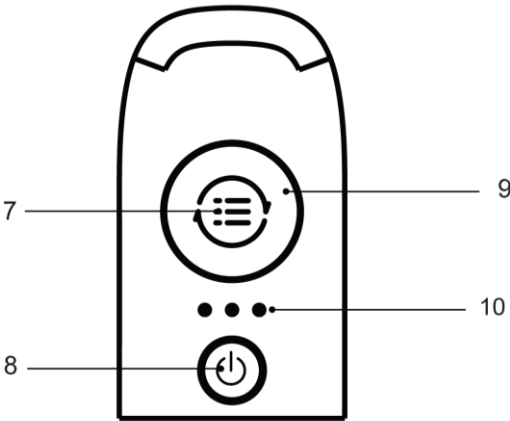 
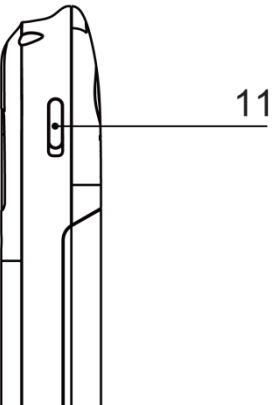 
Special features

- 3 modes for effective cleaning: wet cleaning, intensive cleaning, dry mode
- Suitable for all smooth floors, tiles, vinyl and hardwood floors
- 2 tanks for fresh and wastewater
- Ready for immediate use
- Handy and lightweight

Technical specifications

battery	3.6V 2600mAh
Charging voltage	5V, 0.6A, 3W
Fresh water tank	340ml
wastewater tank	250ml
USB cable	2m USB-A to USB-C
Wet cleaning	17ml/min (fresh water)
Intensive cleaning	56ml/min. (Fresh water)
Dry mode	200ml/min (dirty water)
Operating time/ Battery charging time	160min. or approx. 160m ² /180min.
material	ABS, PP,
Product size (maximum length)	136 x 33.6 x 12.5 cm
Product weight (without accessories)	1.7 kg
Package contents	floor mop LX-088, cleaning pad, handle, mounting screw, USB cable, user manual

Product overview

			
			
1	Handle	2	Screw hole
3	Fresh water tank	4	Wastewater tank
5	Cleaning pad	6	Fastening screw
7	Modes button	8	On/Off
9	LED Modes Light	10	Battery indicator
11	USB-C charging port		

LED mode light (9)

Light blue	Wet cleaning
Dark blue	Intensive cleaning
White	Drying
Pulsating blue	Charging mode

Battery indicator (10)

In swipe mode

3 white LEDs	Battery 71-100% charged
2 white LEDs	Battery 31-70% charged
1 white LED	Battery 21-30% charged
1 LED flashes red	Battery below 20%

In charging mode

1 LED flashes white	Battery charged to 30%
The second LED flashes white	Battery 31-70% charged
3rd LED flashes white	Battery 71-99% charged
3 LEDs light up white	Battery 100% charged

Installation:

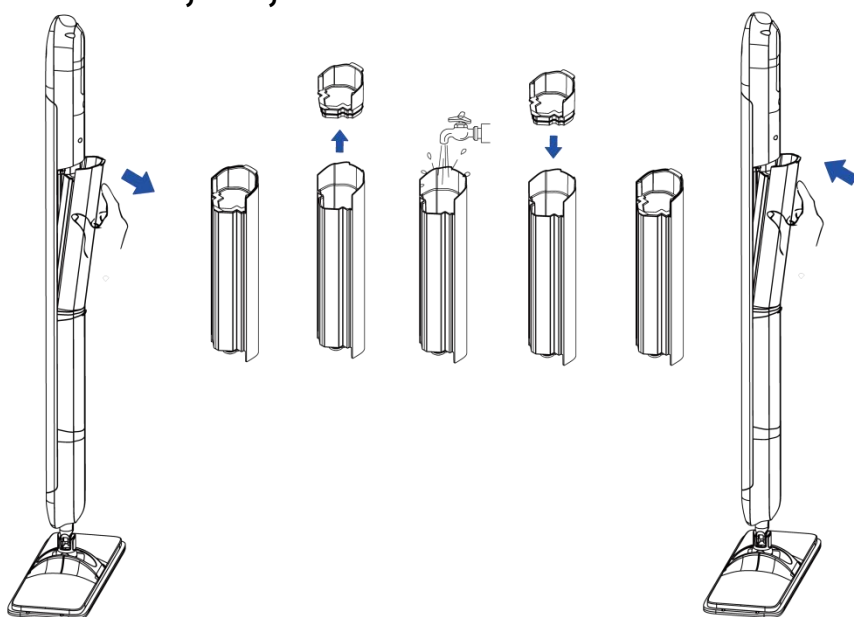
Attaching the handle

1. Insert the handle (1) into the housing of the LX-088 until it clicks fully into place.
2. Insert the fastening screw (6) into the screw hole (2) and tighten the screw.

Load

Before using the floor mop for the first time, fully charge it by connecting the USB cable to a USB charger (5V) (not included) via the charging port (11). Depending on the charger, charging may take up to 4 hours.


Remove, fill, and insert the fresh water tank.



Remove the water tank as shown in the images above, remove the cap,

fill the water tank (careful, observe the maximum fill line), replace the cap, and reinsert the water tank.

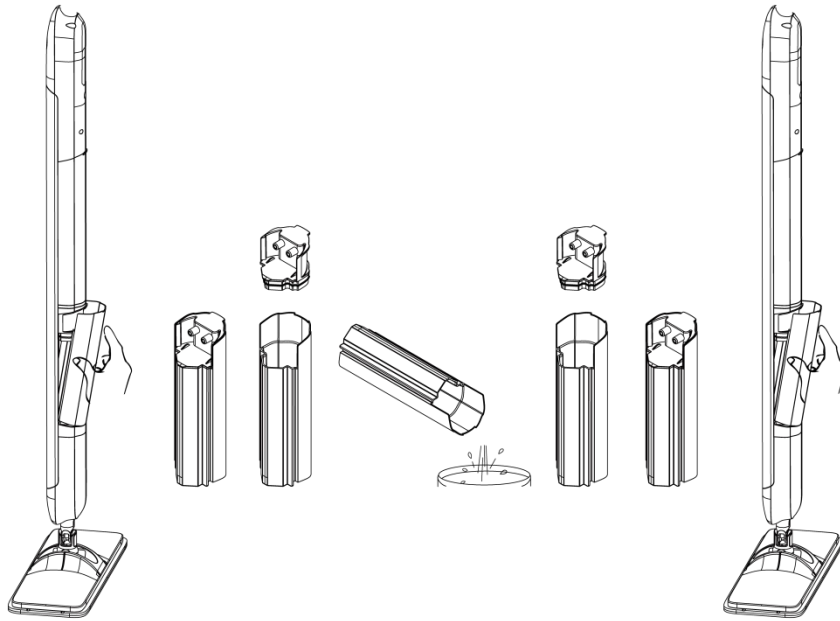Remove, empty, and replace the wastewater tank.




Remove the dirty water tank as shown in the images above, remove the cap, empty the tank. Replace the cap and reinsert the clean water tank.

After cleaning, empty both tanks; the dirty water tank should always be cleaned. Allow the containers to dry completely before replacing the cap.

Cleaning and replacing the cleaning pad

To remove the cleaning pad, lay the mop horizontally with the cleaning pad facing upwards. Remove the cleaning pad and wash or replace it.

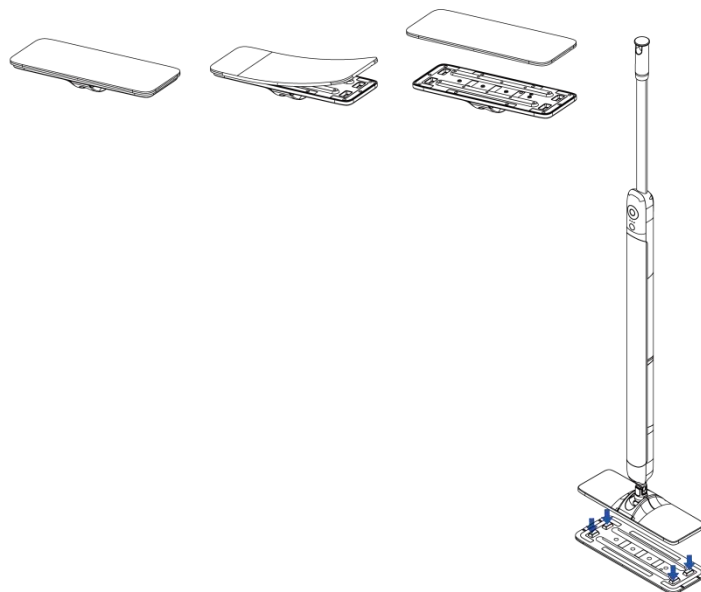Align the water inlet and outlet of the cleaning pad with the water inlet and outlet of the device, place the cleaning pad on the device, and press the floor mop down.



Commissioning:

Wiping hard floors

Note: This device is suitable for mopping hard floors, including delicate and non-absorbent floors (e.g., laminate, non-textured tiles, vinyl, PVC, wood-look parquet, poured floors, stone). Test your flooring suitability in a small, inconspicuous area first.

Vacuum the rooms to be cleaned before using the floor mop.

Remove the freshwater tank (3), remove the cap and do not fill the tank above the max. mark.

Replace the cap and install the freshwater tank.

Place the dry cleaning pad onto the recording.

Press and hold the On/Off button (8) briefly; the floor mop will start in the "wet cleaning" mode.

By pressing the mode button (7) you can switch to "intensive" cleaning or "drying" mode.

Pressing the On/Off button (8) again switches the floor wiper off.

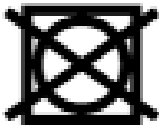
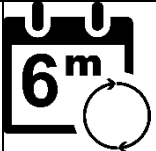
Note: If you wish to use a liquid floor cleaner, be sure to choose a non-foaming liquid floor cleaner that can be diluted with water. Using foaming floor cleaners or those that cannot be diluted with water may impair performance and cause the device to malfunction. Depending on the cleaner, 2-3 drops per fill are sufficient.

Cleaning the cleaning pad

For best results, rinse the cleaning pad under running water. Do not wring out the cleaning pad, as this may damage the backing.

The cleaning pad can be washed in the washing machine at a maximum temperature of 40°C on a gentle cycle; the washing machine should be filled to a maximum of 1/3 capacity. Do not place in the sun or on a radiator to dry.

Note: To prevent odours and limescale buildup, clean the water tank and mop head after each use. Storing the unit with residual water in the tank can damage the mop or the unit itself.

	40°C, very gentle wash. The drum should not be filled more than one-third full.		Do not bleach
	Do not tumble dry		Do not iron
	Do not dry clean		Do not wring out
	use fabric softener.		Replace the cleaning pad every 6 months

Cleaning the main unit

- Clean the device only with a dry or slightly damp, lint-free cloth.
- Do not use abrasive cleaners to clean the device.

Troubleshooting

problem	Possible cause	Solution
All 3 LEDs of the battery indicator flash red while charging.	The charging electronics or the battery have overheated	Remove the charging cable and allow the floor cleaner to cool down.
During use, all 3 LEDs of the battery indicator flash red.	Battery unit overheating	Allow the floor cleaner to cool down.
LEDs 1 and 3 are flashing red	Fault in the freshwater pump circuit	Contact support.

LEDs 1 and 3 are flashing red	Errors in the wastewater cycle	Check the water suction nozzles under the cleaning pad for blockages.
-------------------------------	--------------------------------	---

Notes

● Do not pinch or damage the charging cable. ● Make sure that the charging cable does not come into contact with water, steam or other liquids. ● To prevent the device from malfunctioning, you must regularly check it for functionality, leaks, and damage. ● Install the product according to these instructions and operate and maintain it as directed. ● Use this product indoors only. Keep it away from rain or other liquids that could penetrate the device. ● Do not damage the product. The product may be damaged in the following cases: Accidents (including liquid or moisture), improper use or misuse of the Product, defective or improperly used Installation problems, mains supply problems including voltage spikes or lightning strikes, infestation by Insects, tampering or modification of the product by persons other than authorized service personnel Personnel, exposure to unusually corrosive substances Materials, the introduction of foreign bodies into the Unit, with accessories not approved in advance. ● Make sure the power supply is disconnected before cleaning. ● Observe all warnings and precautions in the instruction manual.

Safety instructions

● Do not disassemble the product yourself. ● Turn off the product and disconnect the power supply if you are not going to use it for an extended period of time. ● Do not use on unsealed hard floors. Always test on a small area ● before using on sensitive floors. ● Never add cleaning agents, descalers, or fragrances to the water tank. ● This device is intended for domestic use only and not for commercial use.

Safety instructions for rechargeable batteries

This product uses rechargeable batteries and can be used wherever you need it. However, ALL batteries can EXPLODE, ignite, and cause burns if disassembled, punctured, cut, crushed, short-circuited, burned, or exposed to water, fire, or high temperatures. Therefore, handle them with care.

To ensure safe use of the rechargeable batteries, follow these guidelines:

- ALWAYS make sure the battery compartment is clean and free of foreign objects before inserting new batteries.
- ALWAYS make sure that the battery contacts are correctly aligned.
- Always keep all batteries out of the reach of children.

- Always follow local waste and recycling regulations when disposing of used batteries.
- ALWAYS use the product to charge the batteries.
- NEVER place the batteries in a bag, purse or other container, especially not in those containing metal objects.
- NEVER store the batteries together with dangerous or flammable materials.
- NEVER let the battery or battery compartment get wet – neither before, during nor after installation.
- disassemble, cut, crush, puncture or short-circuit the batteries, do not dispose of them in fire or water, and do not expose the battery to temperatures above 50°C.

Warning notices

●Do not disassemble the product, as this may cause short circuits or damage. ●The battery life decreases with use. To preserve its lifespan, charge the battery at least once a month if the product will not be used for extended periods. ●Battery warning: Improper use of the battery may result in fire or chemical burns. If damaged, the battery may explode. ●Do not attempt any modifications, repairs, or disassembly without expert guidance. Do not ●use corrosive or volatile liquids for cleaning. ●Do not drop or shake the device, as this may damage the internal circuit boards or mechanical components. ●Keep the device away from small children. ●Do not operate the device unattended. ● Avoid operating the device with wet hands. ●Do not expose the cable to hot surfaces. ● Do not operate the device if it is damaged or has been dropped. ● Repairs may only be carried out by authorized service personnel.

Support

Service telephone number for technical support: **01805 012643*** (14 cents/minute from German landlines and 42 cents/minute from mobile networks).

Free email: **support@technaxx.de**

The support hotline is available Monday to Friday from 9 a.m. to 1 p.m. and from 2 p.m. to 5 p.m. For malfunctions and accidents, please contact: **gpsr@technaxx.de**

Disclaimer

Technaxx Germany shall in no case be liable for direct, indirect, incidental or special consequential damages to property or life, or for improper storage, arising from or related to the use or misuse of its products.

Declaration of Conformity



Technaxx Deutschland GmbH & Co. KG hereby declares that the product complies with Directive 2014/30/EU. The full text of the EU declaration of conformity is available at the following internet address: www.technaxx.de/reseller

Disposal



Disposal of packaging. Dispose of packaging materials separately by type.

Cardboard and paperboard belong in the paper recycling. Please put plastic film in the recycling collection.



Disposal of old electrical appliances (Applies in the European Union and other European countries with separate collection (recycling)): Old electrical appliances must not be disposed of with household waste! Every consumer is legally obligated to dispose of unusable old electrical appliances separately from household waste, e.g., at a collection point in their municipality or district. This ensures that the old appliances are properly recycled and that negative environmental impacts are avoided. Electrical appliances are therefore marked with the symbol shown here.



Batteries and rechargeable batteries must not be disposed of in household waste! As a consumer, you are legally obligated to return all batteries and rechargeable batteries, regardless of whether they contain hazardous substances* or not, to a collection point in your community/city or free of charge to a retailer so that they can be disposed of in an environmentally sound manner.

(* marked with: Cd = Cadmium, Hg = Mercury, Pb = Lead.)

Remove all batteries before disposal. Return your product to your collection point with the battery installed and only when it is completely discharged! Further information on the Battery Act can be found online at www.batteriegesetz.de.

Made in China

Distributed by:
Technaxx Deutschland GmbH & Co. KG
Konrad-Zuse-Ring 16-18,
61137 Schöneck