

Lifenaxx® * User Manual

Multifunctional Steam Mop LX-071

Before using the appliance for the first time, please read the instructions for use and safety information carefully.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or by persons lacking in experience or knowledge, unless they are supervised or instructed on the use of this device by a person responsible for their safety. Children should be supervised to ensure they do not play with this device.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

Enjoy your product * Share your experience and opinion on one of the well-known internet portals.

Specifications are subject to change without notice - please be sure to use the latest manual available on the manufacturer's website.


Features

- Steam cleaning
- For carpets, tiles, vinyl and hardwood floors
- Quick heat up
- Multi-usage accessories
- Detachable and lightweight
- Telescope handle

Technical Specifications

Rated power	1500 W
Input voltage	220-240 V / 50~60 Hz
Water tank	350 ml
Power cord length	5 m
Heating time	≥ 30 s
Steam rate	20-30 g/min
Area performance	Approx. 60 m ²
Protection class	IP X4
Working time (one tank load)	15 to 20 min
Material	ABS, PP, Aluminum
Product size (max length)	31.5 x 18 x 105 (120) cm
Product weight (without accessories)	2.2 Kg
Package contents	Steam mop LX-071, 2x microfiber cloth pads, carpet glider, crevice nozzle, nylon brush small, nylon brush big, scraper, fabric brush, angled nozzle, nozzle adapter, glass cleaner, cup, funnel, user manual

Product Overview

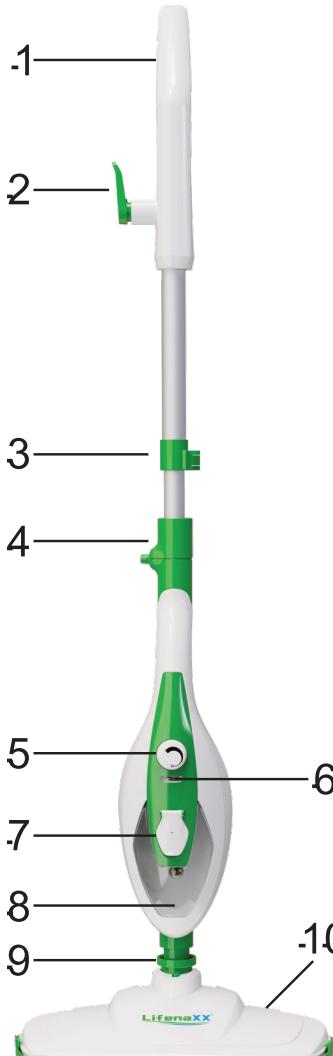	1 Handle
2 Power cord storage hook	2 Power cord storage hook
3 Telescope lock for height adjustment	3 Telescope lock for height adjustment
4 Handheld release button / power cord hook	4 Handheld release button / power cord hook
5 Power switch / steam control	5 Power switch / steam control
6 Indicator light	6 Indicator light
7 Water tank infill	7 Water tank infill
8 Water tank	8 Water tank
9 Articulated head	9 Articulated head
10 Floor head	10 Floor head

Accessories

 
	Crevice nozzle		Angled nozzle
	Round nylon brush small & big		Nozzle adapter
	Scraper		Glass cleaner
	Fabric brush with cloth		Carpet glider

Quick Start

Installation Options:

Attaching the Handle

1. Insert the handle extension tube into the steam mop body until fully secured.
2. To remove the handle, press the handle release button.

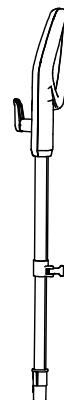

Attaching the Steam Head

1. Align and slide the mop head onto the steam mop body until the spindle clicks into place.
2. Ensure both parts are securely locked.

Warning: Never force the parts together.

Installing the Microfiber Cloth

- Place the cloth over the mop head and secure it tightly by pressing it properly against the head.



Installing the Carpet Glider

- Attach the microfiber cloth to the mop head.
- Place the carpet glider around the mop head and cloth.
- To remove, step on the glider and lift the mop.



Note: Refer to the washing instructions at the microfiber cloth's label for machine wash.

Filling the Water Tank

1. Open the water tank cap.
2. Fill with **up to 350 ml** of clean water. Use the measure cup and funnel attached.
3. Close the cap securely.



Warning: Never add chemicals or cleaning agents to the tank.

Note: Using distilled water can help reduce limescale buildup and maintain the mop's overall performance and appearance.

Using Steam Mop

1. Plug into mains and switch on by twisting the steam control.
2. The green light indicates the unit is ready (approx. 30 seconds).
3. Steam will continue until it is switched off or the water runs out.
4. A full tank provides approximately 15 minutes of steam.


Important: If the tank runs out of water, please turn off the steamer immediately.

Refilling During Use

1. Switch off and unplug.
2. Refill with water as above.
3. Resume the operation once securely sealed.

Using as a Hand-Held Steamer

1. Remove the handle using the release button.
2. Remove the floor head from the steamer.
3. Attach the accessory nozzle adaptor.
4. Select and attach the accessory by twisting clockwise and aligning the marked arrows.

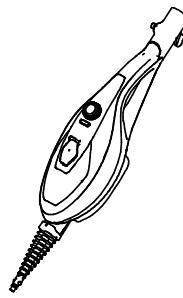

Care and maintenance

After Each Use

- Unplug the appliance and allow it to cool.
- Drain the water tank and rinse.
- Wash accessories with warm soapy water.
- Allow all parts to dry fully before storage.

Descaling the Water Tank

- Mix 1–2 tablespoons white vinegar with water in the tank.
- Shake gently to loosen mineral buildup.

Warning: Do not turn on the unit during this process.

Limescale Removal

- If steam output drops, limescale may be the cause.
- Mix a solution of **1/3 vinegar and 2/3 water** in the tank.
- Steam until the tank is empty.
- Rinse with clean water.

Warning: Do not leave the unit unattended during limescale treatment. Test on an isolated surface after cleaning.

Blocked Accessories

- Soak in vinegar solution and steam through with clear water until it's clear.
- Always aim at a neutral surface or cloth during cleaning.

Microfiber Cloth Care

- Machine wash on warmth with mild detergent.
- Do not use bleach or fabric softener.
- Lay flat to dry.

Note: Refer to the wash instructions at the cloth's washing label.

Main Unit Cleaning

- Clean the device only with a dry or slightly damp, lint-free cloth.
- Do not use abrasive cleaners to clean the device.

Power Cord Storage

- Wind up the power cord alternately over the upper and lower cord storage hook.

Note: The upper cord holder can be rotated by 180° for removing the cable. The lower cord holder cannot be rotated.

Troubleshooting

Problem	Possible Cause	Solution
No steam or reduced steam	Empty tank, blocked nozzle, unit not powered, steam knob set to low	Refill tank, clean nozzle, check power, adjust steam knob
Unit not turning on	Blown fuse, unplugged cord, faulty fuse	Check fuse, plug in, contact service

Hints

- Make sure you lay the cable in a way that the danger of stumbling is avoided.
- Never hold or carry the device by the power cable.
- Do not clamp or damage the power cable.
- Ensure that the power adapter does not get contact with water, steam or other liquids.
- You must check the complete construction at regular intervals for functionality, tightness and damage to prevent the defect of the device.
- Install the product due to this user manual and operate or maintain it in accordance with the manufacturer's instructions.
- Use the product indoors only. Keep it away from rain or other liquids that may enter the device.
- Do not damage the product. Following cases may damage the product: Incorrect voltage, accidents (including liquid or moisture), misuse or abuse of the product, faulty or improper installation, mains supply problems including power spikes or lightning damage, infestation by insects, tampering or modification of the product by persons other than authorized service personnel, exposure to abnormally corrosive materials, insertion of foreign objects into the unit, used with accessories not preapproved.
- Always wear closed-toe, non-slip footwear when operating or maintaining the appliance.
- Do not leave the steam mop resting on one spot while on for more than 15 seconds.
- Use only demineralized or filtered water to extend appliance lifespan.
- Ensure hot surfaces are cooled and power is disconnected before cleaning.
- Refer to and heed all warnings and precautions in the user manual.

Safety instructions

- Do not disassemble the product by your own.
- Turn off and cut off the power supply if not use the product for a long time.
- Do not use on unsealed hard floors, waxed, or steam-sensitive surfaces (e.g. velvet, leather, synthetic fabrics).
- Always test on a small area before using it on sensitive floors.
- Never add detergents, descalers, or perfumes to the water tank.
- This appliance is intended for household use only and not for commercial use.

Warnings

- Never direct steam towards people, pets, electrical appliances, or power outlets.
- Use caution to avoid scalding from hot steam.
- Do not operate the appliance unattended.
- Avoid using the appliance with wet hands.
- Do not pull or carry the unit by the cord or expose the cord to heated surfaces.
- Do not operate the appliance if damaged or if it has been dropped.
- Repairs must only be performed by authorized service personnel only.

Support

Service phone No. for technical support: **01805 012643*** (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free Email: **support@technaxx.de**

The support hotline is available Mon-Fri from 9am to 1pm & 2pm to 5pm. In the event of anomalies and accidents, please contact: **gpsr@technaxx.de**

Disclaimer

In no event shall Technaxx Deutschland be liable for any direct, indirect punitive, incidental, special consequential danger, to property or life, improper storage, whatsoever arising out of or connected with the use or misuse of their products.

Declaration of Conformity



Technaxx Deutschland GmbH & Co. KG hereby declares that the is in compliance with Directive 2014/30/EU. The full text of the EU Declaration of Conformity is available at the following internet address: www.technaxx.de/reseller

Disposal



Disposal of the packaging. Sort packaging materials by type upon disposal.

Dispose of cardboard and paperboard in the waste paper. Foils should be submitted for recyclables collection.



Disposing of old equipment (Applies in the European Union and other European countries with separate collection (collection of recyclable materials) Old equipment must not be disposed of with household waste! Every consumer is required by law to dispose of old devices that can no longer be used separately from household waste, e.g. at a collection point in his or her municipality or district. This ensures that the old devices are properly recycled and that negative effects on the environment are avoided. For this reason, electrical devices are marked with the symbol shown here.

Made in China

Distributed by:
Technaxx Deutschland GmbH & Co. KG
Konrad-Zuse-Ring 16-18,
61137 Schöneck, Germany