

Technaxx® Socket Adapter with PIR Motion and Light Sensor TX-224

Before using the appliance for the first time, please read the instructions for use and safety information carefully.

Service phone No. for technical support: 01805 012643* (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks).

Free Email: support@technaxx.de

*The support hotline is available Mon-Fri from 9 am to 1 pm & 2 pm to 5 pm.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

Enjoy your product * Share your experience and opinion on one of the well-known internet portals.

Explanation of Warning Symbols and Notes	1
Product overview /Specifications	2
Cleaning and maintenance	2
Danger! Always unplug the product from the socket before starting cleaning work. Keep the housing as free as possible from dirt and dust. Wipe the unit with a clean cloth. - Clean the unit regularly with a damp cloth and a little soft soap. Do not use any cleaning agents or solvents; these could attack the plastic parts of the unit. Make sure that no water can penetrate the appliance. Water penetration into a power tool increases the risk of electric shock. - The product should be stored in a dry room.....	
Declaration of conformity	2
Disposal	2

Danger!



- Do not open the device or continue to operate it if it becomes damaged.
- Do not use the unit if it is damaged.
- Do not attempt to service or repair the product yourself. Leave any and all service work to qualified experts.

Warnings

- The device is intended exclusively for private and not for commercial use.
- Only use this device as described in this user manual.
- Protect the product from dirt, moisture and overheating and use it in dry rooms only.
- Do not drop the product and do not expose it to any major shocks.
- Do not operate the product outside the power limits given in the specifications.
- Do not modify the device in any way. Doing so voids the warranty.
- Do not continue to operate the device if it becomes visibly damaged.
- Use the product for its intended purpose only.
- Keep this product, as all electrical products, out of the reach of children!
- Do not use the product in the immediate vicinity of heaters or other heat sources or in direct sunlight.

- The product is intended for indoor use only.
- Use the item only in moderate climatic conditions.
- Do not use the product in areas where the use of electronic devices is not permitted.
- Do not use the product in moist environments and avoid splashes. Children are not allowed to play or use the equipment.
- Do not let children play with plastic bags, foils or small parts.
- There is a danger of swallowing or suffocating!
- The device is intended only for private use.
- Always disconnect the item from the mains when not in use
- Do not use in a humid environment.
- The socket is suitable for use in ambient temperatures that do not usually exceed 25°C, but occasionally reach 35°C.
- Do not plug in one after the other.
- Do not operate covered.
- Never leave mains units and voltage sources unattended!

Product overview /Specifications

	TX-224
Input	Socket : 230V ~50Hz 10A
Output max. in W	Socket : 2300W

Operating process

First insert the plug into a socket. To set how long the light object should light up after the motion sensor is activated, slide the right button down. Either one, five or 10 minutes. With the left button, you can set the brightness of the light. There are three options: 3 lux (night), 600 lux (twilight) or 1200 lux (bright). Now plug in the electronic device and when movement is detected, the device switches on according to the set brightness and duration.

Cleaning and maintenance

Danger! Always unplug the product from the socket before starting cleaning work. Keep the housing as free as possible from dirt and dust. Wipe the unit with a clean cloth. - Clean the unit regularly with a damp cloth and a little soft soap. Do not use any cleaning agents or solvents; these could attack the plastic parts of the unit. Make sure that no water can penetrate the appliance. Water penetration into a power tool increases the risk of electric shock. - The product should be stored in a dry room.

Declaration of conformity



The EU declaration of conformity can be obtained from the address given www.technaxx.de/ (in bottom bar "Konformitätserklärung").

Disposal



Dispose of packaging. Dispose of the packaging according to type. Dispose of cardboard and carton in the waste paper foils to the recyclables collection.



Dispose of old appliance (Applicable in the European Union and other European countries with separate collection (collection of recyclable materials) Old appliances must not be disposed of with household waste! If the product can no longer be used, every consumer is legally obliged to dispose of old appliances separately from household waste, e.g. at a collection point in his or her municipality or district. e.g. at a collection point in his or her municipality/borough. This ensures that old appliances are recycled properly and that negative impacts on the environment are avoided. This is why electrical appliances are marked with the symbol shown here.