


Decorative LED Aroma diffuser TG-27 Instruction Manual

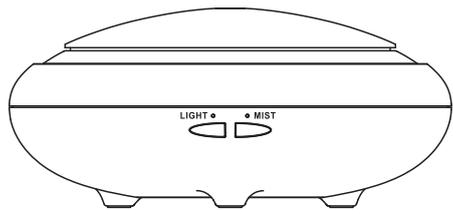

Read the instructions carefully before using the model. Keep the Instructions for future reference

Highlights

- aromatisation with ultrasonic humidification technology
- Suitable for essential oils
- 7 color changing LED light
- Nebulization possible with light and without light
- Virtually silent: use also in the bedroom and children's rooms
- Capacity tank: 150 ml
- Automatic shutdown with empty tank
- Easy operation and easiest cleaning
- Energy-saving: Only 6 watts
- High operating safety thanks to 24 volt low voltage

Technical data

- Power input/output: AC100-240V 50/60Hz / DC 24V 500mA
- Cable length: approx. 150 cm
- Electric Consumption: 6 W
- Ultrasonic Frequency: Ultrasonic vibration at approx. 2.4MHz
- Material: PP / ABS
- Water tank capacity: 150 ml
- Mist Mode: Interval mist mode / continous mist mode
- Working time Interval mist mode: 8 - 10 hours
- Working time continous mist mode: 4-6 hours
- 7 Color LED Mode: Automatic Color Change / Monochrome/Off
- Size: 155mm (diameter) x 70mm (height)
- Weight: approx. 257 g


Technical data remote Control

- Signal emission mode: RF - Battery: A23/1 x 12V 23A - Control distance: up to 8m. - Remote size: L120*W40*H16mm

Contents


- TG-27 LED Aroma Diffuser - Remote Control - Power Adapter - Measure Cup - Instruction Manual

This Aroma Diffuser uses Ultrasonic waves to instantly vaporize water and essential oil in the tank, to produce a cool, dry fragrant mist.

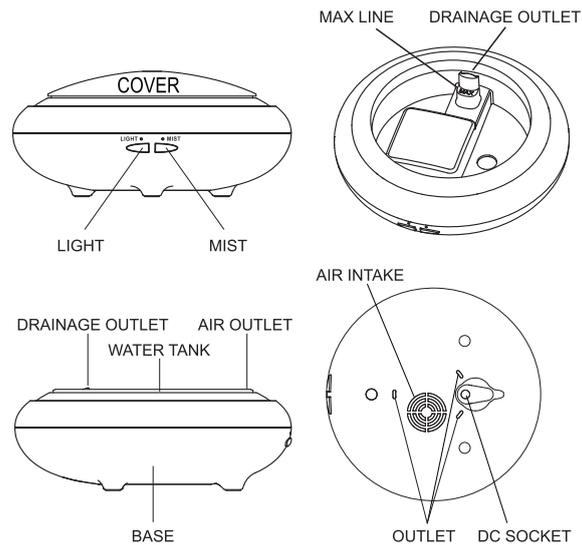

OPERATION

- Please place the model upright then take off the cover carefully. **Fig.1**
- Please connect the DC port of the adaptor to the DC slot in the base. **Fig.2**
- Please use measuring cup to add water into the tank. DO NOT exceed the max line 150ML; DO NOT add water when the model in work status; DO NOT use hot water.
- Add essential oils into the tank after the tank filled with water(0.1ML-0.15ML essential oils per 100ml water).
- Re-install the cover vertically. **Fig.4**
NOTE: The cover must be re-installed before using the diffuser.
- Please connect the AC adaptor to the power socket. Then the light will be ON. (After you hear one short sound "D", the light will shut automatically)
- MIST:** First press, it enters continuous mist mode. (one indicator will be on)
Second press, it enters intermittent mist mode. (two indicators will be on). It will work 30 seconds, stop 30 seconds, recycle.
Third press, the model will be off. (All functions will not be available). In any modes, long press **MIST** over 2 seconds, the unit will be off status. **Fig.5**
- LIGHT:** First press, it enters 7 colors changing automatically mode.
Second press, it enters to stop at the current color mode. Long press over 2 seconds, the **LIGHT** will be off alone. When **MIST** is off, **LIGHT** can work alone. **Fig.6**
- If you don't use it for a long time, please drain out the water in the tank and keep it at the dry place.
- The product is off status as default when power is on.
- The product will shut-off automatically when water shortage, even though the

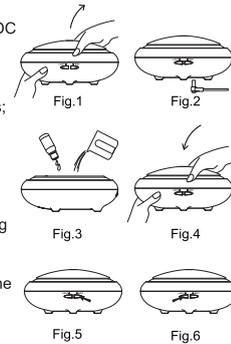

- mist is "on".
- 12. Light can be turned off automatically together with the mist when setting timer is up.


WARM TIPS

- Please use the measuring cup to add water, don't fill in the tank from water-tap directly.
- Only 100% natural essential oil can be used in this product. Those containing chemical fragrance, spice or impurities will cause malfunction. Please clean the unit as per the maintenance instructions before changing new type of essential oil.
- Factors that affect the mist density are including water type, humidity, temperature, air currents.
- Do not let the mist spray to the furniture, clothes, wall directly.
- The essential oils may cause dyed, please use clean cloth wipe up if splash out accidentally.
- To ensure the sanitation, please pour out the water completely and wipe up the product after each being used.

ACCIDENTAL LEAKAGE

In the event of the unit being knocked over or tipped during use, please follow the steps as below to avoid malfunction.


- Unplug the unit and remove cover.
- Pour out any remaining water out of the water tank.
- Shake the unit gently to drain any water inside the mechanism, and then allow it drying for at least 24 hours.

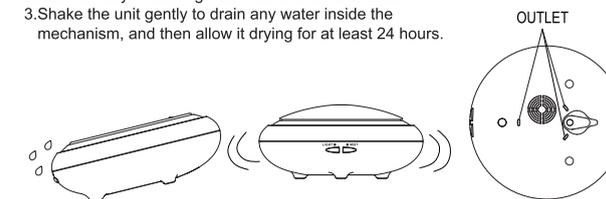

MAINTENANCE

After using 5-6 times, or 2-3 days, please clean the product as follows:

- Unplug the unit from mains supply and remove cover.
- Pour out any remaining water from the "Drain Side" of the tank.
- Put a small amount of kitchen detergent (neutral detergent recommended) diluted in the water, use a clean cloth dip in the water and then wipe up the unit gently.
- If there are stains at the air outlet, please remove the inner cover to clean it.
- Never use other acids, enzymes or detergents, as this may risk poisonous gas to be created or cause malfunction.

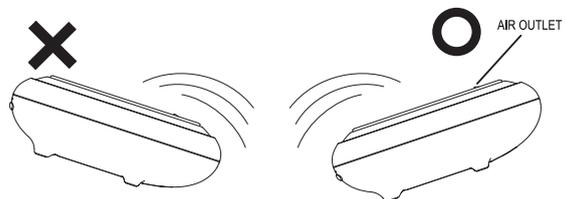

PRECAUTIONS

Please read carefully the following safety precautions before using this product, and ensure that this product is always used correctly.

These listed precautions are aim to protect you from being hurt, and protect the product from being damaged.

Warning: May cause serious personal injury.

- Please keep the product unreachable for children and babies, winding around the power cord to the children's neck mistakenly may lead to suffocation death.
- Please use standard adaptor of this product.
- Please don't dismantle, modify, heating the product.
- Avoiding from falling down or heavily hitting.
- If the product smoke, make a smell, or have any abnormal situation, please stop using it immediately.
- Do not use alcohol, gasoline, thinner and other organic solvents to clean the product.
- Do not touch any part of the product with wet hands.
- Do not allow the metal objects (like pin, key) in contact with the terminals or plug.
- Do not cut, damage, modify the power cord, or put the weight on the power cord. Otherwise it may cause an electric shock or fire.

Attentions: May cause product damaged.

- Do not allow liquids or foreign matter to enter the product, otherwise it may cause irreparable damage to the product.
- Please unplug the product when not in use.
- Do not cover anything on the product when it is working.
- Please placed the product in a safe place where others will not be tripped by the power cord, or it may cause injury or damage to the product.
- Avoid using the product at the following locations:
Direct sunlight, high temperature or wet, dusty place.
Keep away from electronic equipment, such as TV, and Audio equipment.
Strong vibrating place.

TROUBLESHOOTING

Please refer to the table below in the event of the product operating abnormally

Symptom	Possible Cause	Solution
Will not switch on-switch off early	<ul style="list-style-type: none"> Is there enough water in the tank? Is the power cord connected properly? 	<ul style="list-style-type: none"> Add water to the tank Disconnect, check cables and re-connect carefully.
No mist or abnormal mist	<ul style="list-style-type: none"> Not enough water? Too much water? Dirt on the Ultrasonic plate? Cover and inner cover are not installed properly? Dirt on the air suction port on the underside of the base? 	<ul style="list-style-type: none"> Add suitable amount of water in the tank. Water must never be filled over 150ML (MAX) line. Please refer to Maintenance instructions Remove and re-install correctly, so vapors can be released freely. Clean the air suction port of any dust. Restricted airflow will affect mist.
Water leakage from product	<ul style="list-style-type: none"> Cover and inner cover are not installed properly? Has the unit been tipped over? Low temperature or high humidity? 	<ul style="list-style-type: none"> Remove and reinstall correctly, so vapors can be released freely. Follow accidental leakage instructions. Under these conditions, the mist may condense quickly into water droplets.

Safety Notes: Keep packaging material away from children! Choking hazard!
If you suffer from a severe respiratory or lung disease, consult your doctor before using the device.
If you start to feel unwell while the device is in use, stop using it immediately, switch the device off and ventilate the room.


- As with every electrical device, use this device carefully and cautiously, in order to avoid hazards due to electric shock.
- Only use this device with voltage specified on the device
 - Never use the device if it shows visible signs of damage
 - Do not use this device during a thunderstorm
 - In the case of defects or operational faults, switch the device off immediately and disconnect the device from the mains socket. Do not pull on the mains cable or on the device to disconnect the mains adapter from the socket. Never hold or carry the device by the mains cable.
 - Only use the device in dry rooms (e.g. never in bath)
 - Never reach for a device that has been submerged in water. Disconnect the mains adapter immediately.
 - Do not drop the device or subject it to any impacts.
 - Do not clamp or pinch the mains cable.
 - Ensure that the mains cable and mains adapter do not come into contact with water, steam or other liquids.

Hints for Environment Protection: Packages materials are raw materials and can be recycled. Do not dispose old devices or batteries into the domestic waste. Cleaning: Protect the device from contamination and pollution. Only clean the device with soft cloth or drapery, avoid using rough or coarse-grained materials. Do not use solvents or other aggressive cleaner. Wipe the device after cleaning accurately.

Distributor: Technaxx Deutschland GmbH & Co.KG, Kruppstr. 105, 60388 Frankfurt a.M., Germany
The Declaration of Conformity for this device is under: www.technaxx.de/ (in bottom bar "Konformitätserklärung")



Decorative LED Aroma diffuser TG-27 Instruction Manual

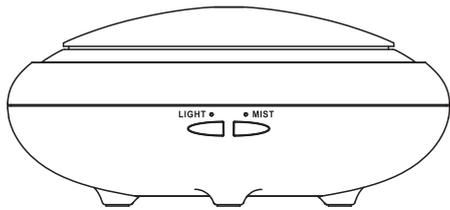

Read the instructions carefully before using the model. Keep the Instructions for future reference

Highlights

- aromatisation with ultrasonic humidification technology
- Suitable for essential oils
- 7 color changing LED light
- Nebulization possible with light and without light
- Virtually silent: use also in the bedroom and children's rooms
- Capacity tank: 150 ml
- Automatic shutdown with empty tank
- Easy operation and easiest cleaning
- Energy-saving: Only 6 watts
- High operating safety thanks to 24 volt low voltage

Technical data

- Power input/output: AC100-240V 50/60Hz / DC 24V 500mA
- Cable length: approx. 150 cm
- Electric Consumption: 6 W
- Ultrasonic Frequency: Ultrasonic vibration at approx. 2.4MHz
- Material: PP / ABS
- Water tank capacity: 150 ml
- Mist Mode: Interval mist mode / continous mist mode
- Working time Interval mist mode: 8 - 10 hours
- Working time continous mist mode: 4-6 hours
- 7 Color LED Mode: Automatic Color Change / Monochrome/Off
- Size: 155mm (diameter) x 70mm (height)
- Weight: approx. 257 g


Technical data remote Control

- Signal emission mode: RF - Battery: A23/1 x 12V 23A - Control distance: up to 8m. - Remote size: L120*W40*H16mm

Contents


- TG-27 LED Aroma Diffuser - Remote Control - Power Adapter - Measure Cup - Instruction Manual

This Aroma Diffuser uses Ultrasonic waves to instantly vaporize water and essential oil in the tank, to produce a cool, dry fragrant mist.

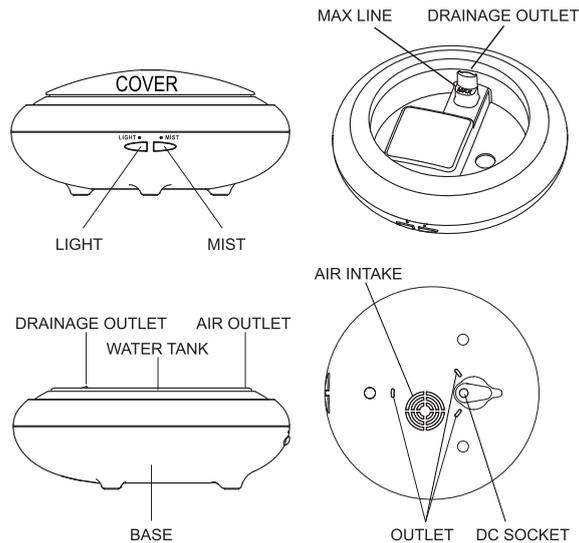

OPERATION

- Please place the model upright then take off the cover carefully. **Fig.1**
- Please connect the DC port of the adaptor to the DC slot in the base. **Fig.2**
- Please use measuring cup to add water into the tank. DO NOT exceed the max line 150ML; DO NOT add water when the model in work status; DO NOT use hot water.
- Add essential oils into the tank after the tank filled with water(0.1ML-0.15ML essential oils per 100ml water).
- Re-install the cover vertically. **Fig.4**
NOTE: The cover must be re-installed before using the diffuser.
- Please connect the AC adaptor to the power socket. Then the light will be ON. (After you hear one short sound "D", the light will shut automatically)
- MIST:** First press, it enters continuous mist mode. (one indicator will be on)
Second press, it enters intermittent mist mode. (two indicators will be on). It will work 30 seconds, stop 30 seconds, recycle.
Third press, the model will be off. (All functions will not be available). In any modes, long press **MIST** over 2 seconds, the unit will be off status. **Fig.5**
- LIGHT:** First press, it enters 7 colors changing automatically mode.
Second press, it enters to stop at the current color mode. Long press over 2 seconds, the **LIGHT** will be off alone. When **MIST** is off, **LIGHT** can work alone. **Fig.6**
- If you don't use it for a long time, please drain out the water in the tank and keep it at the dry place.
- The product is off status as default when power is on.
- The product will shut-off automatically when water shortage, even though the

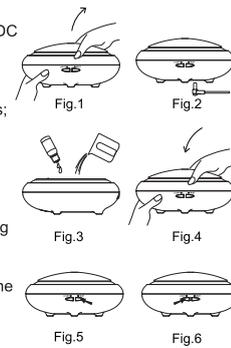

mist is "on".
12. Light can be turned off automatically together with the mist when setting timer is up.


WARM TIPS

- Please use the measuring cup to add water, don't fill in the tank from water-tap directly.
- Only 100% natural essential oil can be used in this product. Those containing chemical fragrance, spice or impurities will cause malfunction. Please clean the unit as per the maintenance instructions before changing new type of essential oil.
- Factors that affect the mist density are including water type, humidity, temperature, air currents.
- Do not let the mist spray to the furniture, clothes, wall directly.
- The essential oils may cause dyed, please use clean cloth wipe up if splash out accidentally.
- To ensure the sanitation, please pour out the water completely and wipe up the product after each being used.

ACCIDENTAL LEAKAGE

In the event of the unit being knocked over or tipped during use, please follow the steps as below to avoid malfunction.


- Unplug the unit and remove cover.
- Pour out any remaining water out of the water tank.
- Shake the unit gently to drain any water inside the mechanism, and then allow it drying for at least 24 hours.

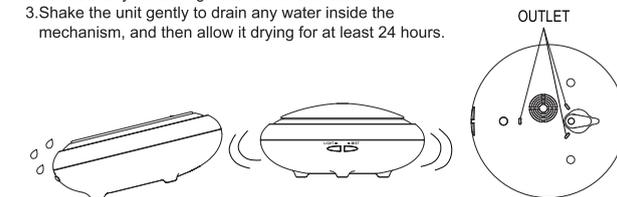

MAINTENANCE

After using 5-6 times, or 2-3 days, please clean the product as follows:

- Unplug the unit from mains supply and remove cover.
- Pour out any remaining water from the "Drain Side" of the tank.
- Put a small amount of kitchen detergent (neutral degerent recommended) diluted in the water, use a clean cloth dip in the water and then wipe up the unit gently.
- If there are stains at the air outlet, please remove the inner cover to clean it.
- Never use other acids, enzymes or detergents, as this may risk poisonous gas to be created or cause malfunction.

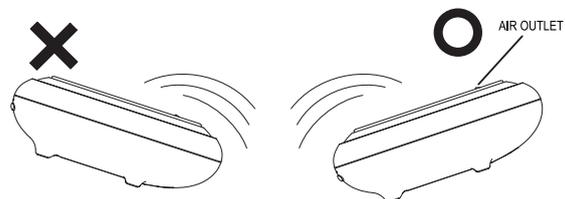

PRECAUTIONS

Please read carefully the following safety precautions before using this product, and ensure that this product is always used correctly.

These listed precautions are aim to protect you from being hurt, and protect the product from being damaged.

Warning: May cause serious personal injury.

- Please keep the product unreachable for children and babies, winding around the power cord to the children's neck mistakenly may lead to suffocation death.
- Please use standard adaptor of this product.
- Please don't dismantle, modify, heating the product.
- Avoiding from falling down or heavily hitting.
- If the product smoke, make a smell, or have any abnormal situation, please stop using it immediately.
- Do not use alcohol, gasoline, thinner and other organic solvents to clean the product.
- Do not touch any part of the product with wet hands.
- Do not allow the metal objects (like pin, key) in contact with the terminals or plug.
- Do not cut, damage, modify the power cord, or put the weight on the power cord. Otherwise it may cause an electric shock or fire.

Attentions: May cause product damaged.

- Do not allow liquids or foreign matter to enter the product, otherwise it may cause irreparable damage to the product.
- Please unplug the product when not in use.
- Do not cover anything on the product when it is working.
- Please placed the product in a safe place where others will not be tripped by the power cord, or it may cause injury or damage to the product.
- Avoid using the product at the following locations:
Direct sunlight, high temperature or wet, dusty place.
Keep away from electronic equipment, such as TV, and Audio equipment.
Strong vibrating place.

TROUBLESHOOTING

Please refer to the table below in the event of the product operating abnormally

Symptom	Possible Cause	Solution
Will not switch on-switch off early	<ul style="list-style-type: none"> Is there enough water in the tank? Is the power cord connected properly? 	<ul style="list-style-type: none"> Add water to the tank Disconnect, check cables and re-connect carefully.
No mist or abnormal mist	<ul style="list-style-type: none"> Not enough water? Too much water? Dirt on the Ultrasonic plate? Cover and inner cover are not installed properly? Dirt on the air suction port on the underside of the base? 	<ul style="list-style-type: none"> Add suitable amount of water in the tank. Water must never be filled over 150ML (MAX) line. Please refer to Maintenance instructions Remove and re-install correctly, so vapors can be released freely. Clean the air suction port of any dust. Restricted airflow will affect mist.
Water leakage from product	<ul style="list-style-type: none"> Cover and inner cover are not installed properly? Has the unit been tipped over? Low temperature or high humidity? 	<ul style="list-style-type: none"> Remove and reinstall correctly, so vapors can be released freely. Follow accidental leakage instructions. Under these conditions, the mist may condense quickly into water droplets.

Safety Notes: Keep packaging material away from children! Choking hazard!
If you suffer from a severe respiratory or lung disease, consult your doctor before using the device.
If you start to feel unwell while the device is in use, stop using it immediately, switch the device off and ventilate the room.

- As with every electrical device, use this device carefully and cautiously, in order to avoid hazards due to electric shock.
- Only use this device with voltage specified on the device
 - Never use the device if it shows visible signs of damage
 - Do not use this device during a thunderstorm
 - In the case of defects or operational faults, switch the device off immediately and disconnect the device from the mains socket. Do not pull on the mains cable or on the device to disconnect the mains adapter from the socket. Never hold or carry the device by the mains cable.
 - Only use the device in dry rooms (e.g. never in bath)
 - Never reach for a device that has been submerged in water. Disconnect the mains adapter immediately.
 - Do not drop the device or subject it to any impacts.
 - Do not clamp or pinch the mains cable.
 - Ensure that the mains cable and mains adapter do not come into contact with water, steam or other liquids.


Hints for Environment Protection: Packages materials are raw materials and can be recycled. Do not disposal old devices or batteries into the domestic waste.
Cleaning: Protect the device from contamination and pollution.
Do not clean the device with soft cloth or drapery, avoid using rough or coarse-grained materials.
Do not use solvents or other aggressive cleaner. Wipe the device after cleaning accurately.

Distributor: Technaxx Deutschland GmbH & Co.KG, Kruppstr. 105, 60388 Frankfurt a.M., Germany
The Declaration of Conformity for this device is under: www.technaxx.de/ (in bottom bar "Konformitätserklärung")



Decorative LED Aroma diffuser TG-27

Instruction Manual

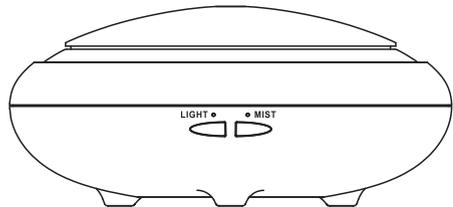


Read the instructions carefully before using the model. Keep the Instructions for future reference

- | | |
|---|---|
| <p>Highlights</p> <ul style="list-style-type: none"> - aromatisation with ultrasonic humidification technology - Suitable for essential oils - 7 color changing LED light - Nebulization possible with light and without light - Virtually silent: use also in the bedroom and children's rooms - Capacity tank: 150 ml - Automatic shutdown with empty tank - Easy operation and easiest cleaning - Energy-saving: Only 6 watts - High operating safety thanks to 24 volt low voltage | <p>Technical data</p> <ul style="list-style-type: none"> - Power input/output: AC100-240V 50/60Hz / DC 24V 500mA - Cable length: approx. 150 cm - Electric Consumption: 6 W - Ultrasonic Frequency: Ultrasonic vibration at approx. 2.4MHz - Material: PP / ABS - Water tank capacity: 150 ml - Mist Mode: Interval mist mode / continous mist mode - Working time Interval mist mode: 8 - 10 hours - Working time continous mist mode: 4-6 hours - 7 Color LED Mode: Automatic Color Change / Monochrome/Off - Size: 155mm (diameter) x 70mm (height) - Weight: approx. 257 g |
|---|---|


Technical data remote Control
 - Signal emission mode: RF - Battery: A23/1 x 12V 23A - Control distance: up to 8m. - Remote size: L120*W40*H16mm

- Contents**
- TG-27 LED Aroma Diffuser - Remote Control - Power Adapter - Measure Cup - Instruction Manual

This Aroma Diffuser uses Ultrasonic waves to instantly vaporize water and essential oil in the tank, to produce a cool, dry fragrant mist.

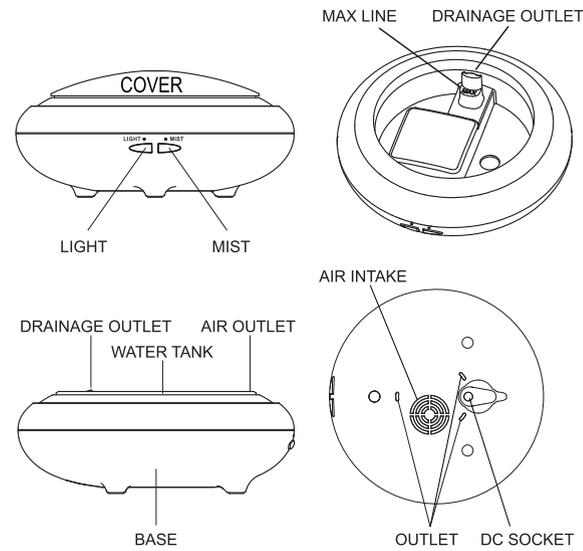


- OPERATION**
- Please place the model upright then take off the cover carefully. **Fig.1**
 - Please connect the DC port of the adaptor to the DC slot in the base. **Fig.2**
 - Please use measuring cup to add water into the tank. DO NOT exceed the max line 150ML; DO NOT add water when the model in work status; DO NOT use hot water.
 - Add essential oils into the tank after the tank filled with water(0.1ML-0.15ML essential oils per 100ml water).
 - Re-install the cover vertically. **Fig.4**
NOTE: The cover must be re-installed before using the diffuser.
 - Please connect the AC adaptor to the power socket. Then the light will be ON. (After you hear one short sound "D", the light will shut automatically)
 - MIST:** First press, it enters continuous mist mode. (one indicator will be on)
 Second press, it enters intermittent mist mode. (two indicators will be on). It will work 30 seconds, stop 30 seconds, recycle.
 Third press, the model will be off. (All functions will not be available). In any modes, long press **MIST** over 2 seconds, the unit will be off status. **Fig.5**
 - LIGHT:** First press, it enters 7 colors changing automatically mode.
 Second press, it enters to stop at the current color mode. Long press over 2 seconds, the **LIGHT** will be off alone. When **MIST** is off, **LIGHT** can work alone. **Fig.6**
 - If you don't use it for a long time, please drain out the water in the tank and keep it at the dry place.
 - The product is off status as default when power is on.
 - The product will shut-off automatically when water shortage, even though the

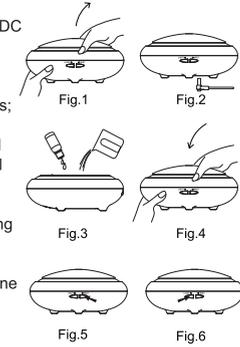

mist is "on".
 12. Light can be turned off automatically together with the mist when setting timer is up.


- WARM TIPS**
- Please use the measuring cup to add water, don't fill in the tank from water-tap directly.
 - Only 100% natural essential oil can be used in this product. Those containing chemical fragrance, spice or impurities will cause malfunction. Please clean the unit as per the maintenance instructions before changing new type of essential oil.
 - Factors that affect the mist density are including water type, humidity, temperature, air currents.
 - Do not let the mist spray to the furniture, clothes, wall directly.
 - The essential oils may cause dyed, please use clean cloth wipe up if splash out accidentally.
 - To ensure the sanitation, please pour out the water completely and wipe up the product after each being used.

- ACCIDENTAL LEAKAGE**
- In the event of the unit being knocked over or tipped during use, please follow the steps as below to avoid malfunction.
- Unplug the unit and remove cover.
 - Pour out any remaining water out of the water tank.
 - Shake the unit gently to drain any water inside the mechanism, and then allow it drying for at least 24 hours.

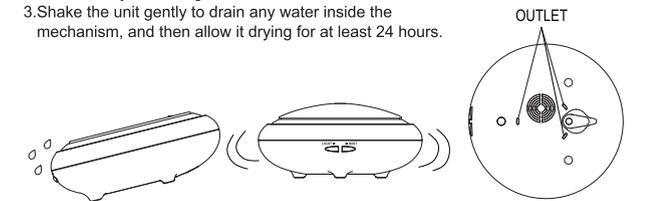

MAINTENANCE

- After using 5-6 times, or 2-3 days, please clean the product as follows:
- Unplug the unit from mains supply and remove cover.
 - Pour out any remaining water from the "Drain Side" of the tank.
 - Put a small amount of Kitchen detergent (neutral detergent recommended) diluted in the water, use a clean cloth dip in the water and then wipe up the unit gently.
 - If there are stains at the air outlet, please remove the inner cover to clean it.
 - Never use other acids, enzymes or detergents, as this may risk poisonous gas to be created or cause malfunction.

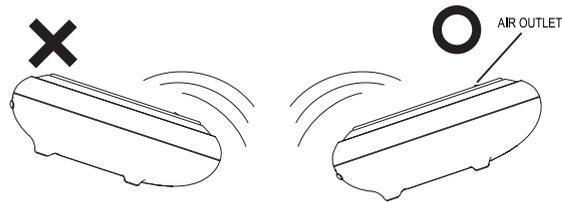

PRECAUTIONS

- Please read carefully the following safety precautions before using this product, and ensure that this product is always used correctly. These listed precautions are aim to protect you from being hurt, and protect the product from being damaged.
- Warning: May cause serious personal injury.**
- Please keep the product unreachable for children and babies, winding around the power cord to the children's neck mistakenly may lead to suffocation death.
 - Please use standard adaptor of this product.
 - Please don't dismantle, modify, heating the product.
 - Avoiding from falling down or heavily hitting.
 - If the product smoke, make a smell, or have any abnormal situation, please stop using it immediately.
 - Do not use alcohol, gasoline, thinner and other organic solvents to clean the product.
 - Do not touch any part of the product with wet hands.
 - Do not allow the metal objects (like pin, key) in contact with the terminals or plug.
 - Do not cut, damage, modify the power cord, or put the weight on the power cord. Otherwise it may cause an electric shock or fire.
- Attentions: May cause product damaged.**
- Do not allow liquids or foreign matter to enter the product, otherwise it may cause irreparable damage to the product.
 - Please unplug the product when not in use.
 - Do not cover anything on the product when it is working.
 - Please placed the product in a safe place where others will not be tripped by the power cord, or it may cause injury or damage to the product.
 - Avoid using the product at the following locations:
 - Direct sunlight, high temperature or wet, dusty place.
 - Keep away from electronic equipment, such as TV, and Audio equipment.
 - Strong vibrating place.

TROUBLESHOOTING

Please refer to the table below in the event of the product operating abnormally

Symptom	Possible Cause	Solution
Will not switch on-switch off early	<ul style="list-style-type: none"> Is there enough water in the tank? Is the power cord connected properly? 	<ul style="list-style-type: none"> Add water to the tank Disconnect, check cables and re-connect carefully.
No mist or abnormal mist	<ul style="list-style-type: none"> Not enough water? Too much water? Dirt on the Ultrasonic plate? Cover and inner cover are not installed properly? Dirt on the air suction port on the underside of the base? 	<ul style="list-style-type: none"> Add suitable amount of water in the tank. Water must never be filled over 150ML (MAX) line. Please refer to Maintenance instructions Remove and re-install correctly, so vapors can be released freely. Clean the air suction port of any dust. Restricted airflow will affect mist.
Water leakage from product	<ul style="list-style-type: none"> Cover and inner cover are not installed properly? Has the unit been tipped over? Low temperature or high humidity? 	<ul style="list-style-type: none"> Remove and reinstall correctly, so vapors can be released freely. Follow accidental leakage instructions. Under these conditions, the mist may condense quickly into water droplets.

Safety Notes: Keep packaging material away from children! Choking hazard!
 If you suffer from a severe respiratory or lung disease, consult your doctor before using the device. If you start to feel unwell while the device is in use, stop using it immediately, switch the device off and ventilate the room.

As with every electrical device, use this device carefully and cautiously, in order to avoid hazards due to electric shock.

- Only use this device with voltage specified on the device
- Never use the device if it shows visible signs of damage
- Do not use this device during a thunderstorm
- In the case of defects or operational faults, switch the device off immediately and disconnect the device from the mains socket. Do not pull on the mains cable or on the device to disconnect the the mains adapter from the socket. Never hold or carry the device by the mains cable.
- Only use the device in dry rooms (e.g. never in bath)
- Never reach for a device that has been submerged in water. Disconnect the mains adapter immediately.
- Do not drop the device or subject it to any impacts.
- Do not clamp or pinch the mains cable.
- Ensure that the mains cable and mains adapter do not come into contact with water, steam or other liquids.

Hints for Environment Protection: Packages materials are raw materials and can be recycled. Do not disposal old devices or batteries into the domestic waste. Cleaning: Protect the device from contamination and pollution. Only clean the device with soft cloth or drapery, avoid using rough or coarse-grained materials. Do not use solvents or other aggressive cleaner. Wipe the device after cleaning accurately.

Distributor: Technaxx Deutschland GmbH & Co.KG, Kruppstr. 105, 60388 Frankfurt a.M., Germany
 The Declaration of Conformity for this device is under: www.technaxx.de/ (in bottom bar "Konformitätserklärung")

