

Technaxx® User Manual

Electronic PV Parking Disc TX-337

Please read the instructions for use and the safety information carefully before using the device for the first time.

No liability is assumed for fines, tickets or other legal consequences resulting from improper use or non-compliance with local parking regulations.

Please keep this manual carefully for future reference or for sharing this product. Please do the same with the original accessories for this product. In the event of a warranty claim, please contact the retailer or store where you purchased this product.

Features

- Motion sensor
- Solar cell for charging the battery
- Automatically sets the parking time
- 2 displays
- 1 set of spare adhesive pads
- KBA-Licensed

Technical specification

KBA license no.	E1 10R-0610638
Parking detection response time	Approx. 60 seconds
Accuracy of the time	±2min. / year
Parking time interval	0 minutes / 15 minutes / 30 minutes (adjustable)
battery	3V button cell CR2450 (included in delivery)
Battery life	Approx. 1 year without sun
material	ABS + PC
Operating temperature	-20°C – 75°C
Weight of the device	79 g
Dimensions of the device	(L)10 x (W) 6 x (H) 2.3 cm
Packaging contents	Electronic PV Parking Disc TX-337, CR2450 battery, spare adhesive pads (1 set), user manual

IMPORTANT


The TX-337 electronic parking disc must not be placed loosely in the vehicle. To be legally recognized, it must be attached to the lower right side of the windshield.

After approximately 60 seconds of inactivity, the parking disc will show the parking time on the large front display (marked with "Ankunftszeit").

Product overview



Functions

	1	Time / date view / battery indicator
	2	Time - button
	3	Time + button
	4	On/Off button, time setting
	5	Change time interval / summer-winter time changeover
	6	Press to open the battery compartment
	7	Battery compartment

Assembly instructions

Make sure the parking disc is clearly visible and attached to the windshield. The temperature during installation should be at least +15°C; otherwise, a secure hold cannot be guaranteed.

- Make sure the area you want to use is clean and dry.
- Do not use cleaning products that contain alcohol.
- Peel off the red protective film from the pads.
- Press firmly for at least 20 seconds.

Setting the time

To activate the setting mode, press and hold button 4 until the "hour" digits flash on the rear display (1).

- Press button 2 or 3 to set the time until the hours match the current time.
- Press button 5 again to switch to the minutes.
- The "minute" digits flash. Set the minutes using button 2 or 3.
- Follow the same steps to set the current date.

Note: After 15 seconds without any input, the time setting will automatically exit. After that, you must press and hold button 4 again to activate it.

Turning the parking disc on and off

To save the parking disc's battery during long periods of inactivity, the parking disc can be switched off.

- To switch off, press button 4 twice in quick succession.
- To reactivate the parking disc, briefly press button 4.

Note: The parking disc does not show any parking time when switched off.

Battery replacement

Press the button (6) down to open the battery compartment and carefully pull out the battery compartment (7).

Replace the CR2450 battery with a new, unused battery. Insert the battery into the compartment with the positive pole facing up. Carefully slide the battery compartment back into the device.

Note: The time and date may need to be reset.

Set summer and winter time

By default, the parking disc is set to automatically switch between daylight saving time and winter time. For countries without daylight saving time, this function can be deactivated as follows:

- Press buttons 5 for 3 seconds.
- Display 1 shows "ON:SU." Automatic daylight-saving time is activated.
- To deactivate the automatic time change, press button 5.
- Display 1 shows "OF:SU".

Changing the time interval

Different countries may have different requirements for setting parking time. Change the interval to 0, 15, or 30 minutes depending on the parking regulations in that country.

- Press button 5 to switch between 00, 15 or 30 minutes.

Note: 30 minutes is set as the default.

Set manual parking time

To manually set the parking disc, hold down button 3 and advance the clock in 15-minute increments. Release the button once you reach the desired time on the small display (1).

Note: This function can only be accessed when the parking disc is in parking mode. This is indicated by the Ⓟ symbol in the bottom right corner of display 1.

Cleaning and maintenance

- Clean the device regularly with a damp cloth. Do not use cleaning agents or solvents.
- Ensure that no water can penetrate the device.
- Protect the device from shocks, dust, moisture, or extreme temperatures.

Safety instructions



Caution! Device contains a battery.

- Keep the device out of reach of children.
- Follow the safety instructions during use.

•Never attempt to open the device, as doing so will void any warranty or guarantee for the product. •Do not use the device if the battery compartment does not close securely.

Support

Technical support telephone number: **01805 012643**

(14 cents/minute from German landlines and 42 cents/minute from mobile networks).

Toll-free email: **support@technaxx.de**

The support hotline is available Monday to Friday from 9 a.m. to 1 p.m. and 2 p.m. to 5 p.m.

Declaration of conformity



This product is approved by the German Federal Motor Transport Authority under license number E1 10R-0610638. The approval can be requested at the following address: www.technaxx.de/ (search for "Declaration of Conformity"

in the lower bar) and article number 5319.

Disposal



Disposal of packaging. Sort packaging materials according to their intended disposal method. Dispose of cardboard and paper with the waste paper. Films should be disposed of at the recycling center.



Disposal of old devices (Applies in the European Union and other European countries with separate collection (collection of recyclable materials) Old devices must not be disposed of with household waste! Every consumer is legally obliged to dispose of old devices that can no longer be separated from household waste, e.g. at a collection point in their municipality or district. This ensures that the old devices are recycled properly and negative impacts on the environment are avoided. For this reason, electrical devices are marked with the symbol shown.



Batteries and rechargeable batteries must not be disposed of with household waste! As a consumer, you are legally obliged to dispose of all batteries and rechargeable batteries, regardless of whether they contain harmful substances* or not, at a collection point in your community/city or at a retailer to ensure that the batteries can be disposed of in an environmentally friendly manner. * Marked with: Cd = Cadmium, Hg = Mercury, Pb = Lead. Return your product with the fully discharged battery to your collection point!

Made in China

Distributed by:

Technaxx Deutschland GmbH & Co. KG
Konrad-Zuse-Ring 16-18,
61137 Schöneck, Germany