 


Lifenaxx® * User Manual

Fabric Steam Cleaner 1800W Pro LX-069

Before using the appliance for the first time, please read the instructions for use and safety information carefully.

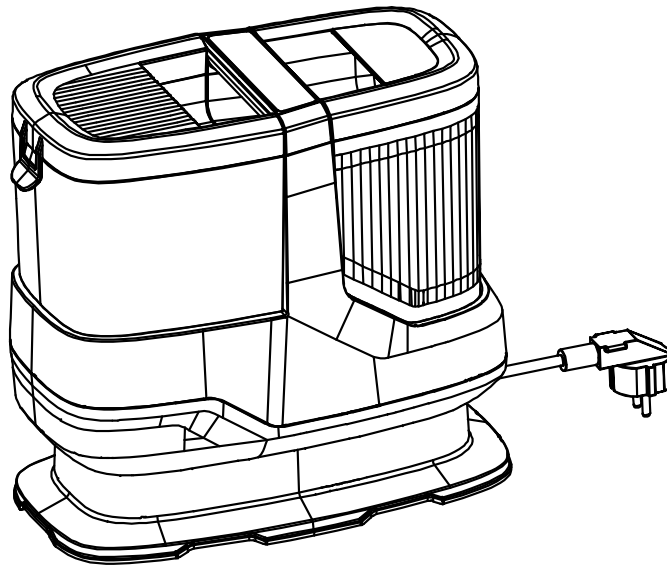

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or by persons lacking in experience or knowledge, unless they are supervised or instructed on the use of this device by a person responsible for their safety. Children should be supervised to ensure they do not play with this device.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

Enjoy your product * Share your experience and opinion on one of the well-known internet portals.

Specifications are subject to change without notice - please be sure to use the latest manual available on the manufacturer's website.



Features

- Steam and water function
- Powerful suction
- Light weight
- Fast heating
- 2-in-1 cleaning brush
- Shoe cleaning brush
- Dual tank system
- Self-cleaning function


Product Overview

	1	Clean water tank
	2	Cleaning brush
	3	Power cord
	4	Dirt water tank
	5	Main unit
	6	Hose
	7	Handle support
	8	Brush removal button
	9	Spray button
	10	Detachable brush holder
	11	Silicone plug for clean water tank
	12	Control panel
	13	Clip for dirt water tank opening
	14	Swivel connector for hose
	15	Hose removal button
	16	Transparent viewing window

Attachments

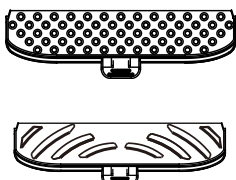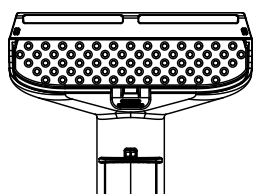

2-in-1 cleaning brush with:
Straight brush head
Silicone brush head (reverse side)

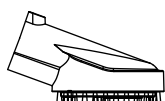

Shoe brush




Self-cleaning tool

Technical Specifications


Power	1800 W
Input	220-240 V / 50~60 Hz
Suction power	≥ 17000 Pa
Clean water tank capacity	1.1 L
Dirt water tank capacity	1.2 L
Heating time	≥ 30 s
Hose length	1.55 m
Wire length	4 m
Decibel	82 dB
Material	ABS, PC
Product size	30.7 x 17 x 28 cm
Product weight	3.6 kg
Package contents	Fabric Steam Cleaner 1800W Pro LX-069, Hose (1.5 m), shoe brush, 2-in-1 fabric brush, self-cleaning tool, user manual

Installation


1. Install the brush to the hose.

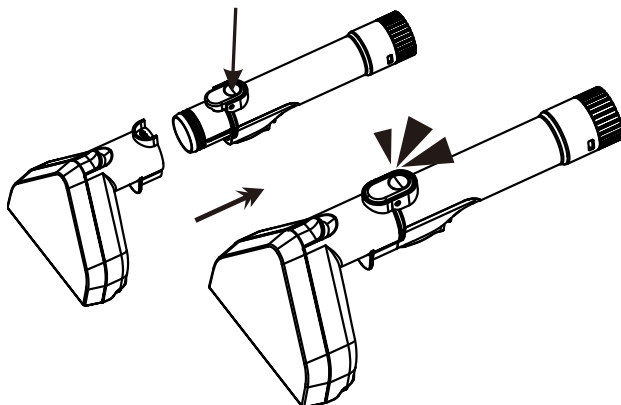


2. Install the handle support.

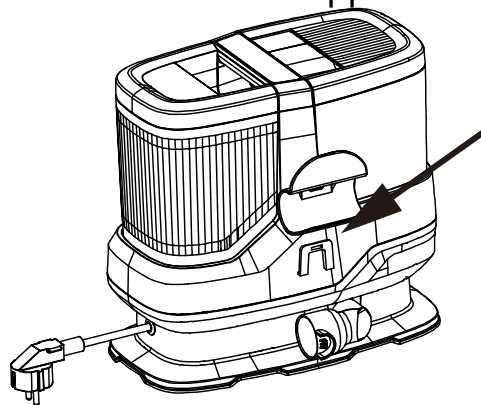

3. Detach the water tank by lift it upwards.

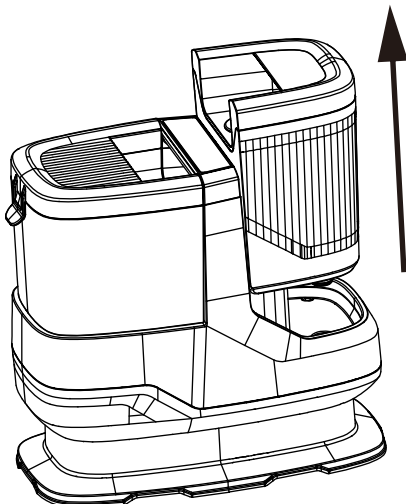

4. Open the silicone plug and fill in water till its full.

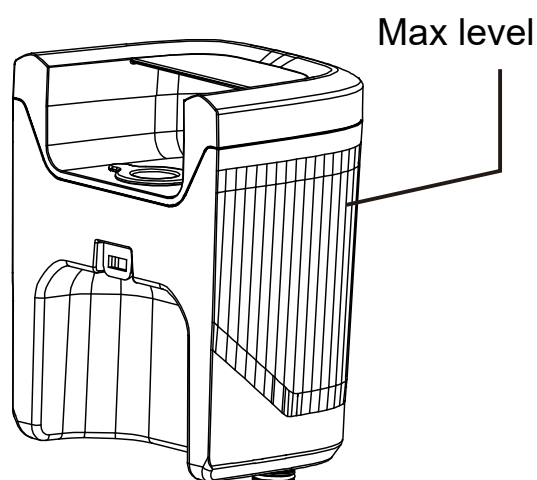

5. Plug the power cord into a household electrical outlet.

Control panel settings

ON / OFF: Powers on the machine, ready to choose a mode.

Mode: Press to choose between,
“**Cold**” - Cold water cleaning
“**Hot**” - Hot water cleaning
“**Steam**” - Steam cleaning
“**Sterilization**” - Steam only, no vacuum

Shortage: The fresh water tank is nearly empty

Full: The dirt water tank is nearly full


Note: Cold, hot and steam mode will start the vacuum automatically. Pressing the on/off button puts the machine into standby mode. To fully turn off the machine, press and hold the power button for 3 seconds.



Usage


To use the water / steam function, press the water release button on the brush head like shown beside.

Move the head slowly and evenly towards you during usage. Make sure the water spray will be sucked into the head for best cleaning results.

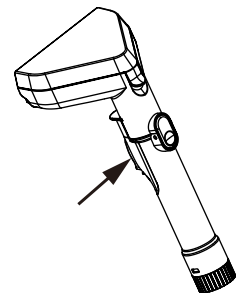



After use, wrap the hose around the base of the machine. Place the brush head on the handle support for storage, as shown in the picture.

Note: The machine will enter standby mode after 5 minutes of no action.

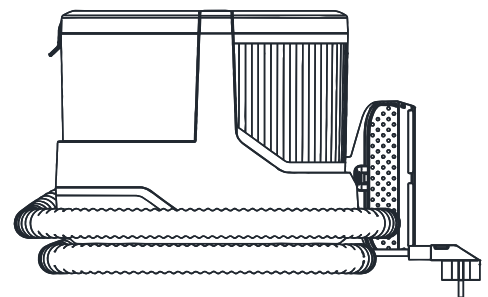

Care and maintenance

- Clean the device only with a dry or slightly damp, lint-free cloth.
- Do not use abrasive cleaners to clean the device.
- If the cleaning brush gets clogged, please remove the transparent cover and clean it inside.
- Clean the sewage tank after each use of the machine to avoid improper performance:
- Detach the sewage tank by lift it upwards.
- Lift up the cover by gentle open the lock clip.

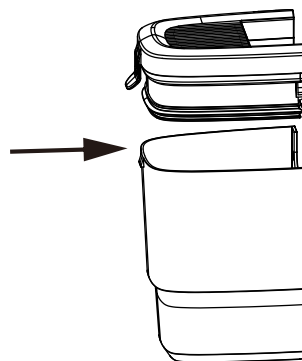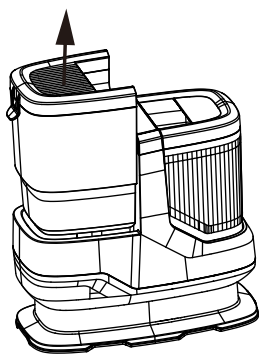

Note: Check all seals regularly and ensure they are tight.

Self-cleaning tool

Press the brush head release button to remove the brush head. Attach the self-cleaning tool to the handle, then turn on the machine and select either the low-temperature or high-temperature cleaning mode to effectively clean the water suction pipe. Press the water release button at the handle to clean the hose.

Hints

- Avoid using steam on fabrics like silk, velvet, suede, or unsealed leather. Always consult the textile manufacturer to confirm whether steam use is safe.
- Always test on an inconspicuous area first to check for discoloration or damage. On some fabrics, especially natural fibers, steam may leave water spots or rings.
- Only use the product for purposes due to its intended function and only for private household use.
- Do not damage the product. Following cases may damage the product: Incorrect voltage, accidents (including liquid or moisture), misuse or abuse of the product, faulty or improper installation, mains supply problems including power spikes or lightning damage, infestation by insects, tampering or modification of the product by persons other than authorized service personnel, exposure to abnormally corrosive materials, insertion of foreign objects into the unit, used with accessories not preapproved.
- Refer to and heed all warnings and precautions in the user manual.

Troubleshooting

Problem	Possible Cause	Solution
Machine won't turn on	Power cord unplugged or outlet faulty	Plug in properly, test outlet with another device
Heating function not working	Heating mode not selected or overheating	Select heating mode, let cool if overheated
Machine loses suction or cleans poorly	Dirty brush, clogged suction pipe, full water tank, improper seal fit	Clean brush and suction pipe, empty water tank, check the seal
No water comes out	Water tank empty or not properly installed, blocked nozzle	Refill water tank, check and clear nozzle if blocked
Abnormal noise	Loose brush head or tangled dirt	Secure brush head, remove tangled dirt
Water leaking from machine	Water tank not sealed properly or cracked	Reseat tank securely, inspect for damage
No dirty water collecting	Dirty water tank not sealed or properly installed	Remove and reinstall tank, check for tight fit and seal
Low water temperature	Heating element may be failing	Check the correct mode. Contact customer support for service
Buttons not responding	Control panel issue or internal fault	Unplug and restart; contact support if persists



Warnings

- **Burn Hazard:** Steam is extremely hot (typically 200°F / 93°C or more). Keep hands, pets, and children away from the steam nozzle.
- **Electrical Shock Risk:** Never immerse the unit in water or any other liquid. Keep electrical parts dry.
- **Unplug When Not in Use:** Always unplug the cleaner when filling the tank, cleaning, or storing.
- **Allow Cooling Before Maintenance:** Let the unit cool before clean, refill or empty the water tank.
- Do not use the fabric cleaning machine to clean substances such as lime, cement, plaster dust, fireplace ash or embers, large quantities of powder, or carbon dust.
- Never use the machine to vacuum or inhale burning or smoldering materials, including charcoal, cigarette butts, or matches.
- Do not use the product to vacuum flammable or explosive liquids, such as gasoline.
- Avoid inhaling or using it to absorb toxic substances, including chlorine bleach, ammonia, drain cleaners, or similar

hazardous liquids. ● Do not use with any cleaning agents or bleaching inside the water tank. ● Do not vacuum up foam or other foaming agents, as this may cause total damage to the unit.

Safety instructions

● Make sure you lay the cable in a way that the danger of stumbling is avoided. ● Never hold or carry the device by the power cable. ● Do not clamp or damage the power cable. ● Ensure that the power adapter does not come into contact with water, steam or other liquids. ● You have to check the complete construction at regular intervals for functionality, tightness and damage to prevent the defect of the device. ● Install the product due to this user manual and operate or maintain it in accordance with the manufacturers operating instructions. ● Use standard power cord with ground wire, to ensure stable power supply and the same power voltage with the product marked. ● Do not disassemble the product by yourself. ● Do not cover the product's ventilation hole. ● Keep the product away from rain, moisture, water or any other liquid as it is not waterproof. It may cause an electric shock. ● Turn off and cut off the power supply if not use the product for a long time. ● Use the original packing when moving the product.

Support

Service phone No. for technical support: **01805 012643*** (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free Email: **support@technaxx.de**

The support hotline is available Mon-Fri from 9am to 1pm & 2pm to 5pm. In the event of anomalies and accidents, please contact: **gpsr@technaxx.de**

Declaration of Conformity



Technaxx Deutschland GmbH & Co. KG hereby declares that the is in compliance with Directive 2014/30/EU. The full text of the EU Declaration of Conformity is available at the following internet address: www.technaxx.de/reseller

Disposal



Disposal of the packaging. Sort packaging materials by type upon disposal.

Dispose of cardboard and paperboard in the waste paper. Foils should be submitted for recyclables collection.



Disposing of old equipment (Applies in the European Union and other European countries with separate collection (collection of recyclable materials) Old equipment must not be disposed of with household waste! Every consumer is required by law to dispose of old devices that can no longer be used separately from household waste, e.g. at a collection point in

his or her municipality or district. This ensures that the old devices are properly recycled and that negative effects on the environment are avoided. For this reason, electrical devices are marked with the symbol shown here.

Made in China

Distributed by:

Technaxx Deutschland GmbH & Co. KG
Konrad-Zuse-Ring 16-18,
61137 Schöneck, Germany