

Technaxx® user manual

Kids Walkie Talkie Set TX-347

Before using the appliance for the first time, please read the instructions for use and safety information carefully.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

Features

- Set of two devices for instant use
- Up to 3 km range
- 8 channels
- LCD display with backlight
- Built-in flashlight
- Channel scan function

Declaration of Conformity

 Technaxx Deutschland GmbH & Co. KG hereby declares that the radio equipment type TX-347 Prod. ID.:5332 is in compliance with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following internet address: www.technaxx.de/reseller

Disposal


 Disposal of the packaging. Sort packaging materials by type upon disposal. Dispose of cardboard and paperboard in the waste paper. Foils should be submitted for recyclables collection.

 Disposing of old equipment (Applies in the European Union and other European countries with separate collection (collection of recyclable materials) Old equipment must not be disposed of with household waste! Every consumer is required by law to dispose of old devices that can no longer be used separately from household waste, e.g. at a collection point in his or her municipality or district. This ensures that the old devices are properly recycled and that negative effects on the environment are avoided. For this reason, electrical devices are marked with the symbol shown here.

Technical specification

Channels	8
Operating Frequency	446.00625 MHz – 446.09375 MHz (PRM446)
Transmission Power	≤ 500 mW ERP
Range	Up to 3 km (line of sight)
Modulation:	FM-F3E
Channel Spacing	12.5 kHz
Sub code	CTCSS99
Battery	each 4 x AAA (LR03 / not included)
Material	ABS + electronic components
Working temperature	-20°C to 40°C
Weight / Dimension	98 g / 14 x 5 x 2 cm
Package content	2x Kids Walkie Talkie TX-347, user manual

Product Overview

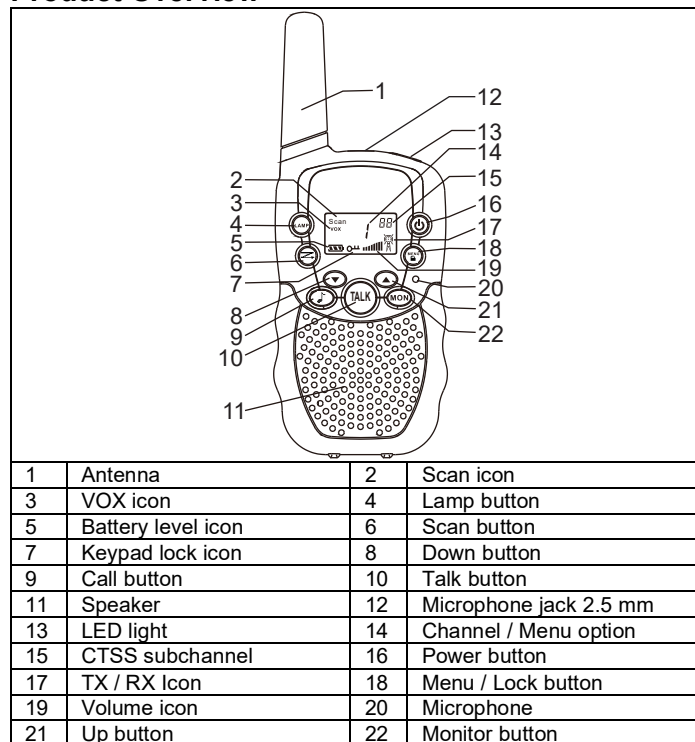

Battery Installation (not included)

Open the battery compartment.
Insert 4 AAA batteries, observing the correct polarity (+/-).
Close the compartment securely.

Power On/Off

- To power the device ON or OFF, press and hold the Power button (16) until a tone sounds.

Channel Selection

1. Press **Menu** once.
2. Use **▲/▼** to select channel 1–8 shown in the display.
3. Press **TALK** or wait to confirm.

Note: All devices must be set to the same channel to communicate. For automatic channel matching, see the Scan section.

Volume Control

- Press **▲** or **▼** to adjust volume.

Keypad Lock

- Press and hold the Lock button (18) for 3 seconds. To disable Lock press and hold again.

Note: Buttons 9, 10, 16, and 22 remain functional when the keypad is locked.

Flashlight

- Press the lamp button (4) to turn the flashlight ON or OFF.

Talk / Listen

- To talk, press and hold the TALK button (10).
- To listen, release the TALK button.

VOX Mode (Hands-Free)

- Press the Menu button repeatedly until “VOX” appears on the display.
- Use the **▲ / ▼** buttons to toggle VOX ON or OFF.

Note: VOX Mode allows hands-free communication by transmitting automatically when you speak.

Scan

- Press the Scan button (6) to begin scanning all 8 channels. The scan icon (2) will appear during this process.
- To stop scanning, press the Scan button again.
- When a channel is found, press the TALK button to lock it in.

Note: All devices must be powered ON during scanning.

CTCSS (Continuous Tone Coded Squelch System)

CTCSS allows communication only between devices set to the same channel and subchannel, reducing interference from other users.

1. Press the Menu button (18) twice.
2. Use the **▲ / ▼** buttons to select a subchannel (OFF or 1–99).

CAUTION

- Do not invade water or other liquids.
- Keep away from flammable and explosive materials.
- This device contains small parts. Keep away from children under 3 years to avoid choking hazard.

Safety instructions

●Observe the safety instructions during use. ●Any modification or alteration of the product will affect the safety of the product. Caution risk of injury! ●All changes and repairs to the product or its accessories may only be carried out by the manufacturer or by persons expressly authorized by the manufacturer. ●Never open the product without authorization. ●Never carry out repairs yourself! ●Handle the product with care. It can be damaged by shaking or falling from a small height. ●Never immerse the product in water or other liquids. ●Technical changes and errors reserved.

Battery Warnings

Use only alkaline AAA batteries. Do not mix old and new batteries or different types.

Do not recharge non-rechargeable batteries.

Do not dispose of batteries in fire.

Remove batteries when not in use for long periods.

Support

Service phone No. for technical support: **01805 012643**

(14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free Email: **support@technaxx.de**

The support hotline is available Mon-Fri from 9 am to 1 pm & 2 pm to 5 pm.

Cleaning and maintenance

●Clean the equipment regularly with a moist cloth. Do not use cleaning agents or solvents. ●Ensure that no water can seep into the plugs. The ingress of water into an electric device increases the risk of an electric shock or damage of the device.

Made in China

Distributed by: Technaxx Deutschland GmbH & Co. KG
Konrad-Zuse-Ring 16-18, 61137 Schöneck, Germany