

Technaxx® * user manual

SUP Battery Air Pump with power bank functionTX-266

Before using the appliance for the first time, please read the instructions for use and safety information carefully.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or by persons lacking in experience or knowledge, unless they are supervised or instructed on the use of this device by a person responsible for their safety. Children should be supervised to ensure they do not play with this device.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

Enjoy your product * Share your experience and opinion on one of the well-known internet portals.

Specifications are subject to change without notice - please be sure to use the latest manual available on the manufacturer's website.

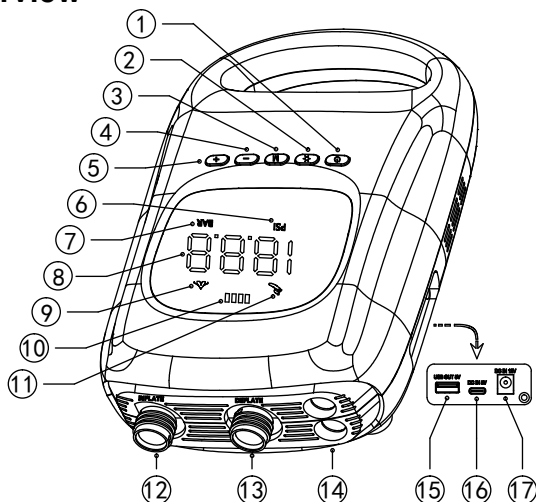
Features

- Powerful air pump with 2 stages up to 20 PSI
- Up to 3 Stand-Up paddle boards with one charge
- Active cooling of the pump elements
- Digital display for live pressure and pressure adjustment
- Built-in 7500 mAh lithium battery with power bank function
- Automatic pump stops when set pressure is reached
- 3 Modes preset (SUP / TENT / custom)
- 12 V car adapter
- Two LED lights
- With 6 nozzles, suitable for most small and large inflatable products, such as stand-up paddle boards, kites, air tents, air mattresses, inflatable beds, sleeping pillows, swimming rings, inflatable furniture and other inflatable toys

Technical specification

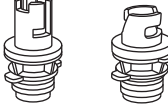
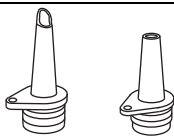

Inflation speed	First stage blower: 350 l/min to 0.7 PSI Second stage compressor: 0.7 to 20 PSI 70 l/min
Inflation pressure	Max. 20 PSI (138 kPa)
Pressure accuracy	± 1 PSI
Deflation speed	350 l/min
Deflation pressure	0.7 PSI (4.8 kPa)
Power	120 W
Battery capacity	7500 mAh / 3.7 V
Charging input	DC 5 V / 2 A (USB Type C port) DC 12 V / 10A (12 V charging port)
Charging time	Approx. 5 h
Running time	Up to 30 min inflation (3 full SUP inflation)
Power bank output	DC 5 V / 1 A (USB-A port) for up to 3 smartphone charges
Material	ABS housing / metal pump parts
Working temperature	0 – 45°C
Weight / Dimension	1.5 kg / 28.8 x 18.8 x 9.4 cm
Package content	SUP Battery Air Pump TX-266, 6 nozzles, pump hose 1m, 12 V car charging cable, USB-C charging cable, user manual

Product Overview



1	Power button	2	LED light switch
3	Mode button	4	Air pressure adjustment -
5	Air pressure adjustment +	6	PSI unit LED
7	BAR unit LED	8	Display current pressure
9	Tent preset pressure	10	Battery status indicator
11	SUP preset pressure	12	Inflation port
13	Deflation port	14	LED
15	USB output port	16	USB-C charging port
17	12 V car adapter port		

Nozzles

		
Stand-up paddle board / air kite / air tent	Air mattress / toy	Inflatable bed / boat (31mm / 16mm)

Button explanation

- 1. Power button:** Long press this key to turn on/off the machine, and short press to start inflation.
- 2. LED light switch:** Long press this key to turn on and off the LED light, short press to switch between the modes.
- 3. Mode button "M":** After turning on the device, short press the Mode button to switch between different preset modes, such as SUP, inflatable tent, and custom mode; Long press and hold the Mode button to switch between different air pressure units, such as PSI and BAR.
- 4. "-" button:** After turning on the device, short press this key to reduce the air pressure value that needs to be set.
- 5. "+" button:** After turning on the device, short press this key to increase the air pressure value that needs to be set.

Inflate

- Attache the air hose to the inflate port (12) at the device.
- Attache the best fitting nozzle to the pump hose.
- Power on the device.
- Set the mode or custom pressure with the mode button and the + and -.
- Short press the power button to start inflation.

NOTE: The device will stop automatically at the set pressure! Please do not leave it unattended anyway.

Deflate

- Attache the air hose to the deflate port (13) at the device.
- Attache the best fitting nozzle to the pump hose.
- Power on the device and press short the power button to start vacuum.
- Press power again to stop deflation.

NOTE: The device will **not** stop automatically! Please do not leave it unattended.

LED

- Press and hold the LED switch button (2) at least 3 seconds to turn on the LED light
- Press again to change between steady light and SOS light.

Charging

- Insert one end of the randomly delivered USB cable into a power adapter (DC 5V/2A or higher current adapter, not attached), and the other end into the TYPE-C charging interface (16) of the device to start charging.
- The battery status indicator will light up during charging. The indicator shows 4 bars after fully charged. Please disconnect the cables after complete charging.
- The 12V adapter is for vehicle cigarette lighter sockets. Plug it into the 12V charging port (17) and into your vehicle.

Note: It is recommended to charge the unit in a vehicle with the engine running to avoid discharging the vehicle battery.

Safety instructions

- Observe the safety instructions during use.
- Any modification or alteration of the product will affect the safety of the product. Caution risk of injury!
- All changes and repairs to the product or its accessories may only be carried out by the manufacturer or by persons expressly authorized by the manufacturer.
- Never open the product without authorization.
- Never carry out repairs yourself!
- Handle the product with care. It can be damaged by shaking or falling from a small height.
- Never immerse the product in water or other liquids.
- Technical changes and errors reserved.

Troubleshooting

- The pump does not want to pump:
 - Check the inlets and outlets for blocking objects.
- Pump will not charge:
 - Check that the charging cable is connected correctly.
 - Check the supported power.
- The pump has become wet:

- Please wipe off the liquid. If there is liquid inside the pump, please do not operate it. Put it in a dry place and wait a few days until everything is dry again. Salt water should always be rinsed out.

CAUTION

- Please wait at least 10 minutes for next usage after use the pump.
- Do not invade water or other liquids.
- Keep the air outlet and inlet clean.
- Do not reach into the air outlet or air inlet.
- Do not leave unattended when in use.
- Keep children away from the device.
- Keep away from flammable and explosive materials.
- Do not throw in fire – it will explode due to built-in battery.

Support

Service phone No. for technical support: **01805 012643**

(14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free Email: **support@technaxx.de**

The support hotline is available Mon-Fri from 9 am to 1 pm & 2 pm to 5 pm.

Cleaning and maintenance

●Clean the equipment regularly with a moist cloth. Do not use cleaning agents or solvents. ●Ensure that no water can seep into the plugs. The ingress of water into an electric device increases the risk of an electric shock or damage of the device.

Declaration of Conformity



The EU Declaration of Conformity can be requested at the following address: www.technaxx.de/ (in the lower bar "Declaration of Conformity").

Disposal



Disposal of the packaging. Sort packaging materials by type upon disposal. Dispose of cardboard and paperboard in the waste paper. Foils should be submitted for recyclables collection.



Disposing of old equipment (Applies in the European Union and other European countries with separate collection (collection of recyclable materials) Old equipment must not be disposed of with household waste! Every consumer is required by law to dispose of old devices that can no longer be used separately from household waste, e.g. at a collection point in his or her municipality or district. This ensures that the old devices are

properly recycled and that negative effects on the environment are avoided. For this reason, electrical devices are marked with the shown symbol.



Batteries and rechargeable batteries must not be disposed of in household waste! As a consumer, you are required by law to dispose of all batteries and rechargeable batteries, whether they contain harmful substances* or not, at a collection point in your community/city or with a retailer, to ensure that the batteries can be disposed of in an environmentally friendly manner. * marked with: Cd = cadmium, Hg = mercury, Pb = lead. Return your product to your collection point with the fully discharged battery installed inside!

Made in China

Distributed by:
Technaxx Deutschland GmbH & Co. KG
Konrad-Zuse-Ring 16-18,
61137 Schöneck, Germany