

Nature Wild Cam TX-69 firmware update

Bug Fix:

- Reset locked devices

Attention the settings already made will be lost and must be set again.

The battery level should be at least two bars during the upgrade.

Perform update:

Step 1: Format the MicroSD card with the PC.

Step 2: Download the firmware here:

https://technaxx-europe.de/shop/enduser/4719_TX-69_Firmware-2.4inch%20display

Step 3: Unzip the Firmware.rar file (with Winrar or Zip).

Step 4: Copy the **two firmware files** onto the empty MicroSD card.

Step 5: Now properly eject the MicroSD card from the PC.

Step 6: Insert the MicroSD card into the TX-69.

Step 7: **Press and hold** the up button (Button in the top center) while pushing the mode switch to test

Step 8: After the "Firmware Upgrade" is visible on the device, you can release the up button. Wait about 1 minute.

Step 9: Set the mode switch to Off and remove the batteries.

Step 10: Now insert the batteries again.

Step 11: Reset the camera to factory settings.