

TX-167 Firmware Update Instructions

What's new in version TX-167.20210811.013:

- Error correction: Saving the functions LDW, FCW and TSR after switching off and on again
- Update night vision. This is now brighter than before.
- Update of the screen saver. After 1 minute, the screen is switched off, only the instructions can be listened to

How do I install the new firmware:

1. Unzip the firmware e.g. with Winrar
2. Copy the .bin file (firmware file FW96675A.bin) onto an empty MicroSD card
3. Insert the MicroSD card with the .bin file into the switched off dashcam.
4. Then connect the dashcam to the power.
5. The update will be installed automatically. Do not unplug the dashcam while doing this. The blue LED flashes
6. The update is complete as soon as the camera starts by itself.
7. After the update is complete. You need to delete the .bin file from the memory card. To do this, you can format the memory card directly in the dashcam via the menu or format or delete the .bin file on the PC.
8. Insert the microSD card back into the dashcam if it was formatted on the PC.
9. The dashcam should now display the version: TX-167.20210811.013 under menu → Version.

You can now set up and use the dashcam to suit your needs.