# Luminaxx® user manual
# 360° Party Light Set LU-016

Before using the appliance for the first time, please read the instructions for use and safety information carefully.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

## Features

- Set of two Party Lights
- 360° Rotating Light Effects
- Sound-Reactive Lighting
- IR Remote Control
- Mains powered

## Declaration of Conformity

The EU Declaration of Conformity is available at the following address: www.technaxx.de/ (in the lower bar "Declaration of Conformity").

## Disposal


Disposal of the packaging. Sort packaging materials by type upon disposal. Dispose of cardboard and paperboard in the waste paper. Foils should be submitted for recyclables collection.

Disposal of old equipment (Applies in the European Union and other European countries with separate collections (collection of recyclable materials). Old equipment must not be disposed of with household waste! Every consumer is required by law to dispose of old devices that can no longer be used separately from household waste, e.g. at a collection point in his or her municipality or district. This ensures that the old devices are properly recycled and that negative effects on the environment are avoided. For this reason, electrical devices are marked with the symbol shown here.

## Technical specifications

| | |
|---|---|
| Power | 3 W |
| LED lifetime | 20 000 h |
| Mode | Music, Remote, Automatic |
| Coverage | 15 m² |
| Power input | 220–240 V AC, 50/60 Hz |
| Cable length | 1 m |
| Operating temperature | 0°C – 40°C |
| Weight / Dimensions | 450 g / 22.5 x 10.2 x 11.8 cm |
| Package content | 2x LU-016, 2x remote, user manual |

## Remote Overview

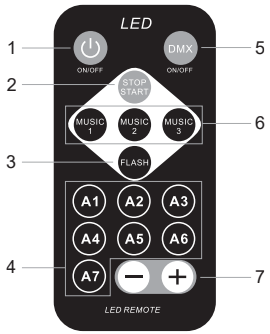


| | | | |
|---|---|---|---|
| 1 | Power On/Off | 2 | Start / Stop |
| 3 | Flash | 4 | A1 – A7 Color Modes |
| 5 | No function for this model | 6 | Music Control Modes |
| 7 | Rotation Speed | | |

**Set up**

Position the party light in an elevated location to project the lighting effects onto the ceiling. Secure the unit using the supplied mounting bracket, or place it on a flat, stable surface without the bracket. **Note:** Route the power cable to prevent it from becoming a trip hazard.

Plug the power cable into a mains socket. Control the party light using the supplied remote control. Each remote control can operate both lights, provided they are within range of the IR signal.

**Button Settings**

| Mode | Description |
|---|---|
| **A1** | Blue and Orange LEDs on |
| **A2** | Red and Yellow LEDs on |
| **A3** | Purple and Green LEDs on |
| **A4** | Yellow, Orange, Red, and Purple LEDs on |
| **A5** | Red, Orange, Green, and Purple LEDs on |
| **A6** | Blue, Orange, Green, and Purple LEDs on |
| **A7** | Automatically cycles through colors with a slow transition and strobe effect |
| **MUSIC 1** | Lights turn on and off in response to sound |
| **MUSIC 2** | Colors change in response to sound |
| **MUSIC 3** | Strobe effect is activated by sound |
| **FLASH** | Continuous strobe lighting effect |

**Note:** In MUSIC modes, the built-in microphone detects ambient sound or music to trigger the lighting effects. For the best performance, place the unit close to the sound source.
The remote must be pointed towards the unit's IR receiver at less than 5 m. Allow a delay of up to 1 second when switching between lighting modes.

**Installation**

- Install only on a stable wall or ceiling capable of supporting the weight of the product.
- Use suitable screws and wall plugs appropriate for the mounting surface.
- Ensure all mounting screws are securely tightened before operation.
- For overhead installation, always attach an independent safety cable between the fixture and the mounting structure.
- Do not install the product where it may fall onto people.
- Ensure the fixture has sufficient free space for ventilation and rotation.

## CAUTION

- Do not immerse the product in water or other liquids.
- Keep out of reach of children.
- Keep the product away from heat sources and flammable materials.
- This product is intended for decorative and entertainment lighting only.
- Do not touch the unit with wet hands.
- Never obstruct moving parts.
- Connect only to a properly grounded mains outlet.
- Disconnect the mains plug before cleaning or when not in use.
- Do not cover the ventilation openings during operation.

## Safety instructions

●Observe the safety instructions during use. ●Any modification of the product will affect the safety of the product. Caution, risk of injury! ●All changes and repairs to the product or its accessories may only be carried out by the manufacturer or by people expressly authorized by the manufacturer. ●Do not open the housing. Do not disassemble the product. ●Never carry out repairs yourself! ●Handle the product with care. It can be damaged by shaking or falling from a small height. ●If the product malfunctions, disconnect it from the mains and stop using it ●Subject to technical changes and errors.

## Support

Service phone No. for technical support: **01805 012643**
(14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free Email: **support@technaxx.de**
The support hotline is available Mon-Fri from 9 am to 1 pm & 2 pm to 5 pm.

## Cleaning and maintenance

●Clean the equipment regularly with a damp cloth. Do not use cleaning agents or solvents. ●Ensure that no water can seep into the housing openings. The ingress of water in an electric device increases the risk of an electric shock or damage to the device.

Made in China

Distributed by:
Technaxx Deutschland GmbH & Co. KG
Konrad-Zuse-Ring 16-18,
61137 Schöneck, Germany