Lifenaxx® user manual
Portable Fan with smartphone stand LX-072

Before using the appliance for the first time, please read the instructions for use and safety information carefully.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

Features

- Detachable stand for smartphone
- 3 speeds
- 1800 mAh battery
- 2-8 hours runtime
- USB-C charging interface

Declaration of Conformity

The EU Declaration of Conformity according to 2014/35/EU for item no.: 5385 can be requested at the following address: www.technaxx.de/ (in the bottom bar, “Declaration of Conformity”).

Disposal


Disposal of the packaging. Sort packaging materials by type upon disposal. Dispose of cardboard and paperboard in the waste paper. Foils should be submitted for recyclables collection.

Disposing of old equipment (Applies in the European Union and other European countries with separate collections (collection of recyclable materials) Old equipment must not be disposed of with household waste! Every consumer is required by law to dispose of old devices that can no longer be used separately from household waste, e.g. at a collection point in his or her municipality or district. This ensures that the old devices are properly recycled and that negative effects on the environment are avoided. For this reason, electrical devices are marked with the symbol shown here.

Technical specifications

Output power	3W
Charging interface	USB-C
Battery	1800mAh / 3.7V
Working time	2-8 hours
Input power	5V / 1A
Material	ABS + electronic components
Working temperature	5-45°C
Weight / Dimension	148g / 20.5 x 10 x 4 cm
Package content	LX-072, charging cable, user manual

Product Overview

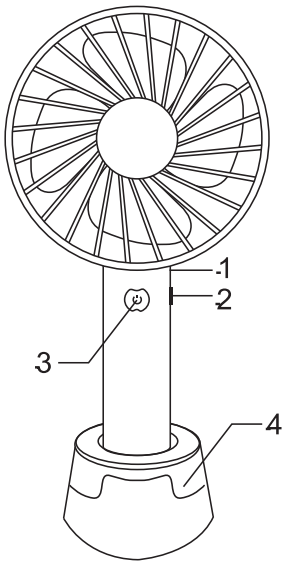

1	Battery indicator	2	Charging interface
3	Power switch	4	Smartphone stand

Charging

●Insert one end of the delivered USB cable into a power adapter (DC5V/1A; not higher current adapter, not attached), and the other end into the USB-C charging interface of the machine to start charging.
●The indicator light will blink up red during charging; the indicator light will light steady after fully charged.

Usage

Press the power switch to activate the fan function, press again to switch the fan power. Fan power: low - mid - high - off.

CAUTION

- Do not invade water or other liquids.
- Keep the device clean.
- Do not reach into the moving parts.
- Keep children away from the device.
- Keep away from flammable and explosive materials.
- Do not throw in fire – it will explode due to built-in battery.

Safety instructions

●Observe the safety instructions during use. ●Any modification or alteration of the product will affect the safety of the product. Caution risk of injury! ●All changes and repairs to the product or its accessories may only be carried out by the manufacturer or by persons expressly authorized by the manufacturer. ●Never open the product without authorization. ●Never carry out repairs yourself! ●Handle the product with care. It can be damaged by shaking or falling from a small height. ●Never immerse the product in water or other liquids. ●Technical changes and errors reserved.

Support

Service phone No. for technical support: **01805 012643**
(14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free Email: **support@technaxx.de**
The support hotline is available Mon-Fri from 9 am to 1 pm & 2 pm to 5 pm.

Cleaning and maintenance

●Clean the equipment regularly with a moist cloth. Do not use cleaning agents or solvents. ●Ensure that no water can seep into the plugs. The ingress of water into an electric device increases the risk of electric shock or damage of the device. ●Charge it every 2-3 months.

Made in China

Distributed by:
Technaxx Deutschland GmbH & Co. KG
Konrad-Zuse-Ring 16-18,
61137 Schöneck, Germany