

TECHNAXX® * User Manual

BINOCULAR TX-179

Before using the device the first time, please read the user manual carefully.

Service phone No. for technical support: 01805 012643 (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks).

Free Email: **support@technaxx.de**

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or by persons lacking in experience or knowledge, unless they are supervised or instructed on the use of this device by a person responsible for their safety. Children should be supervised to ensure they do not play with this device.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

Warranty 2 years

Enjoy your product * Share your experience and opinion on one of the well-known internet portals.

Features

- Magnification of 10 times
- Field of view 96m at 1000m
- Eyepeace adjustment

Adjusting the eyepiece distance:

The distance between the eyes differs between individuals. To achieve perfect interaction between your eyes and the eyepieces of your binoculars set the angle at the centre of the binoculars (1) so that you see a circular image.


Adjusting the focus:

Look through your binoculars with your right eye closed. Now adjust the image for your left eye using the centre wheel (6) until it is sharp and clear. Close your left eye and adjust the image for your right eye using the dioptre ring (3) until it too is sharp and clear.

Specifications

Magnification	10 x
Objective	Ø 50mm
Field of View	96m at 1000m
Weight/Dimensions	800g / 19.5x18x6 cm

Product overview

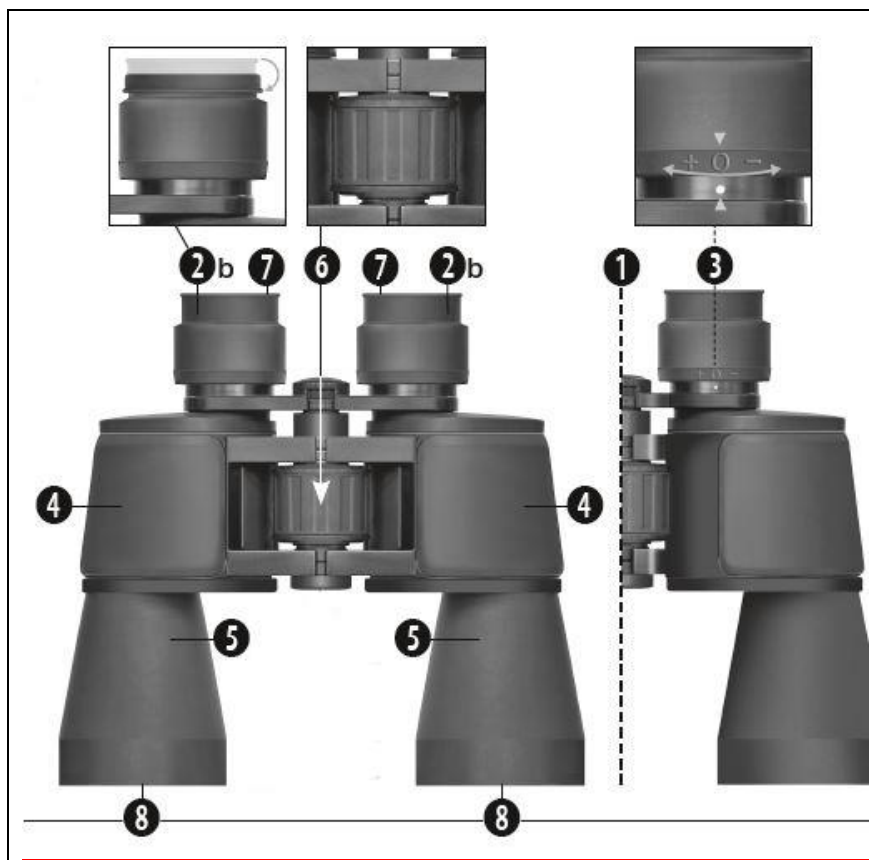

Care and maintenance

Clean the device only with a dry or slightly damp, lint-free cloth. Do not use abrasive cleaners to clean the device. This device is a high-precision optical instrument, so in order to avoid damage, please avoid the following practice: ●Use the device in ultra-high or ultra-low temperature.

●Keep it or use it in moist environment for long. ●Use it in rainfalls or in water. ●Deliver or use it in strongly shocking environment.

1	Centre axle	2	Rubber eyecups
3	Dioptre adjustment	4	Body
5	Lens tube	6	Central focussing wheel
7	Eyepeace	8	Objective lens
	Dust-cap (no picture)		Carry bag (no picture)

Hints

- The device is intended exclusively for private and not for commercial use.
- Only use this device as described in this user manual.
- Do not place any part of this device in water or any other liquid.
- Do not handle the device with wet hands.
- Prevent it comes into contact with hot surfaces.
- Keep it away from heat sources to avoid deformation of plastic parts.

Safety Instructions

- Never look through this device directly at or near the sun. There is a risk of BLINDING YOURSELF!
- Children should only use this device under supervision.
- Keep packaging materials (plastic bags, rubber bands, etc.) away from children. There is a risk of SUFFOCATION.
- Never subject the device - especially the lenses - to direct sunlight. Light ray concentration can cause fires and/or burns.
- Never take the device apart. Please consult your dealer if there are any defects. The dealer will contact our service centre and send the device in for repair if needed.
- Do not expose the device to high temperatures.
- The device is intended for private use only.
- Please heed the privacy of other people.
- Do not use this device to look into apartments, for example.

Disposal

Dispose of the packaging material/s as legally required.

Consult the local authority on the matter if necessary.

Distributor: Technaxx Deutschland GmbH & Co.KG, Konrad-Zuse-Ring 16-18 61137 Schöneck, Germany, www.Technaxx.de