

Lifenaxx® * User Manual

Mite Vacuum Cleaner Pro LX-070

with Aroma

Before using the appliance for the first time, please read the instructions for use and safety information carefully.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or by persons lacking in experience or knowledge, unless they are supervised or instructed on the use of this device by a person responsible for their safety. Children should be supervised to ensure they do not play with this device.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

Enjoy your product. * Share your experience and opinion on one of the well-known internet portals.

Specifications are subject to change without notice - please be sure to use the latest manual available on the manufacturer's website.

Hints

● Only use the product for purposes due to its intended function. ● Do not damage the product. Following cases may damage the product: Incorrect voltage, accidents (including liquid or moisture), misuse or abuse of the product, faulty or improper installation, mains supply problems including power spikes or lightning damage, infestation by insects, tampering or modification of the product by persons other than authorized service personnel, exposure to abnormally corrosive materials, insertion of foreign objects into the unit, used with accessories not preapproved. ● Refer to and heed all warnings and precautions in the user manual.

Safety instructions

- Do not use this product to suck detergent, inflammable liquids, glass shards, needles, cigarette ash, wet dust, sewage, matches and other substances and liquids.
- Do not use this product to absorb small particles such as cement, gypsum powder or larger objects such as toy paper balls, otherwise it may cause malfunctions such as mite vacuum cleaner blockage and motor burnout
- Do not use this product near flammable or explosive gases, high temperatures, or in hazardous environments.
- When using this product, pay attention to installing the filter element component.
- Regularly clean the mite vacuum cleaner filtration system.
- Do not pour or splash water or other liquids into the device to avoid causing a short circuit and burning out the device.
- When your mite vacuum needs cleaning or maintenance, turn it off and disconnect the power first.
- Do not use liquid cleaners or cleaning sprays. The product may only be cleaned with a damp cloth.
- Do not immerse this product in water or any other liquid to avoid damage to the product and personal injury.
- Do not use the product in direct sunlight or places where the temperature may exceed 50°C for a long time.
- This product is not a toy, and children are prohibited from playing with it as a toy.
- Keep fingers or any other body parts away from the rolling brush during use to prevent injury.
- Do not attempt to disassemble this product, as unauthorized disassembly will void the warranty.
- Never touch the product with wet or damp hands.

- The product can only be operated with the voltage described on the sticker.
- The cable is sheathed and insulates the current. Do not place any objects on the cable, as this could cause the protective function to be lost. Avoid placing excessive stress on the cable, especially at sockets and plugs.
- Do not insert any objects into the openings of the unit, as current flows in some places and contact may cause fire or electric shock.

Warnings

- Do not disassemble the product, it may result in short-circuit or damage.
- Do not modify, repair or remove without professional guidance.
- Do not use corrosive or volatile liquid for cleaning.
- Do not drop or shake the device, it may break internal circuit boards or mechanics.
- Keep the device away from little children.


Disclaimer

- In no event shall Technaxx Deutschland be liable for any direct, indirect punitive, incidental, special consequential damage, to property or life, improper storage, whatsoever arising out of or connected with the use or misuse of their products.

Features

- Convenience: 5-step mite removal in one step.
- Disinfection: Kills up to 99.9% of mites, bacteria, and viruses using shortwave UV-C light and heat.
- Strong Suction: Powerful enough to remove mites, skin flakes, and fine dust.
- Ideal for mattresses, pillows, bedding, sofas, upholstery, carpets, etc.
- Lightweight: 2.3 kg – easy to maneuver.
- Compact Design: Convenient to store and carry.

Product overview

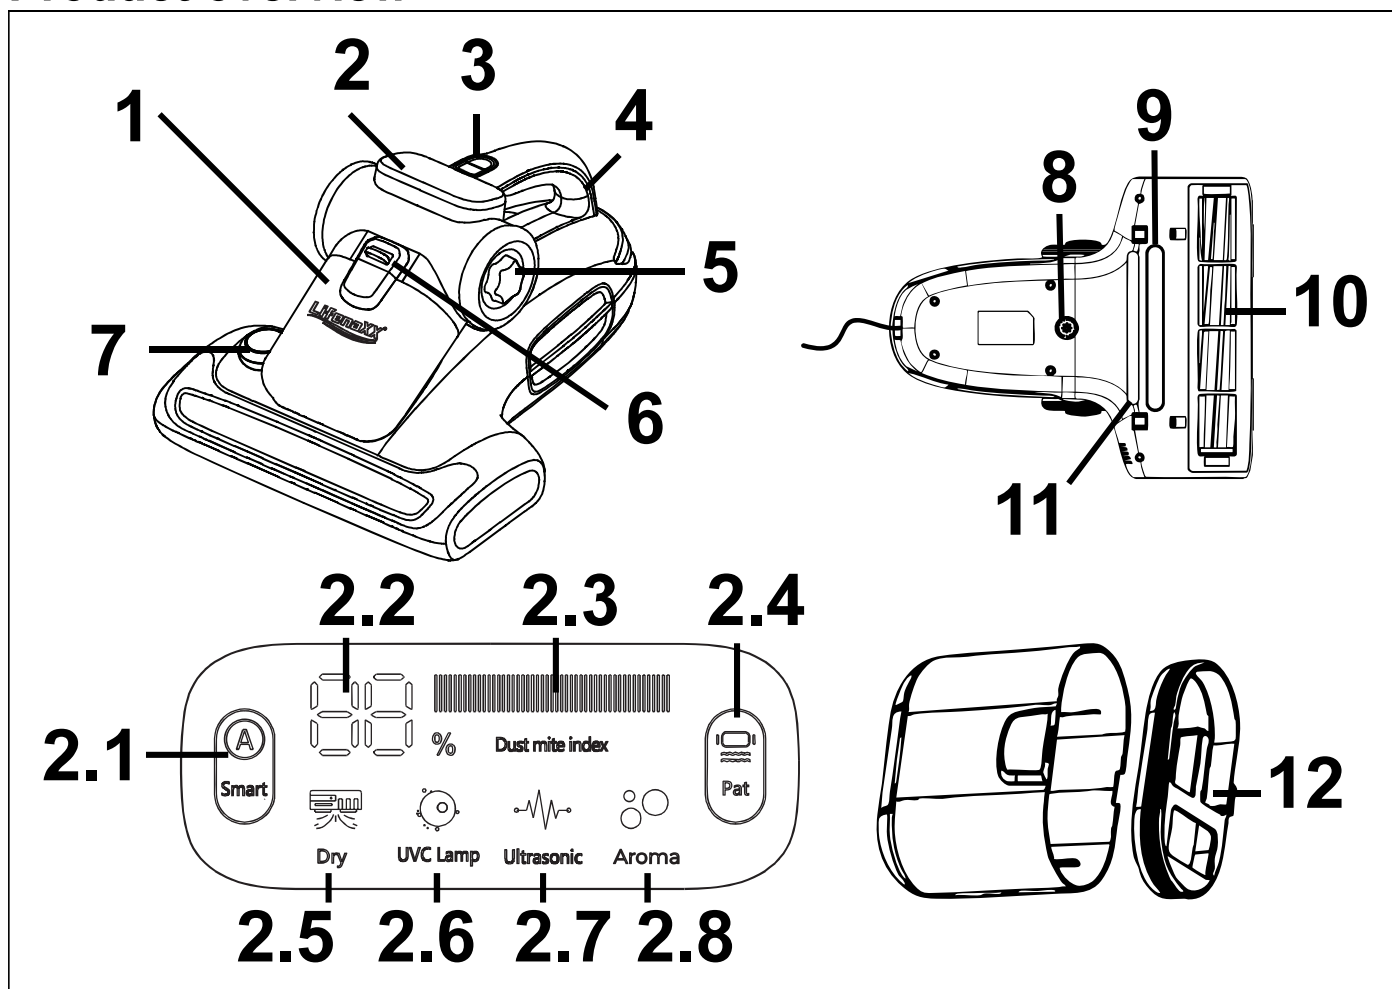

1	Dust collection cup	3	Power / mode
2	Display	4	Handle
2.1	Smart mode	5	Cyclone cup cover
2.2	Mite percentage indicator	6	Dust cup release button
2.3	Mite index	7	Aroma reservoir
2.4	Pat mode	8	Ultrasonic generator
2.5	Dry indicator for hot air	9	Hot air outlet
2.6	UV-C sterilization indicator	10	Rolling brush
2.7	Ultrasonic indicator	11	UV-C light
2.8	Aroma indicator	12	Dust cup lid

PRECAUTIONS

- Before connecting to the power source, make sure the power socket and power cable on the device are completely dry and properly installed.
- Do not extend the power cable with multiple sockets.
- Always ensure that the device is disconnected from the power supply if it is left unattended. Before each use, check that the appliance and cord are in good condition. Never use an appliance if the cord is damaged.
- Do not tilt the device more than 30°. Beyond this, the UV lamp may stop working.

- Never look directly at the UV lamp.
- Avoid body exposure to the UV light – it's harmful to human skin and eyes.
- Ensure the bottom of the machine is in full contact with the fabric surface for proper operation.
- For delicate materials (like silk or cashmere), cover with cotton fabric before cleaning.
- Make sure the fabric is smooth with no loose threads before use.
- Use Smart Mode when cleaning latex, plush, or soft materials to prevent brush stoppage.
- A slight odor from the air outlet is normal during operation.

How to use

1. Power Button: Press button (3) to turn on the device. The digital display will show the active function, and the mite removal indicator light will illuminate.


Note: All core functions (2.5 – 2.8) will automatically activate during operation and cannot be turned off individually.

2. Mode Switching: Briefly press button I/II (3) to toggle between modes. The device cycles between Smart Mode and Pat Mode, as indicated on the display (sections 2.1 and 2.4). Smart Mode: intelligent power adjustment; Pat Mode: powers continuous in max-state.

3. Usage: Place the device on the bed surface and move it back and forth as needed. Do not apply downward pressure. The indicator will display the current cleaning status.



4. Power Off: To turn off the device and enter standby mode, press the power button again.

5. Dismantling of dust collection cup: Push the dust cup release button and remove the dust cup. Remove the lid of the dust cup. When reassemble, align the bump on the lid with the hollow on the dust cup and close the lid tightly.

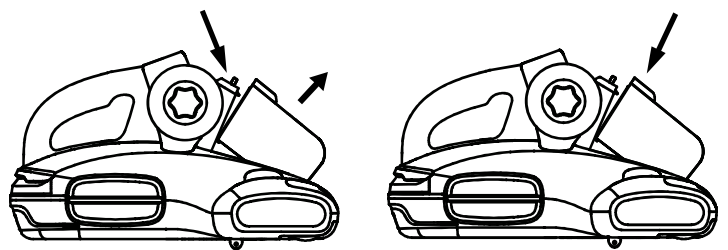

Cleaning and Maintenance

1. Turn off the device and unplug it before cleaning.
2. Remove the dust collection cup. Take out the filter from the cyclone cup and empty any debris into a trash bin. If needed, rinse the cup with clean water and allow it to dry completely before reassembling.
3. Remove the filter cloth from the cyclone cup chamber. Gently tap off any dust, then rinse it with clean water. Let it air dry completely. Do not use a brush, as this may damage the filter.
4. Ensure all filter components are fully dry before reinstalling them.
5. To clean the roller brush, slide the bottom plate locks like the picture shows to unlock the bottom plate.
6. Remove the bottom plate and roller brush and clean the roller brush. Re-attach the roller brush after it is completely dry.
7. Re-lock the roller brush plate to operate safely again.

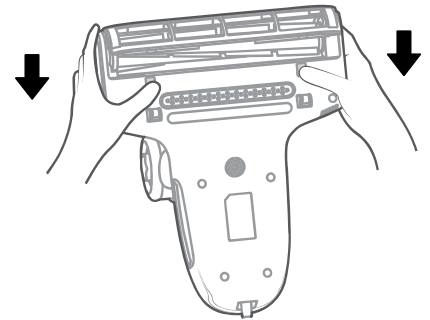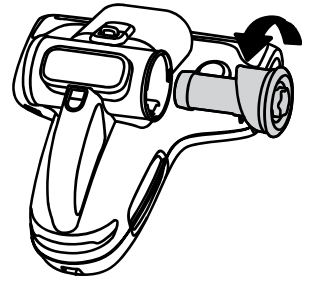


After cleaning, store the device in a dry, well-ventilated area, out of reach of children. Please redo after each usage of the device.

Aroma intensity

Select the aroma intensity by rotating the container to O / I / II.

- O - minimum aroma intensity
- I - slightly aroma intensity
- II - maximum aroma intensity

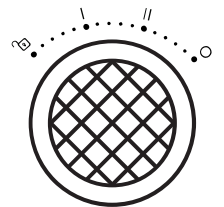

The Aroma tab can produce nice odor for approximately 40h of usage the device. After this time, the aroma tab should be replaced.

Aroma tab replacement

1. Turn off the machine and rotate the aroma container counterclockwise to remove it from the machine.
2. Rotate the lid of the aroma container counterclockwise to open it.
3. Place the aroma block into the container and close the lid tightly.

Common Faults and Analysis

Symptoms	Cause analysis	Resolvent
Unable to start	Low power	Replug and restart
	Start without pressing the ON/standby/Gear key	Press the on/standby/gear key again to start the device
The suction of the device becomes smaller	The dust collecting cup is full	Clean the dust collecting cup
	The filter is blocked by garbage	Clean the filter
	The suction port of the device is blocked	Clean the blockage at the suction port
The UV lamp does not work	The two rollers under the machine do not touch the surface of the object at the same time.	Place the machine on the object and ensure that both rollers are compressed
	The two rollers under the machine are stuck and can't move freely.	Clean the rollers to ensure that the two rollers can move up and down freely
The roller brush suddenly stops working	The roller brush is wrapped with foreign objects.	Take out the roller brush as required and clean it before using.
Abnormal dust mite digital display	The suction inlet is blocked with foreign objects.	Clean the suction inlet.
There is a burnt smell during use	The motor is overheated after long-term use.	Stop using the machine, clear the blockage, and pause for two hours before using it again.

Technical specifications

Rated power	700W
Suction power	15W (15000pa)
Power supply	220-240 V / 50-60 Hz
Power cable length	4.5 m
Dust collection capacity	500ml
Air flow rate	1,5 m ³ /min
Filter type	HEPA-Filter
Hot air	< 60 °C
UV Wavelength	285 nm
UV output	6.5 V
UV lamp service life	approx. 3,000h
Volume	<70 dB (quiet operation)
Material	ABS, Aluminum, Copper, PP, Steel
Weight & Dimensions	2.3kg / (L) 32.9 x (W) 27.2 x (H) 18.8cm
Package contents	Mite Vacuum Cleaner Pro LX-070, 2 Aroma capsules, user manual

Support

Service phone No. for technical support: **01805 012643** (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free Email: **support@technaxx.de**

The support hotline is available Mon-Fri from 9am to 1pm & 2pm to 5pm
In the event of anomalies and accidents, please contact: **gpsr@technaxx.de**

Declaration of Conformity



Technaxx Deutschland GmbH & Co. KG hereby declares that the equipment type LX-070 Prod. ID.:5348 is in compliance with Directive 2014/35/EU. The full text of the EU Declaration of Conformity is available at the following internet address: www.technaxx.de/reseller

Disposal



Disposal of the packaging. Sort packaging materials by type upon disposal.

Dispose of cardboard and paperboard in the waste paper. Foils should be submitted for recyclables collection.



Disposing of old equipment (Applies in the European Union and other European countries with separate collection (collection of recyclable materials) Old equipment must not be disposed of with household waste! Every consumer is required by law to dispose of old devices that can no longer be used separately from household waste, e.g. at a collection point in his or her municipality or district. This ensures that the old devices are properly recycled and that negative effects on the environment are avoided. For this reason, electrical devices are marked with the symbol shown here.

Made in China

Distributed by:
Technaxx Deutschland GmbH & Co. KG
Konrad-Zuse-Ring 16-18,
61137 Schöneck, Germany

Mite Vacuum Cleaner Pro LX-070