

Technaxx[®] * User Manual

Anti-Virus Disinfection Stick TX-151

The Declaration of Conformity for this device is under the Internet link:
www.technaxx.de/ (in bottom bar “Konformitätserklärung”). Before using the device,
the first time, please read the user manual carefully. Service phone No. for technical
support: 01805 013643 (14 cent/minute from German fixed-line and 42 cent/minute
from mobile networks).

Free Email: **support@technaxx.de**

Keep this user manual for future reference or product sharing carefully. Do the same
with the original accessories for this product. In case of warranty, please contact the
dealer or the store where you bought this product.

Warranty 2 years


*Enjoy your product. *Share your experience and opinion on one of
the well-known internet portals.*

***WARNING! Do not expose eyes or skin directly
to UV-C light. Keep this device out of the reach
of children at all times.***

Features

- UV-C light with up to 99.9% sterilization efficiency
- Kills common bacteria, fungicides & viruses
- For home use and take away
- Chemical free
- Odourless

Product details

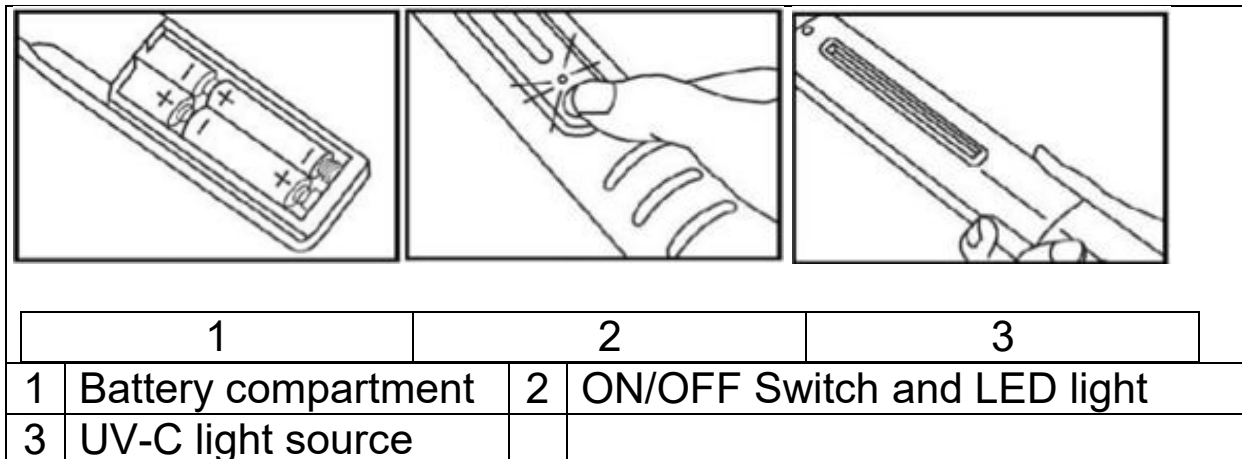

Power on/off

Open the battery cover, insert 4x AA Batteries into the compartment (make sure the polarity is correct). The Technaxx Anti-Virus Disinfection Stick TX-151 is ready to use now.

Make sure the UV-C light does not show in your direction. Press the ON/OFF switch (sound and green LED light) will indicate the item is working. Press ON/OFF switch again to switch off the item.

Disinfection

Hold the Technaxx Anti-Virus Disinfection Stick TX-151 approximately 2-5cm from the surface and gradually move the Stick over the entire area. Allow the light to stay on each area for 8-15 seconds to ensure optimum result.

Personal Hygiene items (hair brushes, toothbrushes, jewellery, razors) Place items on a counter, away from water. Hold the Technaxx Anti-Virus Disinfection Stick TX-151 approximately 2-5cm away from each object. Expose each object to the UV-C light for 8-20 seconds.

Kitchen Utensils

Place items on a counter, away from water. Hold the Technaxx Anti-Virus Disinfection Stick TX-151 approximately 2-5cm away from each object. Expose each object to the UV-C light for 8-15 seconds.

Hold the Technaxx Anti-Virus Disinfection Stick TX-151 2-5cm above the surface. Expose each object to the UV-C light for 8-15 seconds.

Other uses (Computer keyboards, telephone handsets, baby toys, etc.). Hold the Technaxx Anti-Virus Disinfection Stick TX-151 2-5cm above the surface. Expose the items to the UV-C light for 10-20 seconds.

Technical specifications


Input voltage	4 x AA Batterie (not included)
Power	3W
Wavelengths UV-light	253.7nm
Material	ABS
Weight / dimension	136g / (L)265 x (W)40 x (H)38mm
Package content	Technaxx TX-151, user manual

Troubleshooting

- If the disinfection doesn't start, please be sure, you attached the batteries in the correct way.
- Be sure the Batteries are not empty

Warnings

- Do not remove any cover to avoid the risk of an electric shock or other damages.
- Do not attempt to disassemble the device, it may result in short-circuit or even damage.
- Do not drop or shake the device, it may break internal circuit boards or mechanics.
- Keep the device in dry and ventilated environment.
- Avoid high humidity and high temperature.
- Do not expose this device to rain or moisture to reduce the risk of fire or electrical shock. The device should not be exposed to dripping or splashing.
- Keep the device away from little children.

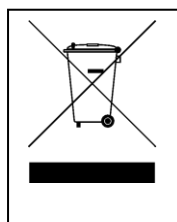

Hints for Environment Protection: Packages materials are raw materials and can be recycled. Do not disposal old devices or batteries into the domestic waste. **Cleaning:** Protect the device from contamination and pollution. Avoid using rough, coarse-grained materials or solvents/aggressive cleaner. Wipe the cleaned device accurately. **Distributor:** Technaxx Deutschland GmbH & Co.KG, Kruppstr. 105, 60388 Frankfurt a.M., Germany