


Technaxx® user manual

Antifreeze Coolant Tester TX-415

Before using the appliance for the first time, please read the instructions for use and safety information carefully.

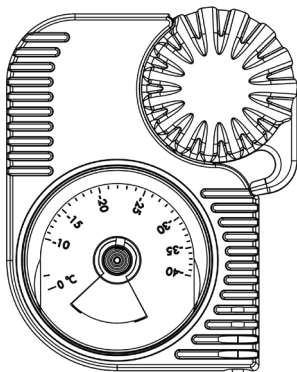

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

Features

- Fast and accurate coolant freezing point testing
- Suitable for ethylene glycol-based coolants
- Precision twin-scale measuring system
- 360° rotatable display
- Compact and easy to store

Disposal




Disposal of the packaging. Sort packaging materials by type upon disposal. Dispose of cardboard and paperboard in the waste paper. Foils should be submitted for recyclables collection.

Dispose of coolant residues according to local environmental regulations. Do not pour coolant into drains or soil.


Technical specifications

Compatible fluids	Ethylene glycol coolant
Measuring range	0 to -40 °C
Accuracy	±3 °C
Hose length	20 cm
Material	Plastic, Elastomer
Working temperature	-20 to 50 °C
Storage temperature	10 to 30 °C
Weight / Dimension	120 g / 13.4 x 10.7 x 4.1 cm
Package content	TX-415, user manual

Product Overview

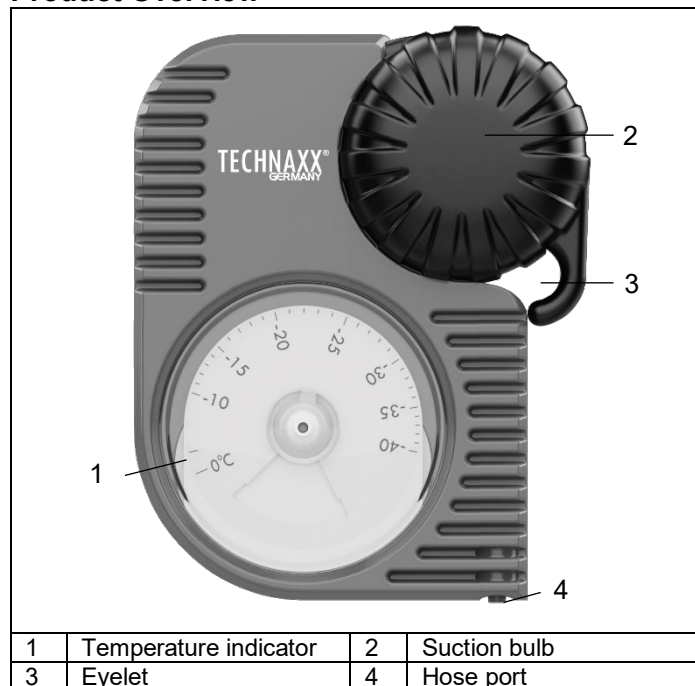

Checking Antifreeze Concentration with the Antifreeze Tester

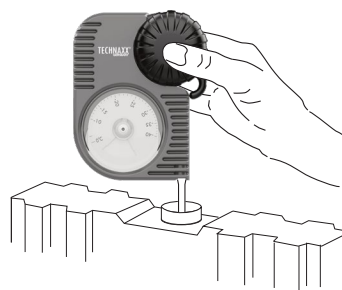


The antifreeze tester provides a quick and easy method for checking the concentration of ethylene glycol-based antifreeze in the engine coolant.

Ensure the coolant temperature is below **80°C** before opening the radiator.

Fill the tester's measuring chamber completely with coolant by repeatedly squeezing and releasing the suction bulb. Read the antifreeze protection temperature indicated on the tester (see illustration).

Warning: The cooling system is pressurized. Open the radiator cap carefully and release pressure slowly. Hot coolant and steam may escape under pressure, causing severe burns or scalding.

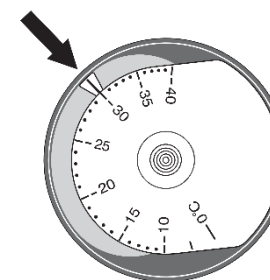

The antifreeze concentration provides freeze protection down to approximately **-30°C**.

Safety instructions

- Use only with ethylene glycol-based coolant fluids.
- Do not use with flammable or corrosive liquids.
- Keep out of reach of children.
- Avoid contact with eyes and skin. Wear protective gloves if necessary.
- Clean the tester thoroughly after each use.
- Store in a dry and frost-free environment.

Caution

Ethylene glycol-based antifreeze is hazardous to health. Avoid direct contact and handle with care.

Support

Service phone No. for technical support: **01805 012643**
(14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free Email: **support@technaxx.de**
The support hotline is available Mon-Fri from 9 am to 1 pm & 2 pm to 5 pm.

Cleaning and maintenance

- Clean the equipment regularly with a moist cloth. Do not use cleaning agents or solvents.
- Do not expose the tester to direct sunlight for extended periods.
- Store at moderate temperatures.
- If the tester is not used for an extended period, rinse it thoroughly with clean water before storage.
- If the measuring mechanism becomes stuck, restore normal operation by filling and emptying the tester several times.

Made in China

Distributed by:
Technaxx Deutschland GmbH & Co. KG
Konrad-Zuse-Ring 16-18,
61137 Schöneck, Germany