

Technaxx® user manual

USB-C Endoscope Camera TX-386

with light


Before using the appliance for the first time, please read the instructions for use and safety information carefully.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.


Features


- High-definition image capture in HD
- 8 bright adjustable LED
- 5-meter semi rigid cable
- Adapter tools
- Plug and play

Declaration of Conformity

 This device complies with EU Directive 2014/30/EU and can be requested from the following address: www.technaxx.de (in the lower bar "Declaration of Conformity").

Disposal


 Disposal of the packaging. Sort packaging materials by type upon disposal. Dispose of cardboard and paperboard in the wastepaper. Foils should be submitted for recyclables collection.

 Disposing of old equipment - Applies in the European Union and other European countries with separate collections (collection of recyclable materials). Old equipment must not be disposed of with household waste! Every consumer is required by law to dispose of old devices that can no longer be used separately from household waste, e.g. at a collection point in his or her municipality or district. This ensures that the old devices are properly recycled and that negative effects on the environment are avoided. For this reason, electrical devices are marked with the symbol shown here.

Technical specifications

Resolution	1 MP / 25 fps
File format	MP4 / JPG
View angle	70°
Focus range	2 cm – 10 cm
Plug type	USB-C
Cable length	5 m
LED	Dimmable 8 pcs
Protection class	IP 67
Compatibility	iOS 9.0 or above / Android 4.2 or above
Working temperature	0°C – 45°C
Weight / Dimension	180 g / 500 x 2 x 1 cm
Package content	Endoscope camera TX-386, adapter (magnet, hook, mirror, protection), user manual


Product Overview

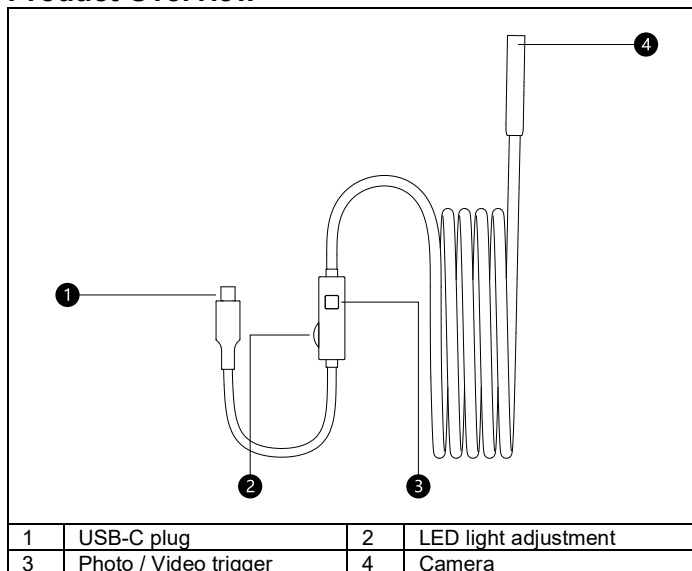

APP

Please go to Google Play Store or Apple App Store to download the app:

Usee Plus

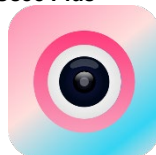

or use this QR code for direct download:



Usage

Open the app and plug in the USB-C plug (1) into your device USB-C port. The app will recognize the connection and will show an image immediately. Use the trigger (3) at the endoscope to capture an image. All images will be saved to the app. Videos can be captured by switching the capture mode to video inside the app.



App
Settings



Rotate
screen



Set Black
White view




Compare
Images



Picture
edit

To set a brightness, use the LED light adjustment (2). **Note:** your device should have more than 20% battery power. Otherwise, the device will not work properly.

Accessories

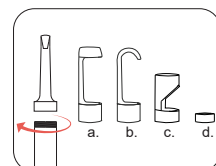

a.) Magnet

b.) Hook

c.) Mirror

d.) Protection

Mount the accessories at the lens thread by turning it clockwise.

CAUTION

- Use only compatible USB-C ports on smartphones or tablets that meet USB standards. The device must support the USB OTG function.
- Do not connect to power adapter. This product is intended only for battery-powered devices.
- Do not expose connectors to water or other liquids. Moisture may cause electric shock or short circuits.
- Disconnect immediately if the cable, connector, or camera becomes hot, emits smoke, or has a strange odor.
- Avoid pulling the cable when disconnecting; hold the connector firmly.
- Keep children away from the device.
- Not intended for medical examinations on humans or animals.

Safety instructions

- Observe the safety instructions during use.
- Do not bend or twist the cable excessively; this may damage the internal wiring.
- Ensure connectors are fully inserted before use.
- Any modification or alteration of the product will affect the safety of the product. Caution risk of injury!
- All changes and repairs to the product or its accessories may only be carried out by the manufacturer or by persons expressly authorized by the manufacturer.
- Never open the product without authorization.
- Never carry out repairs yourself!
- Handle the product with care. It can be damaged by shaking or falling from a small height.
- Never immerse the product in water or other liquids. Only the lens part has IP67.
- Technical changes and errors reserved.

Support

Service phone No. for technical support: **01805 012643**

(14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free Email: support@technaxx.de

The support hotline is available Mon-Fri from 9 am to 1 pm & 2 pm to 5 pm.

Cleaning and maintenance

- Clean the equipment regularly with a moist cloth. Do not use cleaning agents or solvents.
- Ensure that no water can seep into the plugs. The ingress of water into an electric device increases the risk of electric shock or damage of the device.

APP disclaimer

This camera accessory uses a third-party app that is not operated by Technaxx. The app may request access to your gallery to save photos or videos locally. Technaxx does not collect personal data and is not responsible for the content or functionality of the third-party app, except where liability cannot be excluded by law.

Made in China

Distributed by:

Technaxx Deutschland GmbH & Co. KG
Konrad-Zuse-Ring 16-18,
61137 Schöneck, Germany